

[Manuals.plus](#) /

> [LE.VOLIFE](#) /

> LE.VOLIFE Electric Nail Clipper (Model: B0FHHKB5Z4) Instruction Manual

## LE.VOLIFE B0FHHKB5Z4

# LE.VOLIFE Electric Nail Clipper (Model: B0FHHKB5Z4)

## INSTRUCTION MANUAL

### 1. Introduction

---

Thank you for choosing the LE.VOLIFE Electric Nail Clipper. This automatic nail file is designed for safe, efficient, and comfortable nail trimming for adults, seniors, and children over 10 years old. Its ergonomic design and safety features ensure a pleasant grooming experience.

### 2. Product Overview and Package Contents

---

Your LE.VOLIFE Electric Nail Clipper package includes the main device, two replacement blade heads (one pre-installed), a Type-C charging cable, and a cleaning brush.



Image: The LE.VOLIFE Electric Nail Clipper shown with its accessories, including the main unit, a blue replacement head, a USB Type-C charging cable, and a cleaning brush.

Video: This video demonstrates the unboxing of the Electric Nail Clipper, showcasing the main device, instruction manual, replacement heads, charging cable, and cleaning brush.

### 3. Setup

Before first use, ensure the device is fully charged. Connect the provided Type-C charging cable to the charging port on the device and a suitable USB power source. A full charge takes approximately 2 hours and provides up to a month of use.



Image: A close-up view of the electric nail clipper highlighting its Type-C fast charging port located on the side of the device.

#### 4. Operating Instructions

To operate the electric nail clipper, follow these steps:

1. **Turn On:** Gently press and hold the power button located on the side of the device to turn it on.
2. **Select Speed:** The device features two speed modes. Short press the power button to switch between low and high speeds.
3. **Trim Nails:** Ensure the concave surface of the blade head faces downwards. Place your fingernail or toenail into the trimming opening. Move the clipper gently left and right while pressing firmly on your nail to trim. The blades are hidden behind curved grooves for safety.
4. **Turn Off:** Press the power button a third time to turn off the device.

# Electric Nail File and Toenail Clippers

ONLY 40DB WORKING NOISE

**1** Low Speed

**2** High Speed



Electric nail clipper



Toe nail clippers

Image: The electric nail clipper displaying its two speed settings (Low Speed and High Speed) and indicating a low working noise of 40dB.

# Toenail Clippers for Thick Toenails

New upgraded head design, can help you quickly trimmer your nails, safe and easy to use



Image: A person using the electric nail clipper to trim their toenails, demonstrating the device's ease of use for thick toenails.

Video: This video demonstrates the two-speed functionality of the electric nail clipper, highlighting its suitability for the elderly, adults, and children.

## 5. Replacing Blade Heads

The electric nail clipper comes with replacement blade heads suitable for different nail thicknesses. To replace a blade head:

1. Ensure the device is turned off.
2. Long press the button on the side of the device to release and pull out the current blade head.
3. Align the new blade head (1.4mm for standard adult use, 2.2mm for thick nails) with the device and push it firmly into place until it clicks.

## Electric Nail Clipper & Toenail Grinder



2 IN 1



Low noise



Suitable for People  
over 8 Years Old



Two Speeds



6-Hours  
Long Battery



Pedicure Tools



Image: This image displays two different replacement blade heads for the electric nail clipper, indicating their suitability for varying nail thicknesses.

Video: This video demonstrates the automatic storage of nail clippings and the process of quickly replacing the blade head on the electric nail clipper.

### 6. Maintenance and Cleaning

The electric nail clipper features a built-in chip storage box that automatically collects nail clippings, preventing them from scattering. To clean the device:

1. Ensure the device is turned off.
2. Long press the button on the side to release the blade head and open the debris collection compartment.
3. Carefully dump the collected nail clippings.
4. Use the provided cleaning brush to remove any remaining debris from the blade area and compartment.
5. Reattach the blade head securely.

## Upgraded Desing for Better Fafety



Image: A four-step visual guide on how to use the nail clipper, including opening the magnetic top cover, pressing buttons, inserting the nail for trimming, and emptying the nail clippings.

# Electric Nail Trimmer and Toenail Clippers



*Nail cutter*



*Toe nail clippers*

Image: A detailed view of the electric nail clipper's internal compartment, illustrating the automatic storage of nail scraps after trimming.

## 7. Safety Precautions

- The blades are safely hidden behind curved grooves to prevent accidental cuts during use.
- A magnetic cover is included to protect the blade and prevent unintended activation when not in use.
- The device operates with a low noise level of 40 decibels, making it suitable for use around sleeping children or individuals sensitive to loud noises.
- This product is not intended for use by children under 10 years old without strict adult supervision.

# Electric Nail Clipper are Suitable for People over 8 Years Old



Toenail



Cat



Adult



Seniors



Image: A comparison highlighting the upgraded safety design of the electric nail clipper with its hidden blades versus traditional nail clippers.



Image: An illustration emphasizing the high safety and quiet design of the electric nail clipper, showing a sleeping cat undisturbed by its 40dB working noise.

## 8. Specifications

<b>Product Dimensions</b>	2.36 x 0.59 x 3.54 inches; 3.2 ounces
<b>Batteries</b>	1 Lithium Polymer batteries required (included)
<b>Brand</b>	LE.VOLIFE
<b>Material</b>	Carbon Steel
<b>Blade Edge</b>	Concave
<b>Model Number</b>	B0FHFKB5Z4

## 9. Troubleshooting

- **Ineffective Trimming:** If the device is not trimming effectively, ensure the nail is properly positioned within the trimming opening and try both speed settings. For very thick or hard nails, multiple passes may be required.
- **Rough Finish:** For a smoother finish, ensure the nail is moved slowly and consistently through the trimming opening. Additional passes at a lower speed may help refine the nail edge.
- **Device Not Turning On:** Ensure the device is fully charged. If the battery is low, the indicator light may flash or not illuminate.

## 10. Warranty and Support

LE.VOLIFE strives to provide high-quality products and excellent customer experience. If you have any questions or require assistance with your electric nail clipper, please feel free to contact our 24/7 customer service. While specific warranty details are not provided in this manual, customer satisfaction is a priority.

