

[Manuals.plus](#) /

› [Newsoul](#) /

› Newsoul Portable Monitor 15.6 Inch 1080P User Manual

Newsoul M15714

Newsoul Portable Monitor 15.6 Inch 1080P User Manual

Model: M15714

1. INTRODUCTION

Thank you for choosing the Newsoul Portable Monitor 15.6 Inch 1080P. This manual provides essential information for setting up, operating, and maintaining your monitor. Please read it thoroughly before use to ensure optimal performance and longevity of your device.



Image 1.1: Newsoul 15.6 Inch Portable Monitor. This image displays the monitor from an angled perspective, highlighting its slim design and the 15.6-inch screen with a vibrant display.

The Newsoul Portable Monitor is designed for versatility, offering a lightweight and ultra-thin solution for extended screen space. It features a 15.6-inch Full HD (1920x1080) display with 125% sRGB color gamut, HDR support, and 350 nits brightness, providing a clear and vibrant visual experience. Its built-in adjustable stand and VESA compatibility allow for flexible placement, while USB-C and HDMI connectivity ensure broad compatibility with various devices.

2. SAFETY INFORMATION

- Do not expose the monitor to rain, moisture, or extreme temperatures.
- Avoid placing the monitor near heat sources or in direct sunlight.
- Use only the provided power adapter and cables to prevent damage.
- Do not attempt to disassemble or repair the monitor yourself. Refer to qualified service personnel.
- Keep the monitor away from strong magnetic fields.
- Handle the screen with care to avoid scratches or impact damage.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 15.6" Portable Monitor with Built-in Stand
- USB-C Cable (x2)
- Mini HDMI to HDMI Cable (x1)
- Power Adapter (8W)
- User Manual (this document)

Package Includes

1. 15.6" Portable Monitor Built-in Stand*1
2. Mini HDMI to HDMI Cable*1
3. Type-C to Type-C Cable *1
4. Type-C to USB-A Cable *1
5. 8W Power Adapter*1
6. Manual*1

For best performance: Original cable only.



Image 3.1: Package Contents. This image illustrates the monitor and its included accessories: two USB-C cables, one Mini HDMI to HDMI cable, and a power adapter, neatly arranged.

4. PRODUCT OVERVIEW

Familiarize yourself with the monitor's ports and controls:

WIDE COMPATIBLE PLUG AND PLAY

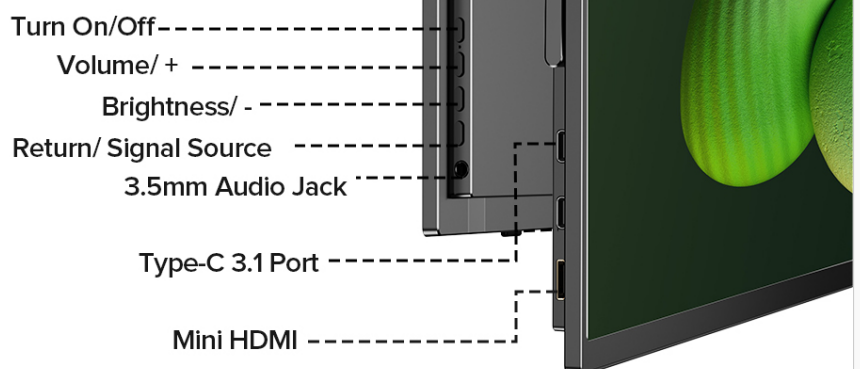 


Image 4.1: Monitor Ports and Controls. This diagram shows the side view of the monitor, labeling the power on/off button, volume/brightness controls, return/signal source button, 3.5mm audio jack, two Type-C 3.1 ports, and a Mini HDMI port.

- **Power On/Off Button:** Press and hold to power on/off.
- **Volume/Brightness Control:** Used to adjust audio volume and screen brightness.
- **Return/Signal Source Button:** Navigates back in menus or switches input sources.
- **3.5mm Audio Jack:** For connecting headphones or external speakers.

 
- **Type-C 3.1 Ports (x2):** For power input and video/audio signal transmission.
- **Mini HDMI Port:** For video/audio signal input from HDMI-compatible devices.

5. SETUP

5.1 Connecting to Devices

The monitor supports both USB-C and HDMI connections for video and audio input.

Plug And Play, Support Multiple Devices



Mini HDMI



USB-C



S-witch



X-box



PS-3/4/5



Mobile



Laptop

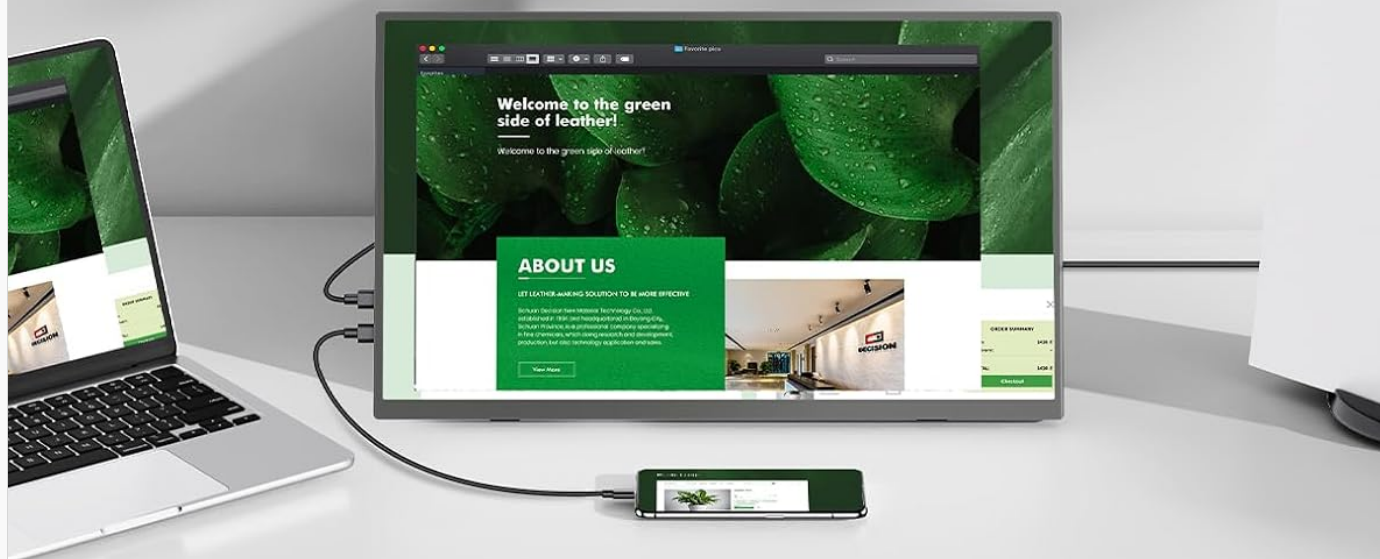 


Image 5.1: Plug and Play Device Compatibility. This image shows the monitor connected to a laptop and a smartphone, illustrating its compatibility with various devices including S-switch, X-box, PS-3/4/5, mobile phones, and laptops via Mini HDMI and USB-C.

- **USB-C Connection:** For devices with a full-featured USB-C port (supporting DisplayPort Alternate Mode and power delivery). Connect one end of the USB-C cable to your device's USB-C port and the other end to one of the monitor's Type-C 3.1 ports. If your device cannot provide sufficient power, connect the included power adapter to the other Type-C port on the monitor.
- **HDMI Connection:** For devices with an HDMI output. Connect one end of the Mini HDMI to HDMI cable to the

monitor's Mini HDMI port and the other end to your device's HDMI port. For power, connect the included power adapter to one of the monitor's Type-C 3.1 ports.

5.2 Adjusting the Stand

The monitor features a built-in foldable stand that allows for 0-180° adjustment, supporting both horizontal and vertical orientations.

Built-in Stable Adjustable Stand

0-180° adjustable stable stand for comfortable vision
Meet all your usage needs



Duplicated
Mode



Extended
Mode



Second Screen
Mode



Image 5.2: Adjustable Stand and VESA Design. This image demonstrates the monitor's built-in adjustable stand, showing it in various viewing angles and modes (Duplicated, Extended, Second Screen, Portrait, Landscape). It also highlights VESA mounting compatibility.

- Gently unfold the stand from the back of the monitor.
- Adjust the stand to your desired viewing angle (0-180°).
- Ensure the stand is stable on a flat surface before use.

5.3 VESA Mounting

The monitor is VESA compatible (75x75 mm, M4x4 mm screws) for alternative mounting solutions.

VESA Mountable

Improve Space Utilization And Enhance Visual Comfort



VESA Size: 75x75 mm



Screw Size: M4x4 mm

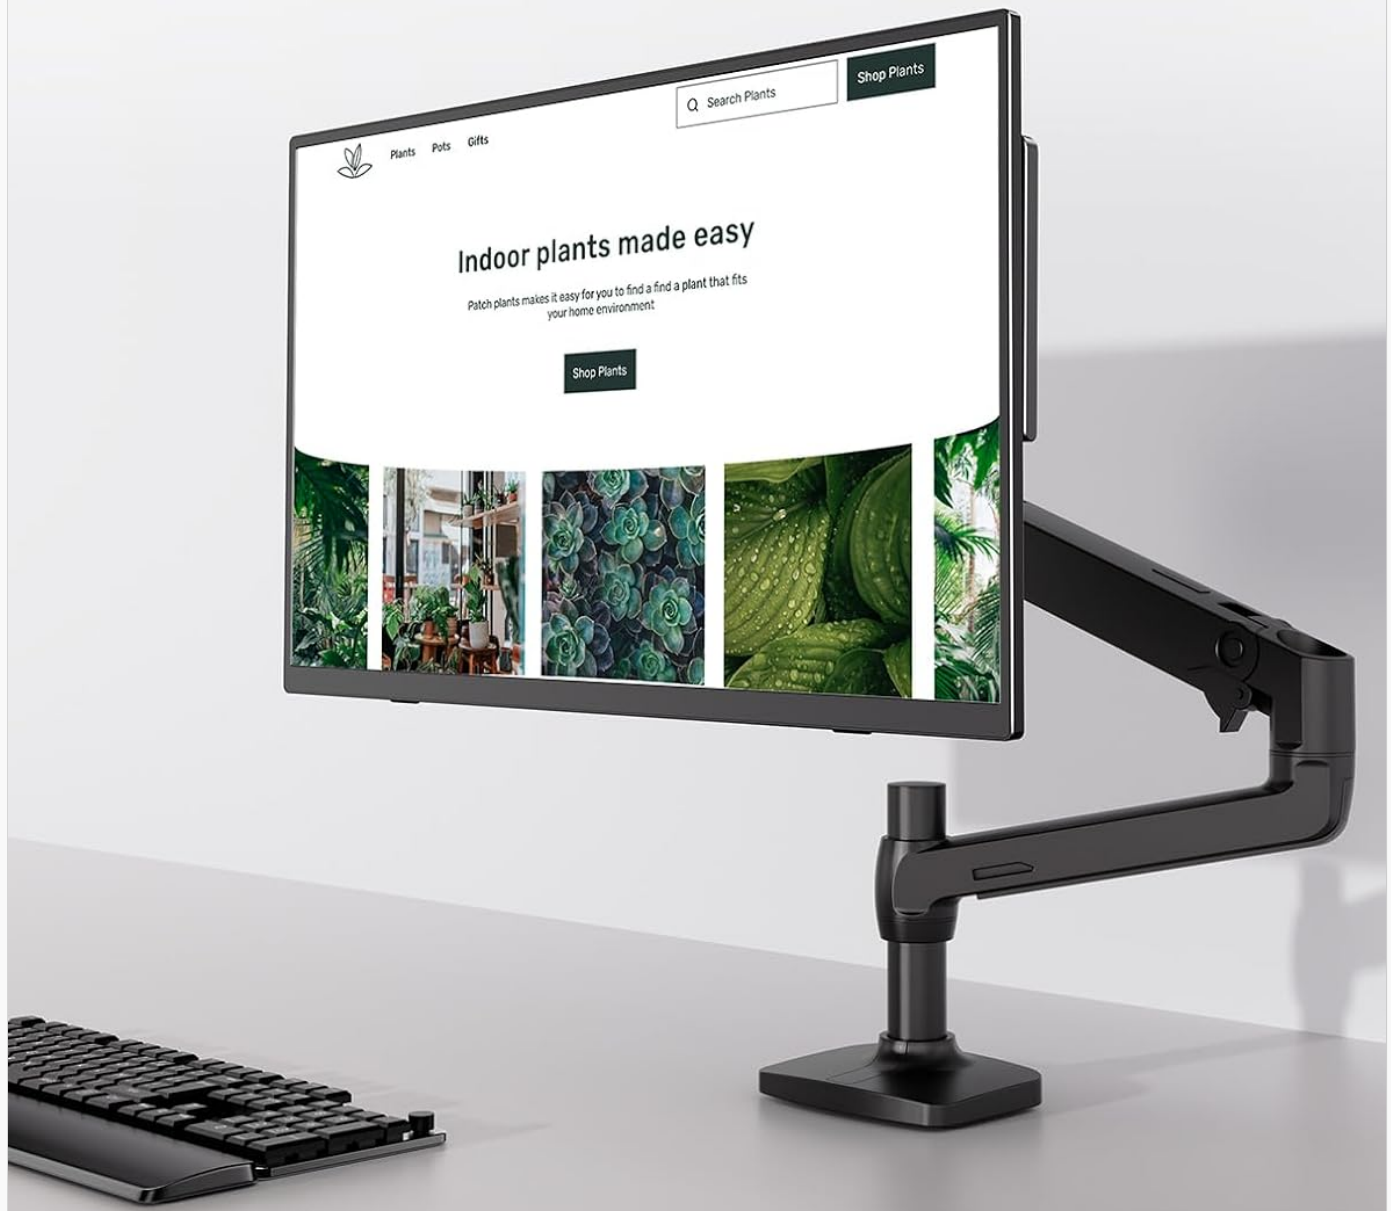 


Image 5.3: VESA Mountable Monitor. This image shows the monitor attached to a VESA desk mount, demonstrating its ability to be mounted for improved space utilization and ergonomic positioning.

- Carefully remove the built-in stand if necessary (refer to specific instructions for stand removal if not integrated).
- Attach the monitor to a VESA-compatible mount using M4x4 mm screws.
- Ensure the mount is securely fastened and can support the monitor's weight.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- To power on, press and hold the Power On/Off button until the screen illuminates.
- To power off, press and hold the Power On/Off button until the screen turns off.

6.2 On-Screen Display (OSD) Menu

The OSD menu allows you to adjust various display settings. Use the control buttons on the side of the monitor to navigate.

- **Accessing the Menu:** Press the menu button (often combined with volume/brightness control) to open the OSD menu.
- **Navigation:** Use the volume/brightness control to scroll through options. Press the menu button again to select an option.
- **Exiting:** Use the Return button to go back or exit the menu.

6.3 Adjusting Settings

- **Brightness:** Adjust the screen's luminance for comfortable viewing.
- **Contrast:** Modify the difference between the brightest and darkest areas of the screen.
- **Color Settings:** Adjust color temperature, hue, and saturation. The monitor features 125% sRGB for vivid colors.
- **HDR Mode:** Enable or disable High Dynamic Range for enhanced visual detail.
- **Volume:** Control the output level of the built-in speakers or connected headphones.
- **Input Source:** Manually select between USB-C and HDMI input sources.

EFFORTLESS HORIZONTAL & VERTICAL PLACEMENT

Horizontal & vertical placement freely, choose your usage method easily to enhance efficiency and experience

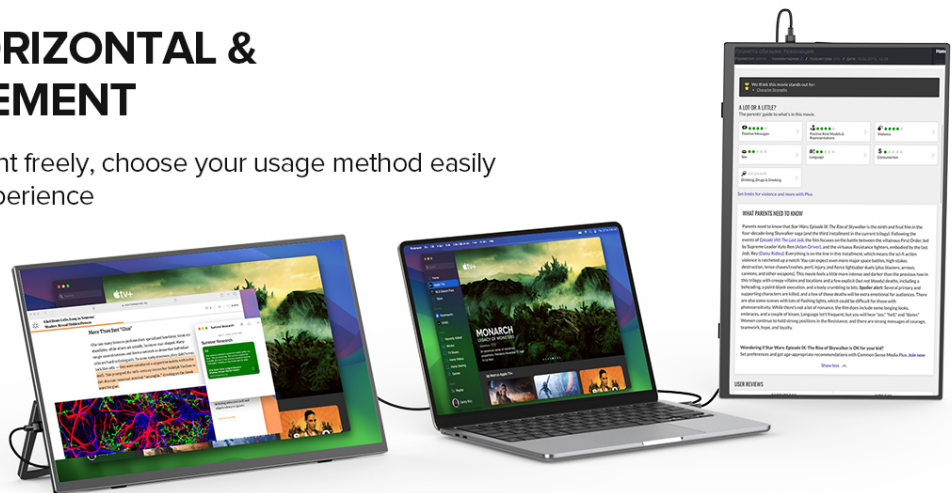 


Image 6.1: Horizontal and Vertical Placement. This image shows the monitor being used in both horizontal (landscape) and vertical (portrait) orientations, demonstrating its flexible display modes for various tasks.

7. MAINTENANCE

7.1 Cleaning the Monitor

- Always power off and unplug the monitor before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a non-abrasive screen cleaner.

- Do not spray cleaner directly onto the screen.
- Avoid using harsh chemicals, alcohol, or abrasive materials.

7.2 Storage

- When not in use for extended periods, store the monitor in a cool, dry place.
- Protect the screen from dust and scratches, ideally using a protective sleeve or the original packaging.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No display/"No Signal"	Incorrect input source selected; Loose cable connection; Insufficient power.	Ensure the correct input source is selected in the OSD menu. Check all cable connections (USB-C, HDMI) are secure. Connect the power adapter if using HDMI or if the USB-C device cannot supply enough power.
Screen flickering	Faulty cable; Interference; Low refresh rate.	Try a different cable. Ensure no strong electromagnetic interference sources are nearby. Check display settings on your connected device for refresh rate.
No sound	Volume too low/muted; Incorrect audio output selected on device.	Increase monitor volume via OSD. Check audio output settings on your connected device to ensure it's sending audio to the monitor.
Monitor does not power on	No power; Faulty power adapter/cable.	Ensure the power adapter is securely connected to both the monitor and a working power outlet. Try a different power outlet or cable if available.
Image is blurry or distorted	Incorrect resolution; Cable issue.	Set the display resolution on your connected device to 1920x1080. Ensure cables are not damaged.

9. SPECIFICATIONS

Feature	Specification
Model Number	M15714
Screen Size	15.6 Inches
Resolution	1920 x 1080 Pixels (FHD 1080p)
Aspect Ratio	16:9
Image Brightness	350 Candela (nits)
Color Gamut	125% sRGB
Contrast Ratio	1500:1
Screen Surface	Matte
Panel Type	IPS
Product Dimensions	0.23 x 13.9 x 8.2 inches

Feature	Specification
Item Weight	1.4 pounds
Connectivity	2x USB-C 3.1 (Full-featured), 1x Mini HDMI, 1x 3.5mm Audio Jack
VESA Compatibility	75x75 mm (M4x4 mm screws)
Built-in Speakers	Dual 8Ω speakers

10. WARRANTY AND SUPPORT

Newsoul products are designed for reliability and performance. This product is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact Newsoul customer support.

If you encounter any issues or have questions regarding your Newsoul Portable Monitor, please contact our customer support team through the retailer's platform or the official Newsoul website. Please have your model number (M15714) and purchase information ready when contacting support.

© 2025 Newsoul. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FHHQZ3MG>

More documents and user manuals: <https://manuals.plus/>