

[Manuals.plus](#) /

› [Reoslar](#) /

› Reoslar Mini Karaoke Machine RE-01 User Manual

Reoslar RE-01

Reoslar Mini Karaoke Machine RE-01 User Manual

Model: RE-01

1. INTRODUCTION

Thank you for choosing the Reoslar Mini Karaoke Machine. This portable system is designed to provide entertainment with its Hi-Fi sound, wireless microphones, and dynamic LED lighting. Please read this manual thoroughly before use to ensure proper operation and to maximize your enjoyment of the product.

What's in the Box:

- 1 x Bluetooth Speaker
- 2 x Wireless Microphones
- 1 x Charging Cable
- 1 x User Manual



Image 1.1: Reoslar Mini Karaoke Machine components.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following:

- Keep the device away from water and excessive moisture.
- Do not expose to extreme temperatures.
- Use only the provided charging cable.
- Keep out of reach of small children to prevent choking hazards from small parts.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

3. SETUP

3.1 Charging the Device and Microphones

1. Connect the provided USB-C charging cable to the charging port on the karaoke speaker and the microphones.
2. Plug the other end of the cable into a compatible USB power adapter (not included).
3. The indicator light will show charging status. A full charge takes approximately 2 hours for the speaker and microphones.

3.2 Powering On/Off

- To power on the speaker, press and hold the power button on the top panel until the LED lights illuminate.
- To power on each microphone, press and hold the power button on the microphone handle.
- To power off, repeat the process for both the speaker and microphones.

3.3 Bluetooth Pairing

1. Ensure the karaoke speaker is powered on. It will automatically enter Bluetooth pairing mode.
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "RE-01" to connect. A confirmation sound will indicate successful pairing.
4. The two wireless microphones will automatically pair with the speaker once powered on.

Easy to connect & Play

Widely Compatible.



Image 3.1: Speaker connectivity ports.

4. OPERATING INSTRUCTIONS

4.1 Volume Control

- **Speaker Volume:** Use the '+' and '-' buttons on the top panel of the speaker to adjust the overall volume.
- **Microphone Volume:** Use the '+' and '-' buttons on each microphone to adjust its individual volume.

4.2 Voice Effects

The karaoke machine offers 5 magic voice effects:

- Male Voice
- Female Voice
- Baby Voice
- Monster Voice

- Original Voice

To cycle through these effects, press the voice changer button (microphone icon) on the speaker or the lower button on the microphone.



Image 4.1: Available voice effects.

4.3 Vocal On/Off (Instrumental Mode)

Press the Vocal On/Off button (music note icon) on the speaker to switch between original vocals and instrumental-only tracks from your connected device.

4.4 Headphone Jack

A 3.5 mm headphone jack is located on the rear of the speaker, allowing for quiet practice or private listening.

4.5 Light Modes

The speaker features 4 multicolor light modes that beat with the rhythm of the music. Press the light button (lightbulb icon) on the speaker to cycle through the different lighting effects.



Image 4.2: Dynamic LED light modes.

4.6 Media Playback (TF Card / USB)

Insert a TF (Micro SD) card or USB drive with MP3 audio files into the corresponding slots on the rear of the speaker for direct music playback.

5. MAINTENANCE

5.1 Cleaning

Wipe the device and microphones with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

5.2 Storage

Store the karaoke machine in a cool, dry place away from direct sunlight when not in use.

5.3 Battery Care

To prolong battery life, fully charge the device and microphones before first use and at least once every three months if not used regularly.

6. TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the device is fully charged. Connect to power and try again.
Microphones do not pair.	Ensure both microphones and the speaker are powered on and within range. Power cycle both devices and try again.
No sound from speaker.	Check speaker and connected device volume. Ensure Bluetooth is connected and music is playing.
Voice effects not working.	Press the voice changer button to cycle through effects. Ensure microphone is powered on.
LED lights not illuminating.	Press the light button to activate or change light modes.

7. SPECIFICATIONS

Feature	Detail
Model Number	RE-01
Item Weight	14.4 ounces
Product Dimensions	2.8 x 4.5 x 3.5 inches
Bluetooth Version	5.4
Battery Type	Lithium Ion (included)
Charging Time	Approx. 2 hours
Play Time	Up to 8 hours
Compatible Devices	Headphone, Laptop, Smartphone, Tablet
Connector Type	TF/HEADPHONE, USB Type C
Speaker Count	1
Special Features	Built-In Microphone, Indicator Light, Rechargeable, SD Card Slot, Voice Changer

8. WARRANTY AND SUPPORT

Reoslar provides comprehensive support for your Mini Karaoke Machine:

- **Product Support:** Over 1-Year Product Support.
- **Technical Support:** Lifetime Professional Tech Support.
- **Replacement Service:** Reliable Replacement Service.

For further assistance, please visit the official Reoslar store or contact customer service.

Your browser does not support the video tag.

Video 8.1: Official product overview by Reoslar Direct.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question