

CURECURE FPK1813A

CURECURE Electric Heated Blanket FPK1813A User Manual

Model: FPK1813A

1. INTRODUCTION

Thank you for choosing the CURECURE Electric Heated Blanket, Model FPK1813A. This manual provides detailed instructions for the safe and effective use of your new heated blanket. Please read this manual thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions carefully before using the blanket.
- Do not use the blanket on an infant, a child, an invalid, a person insensitive to heat, or an animal.
- Do not use the blanket if it is wet.
- Never use the blanket folded, bunched, or creased. This can cause overheating.
- Do not insert pins or other metallic objects into the blanket.
- Always disconnect the blanket from the power outlet when not in use or before cleaning.
- Do not use with generators, power converters, or inverters.
- This blanket is equipped with an automatic 10-hour shut-off feature and overheat protection for your safety.
- Keep the control unit away from water or other liquids.

WHERE COMFORT MEETS SAFETY

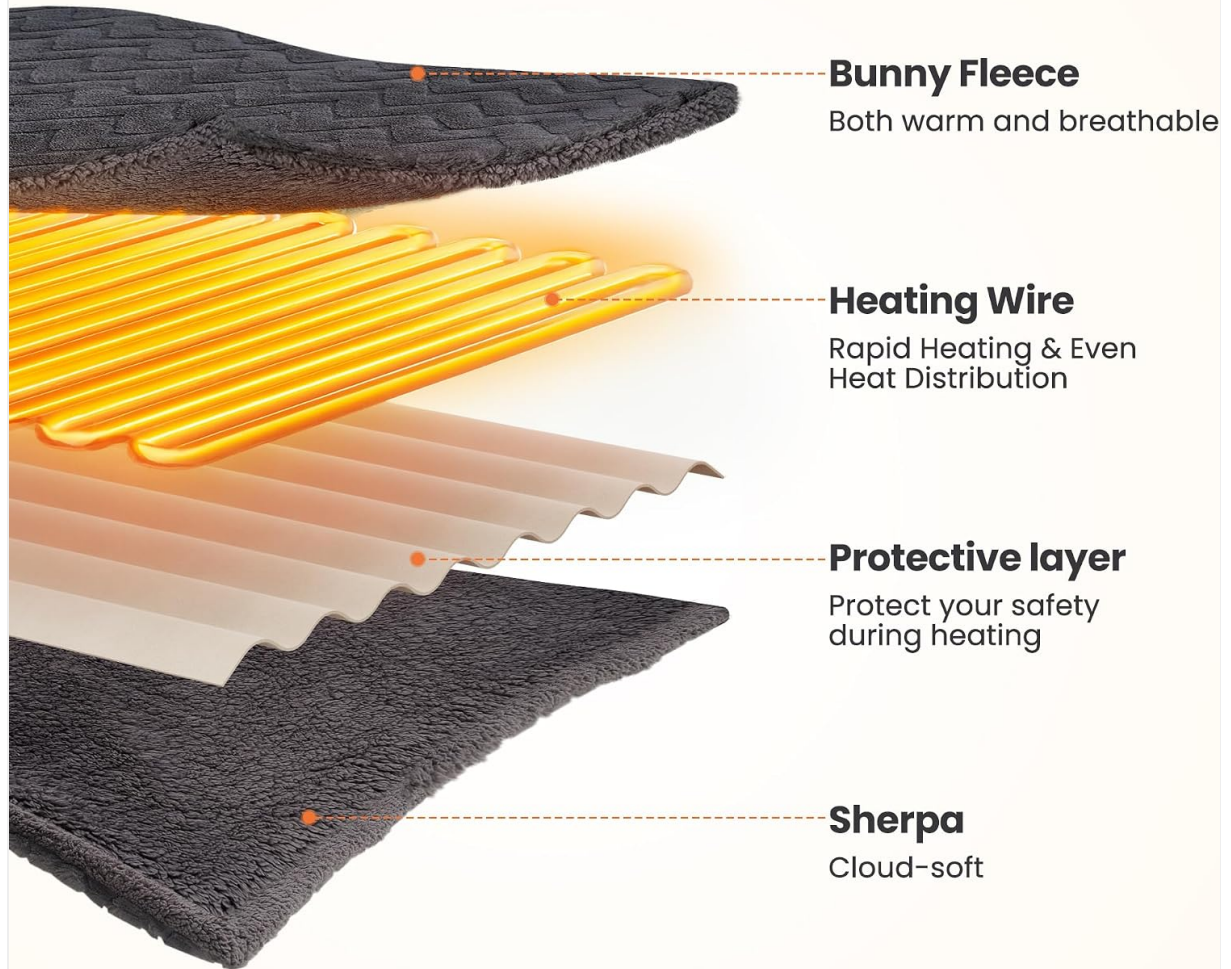


Image: Layered construction of the CURECURE Electric Heated Blanket, illustrating the Bunny Fleece, internal heating wire, protective layer, and Sherpa fabric for both comfort and safety.

3. PRODUCT OVERVIEW

The CURECURE Electric Heated Blanket (Model FPK1813A) is designed to provide warmth and comfort. It features a unique M-pattern design and dual-sided fabric for enhanced user experience.

3.1 Material and Design

This blanket is crafted with a luxurious 320 GSM Bunny Fleece on one side and an ultra-soft 200 GSM Sherpa on the other. This combination ensures both warmth and breathability. The M-pattern design adds a stylish aesthetic.

THICKER & HEAVIER FOR ENHANCED WARMTH

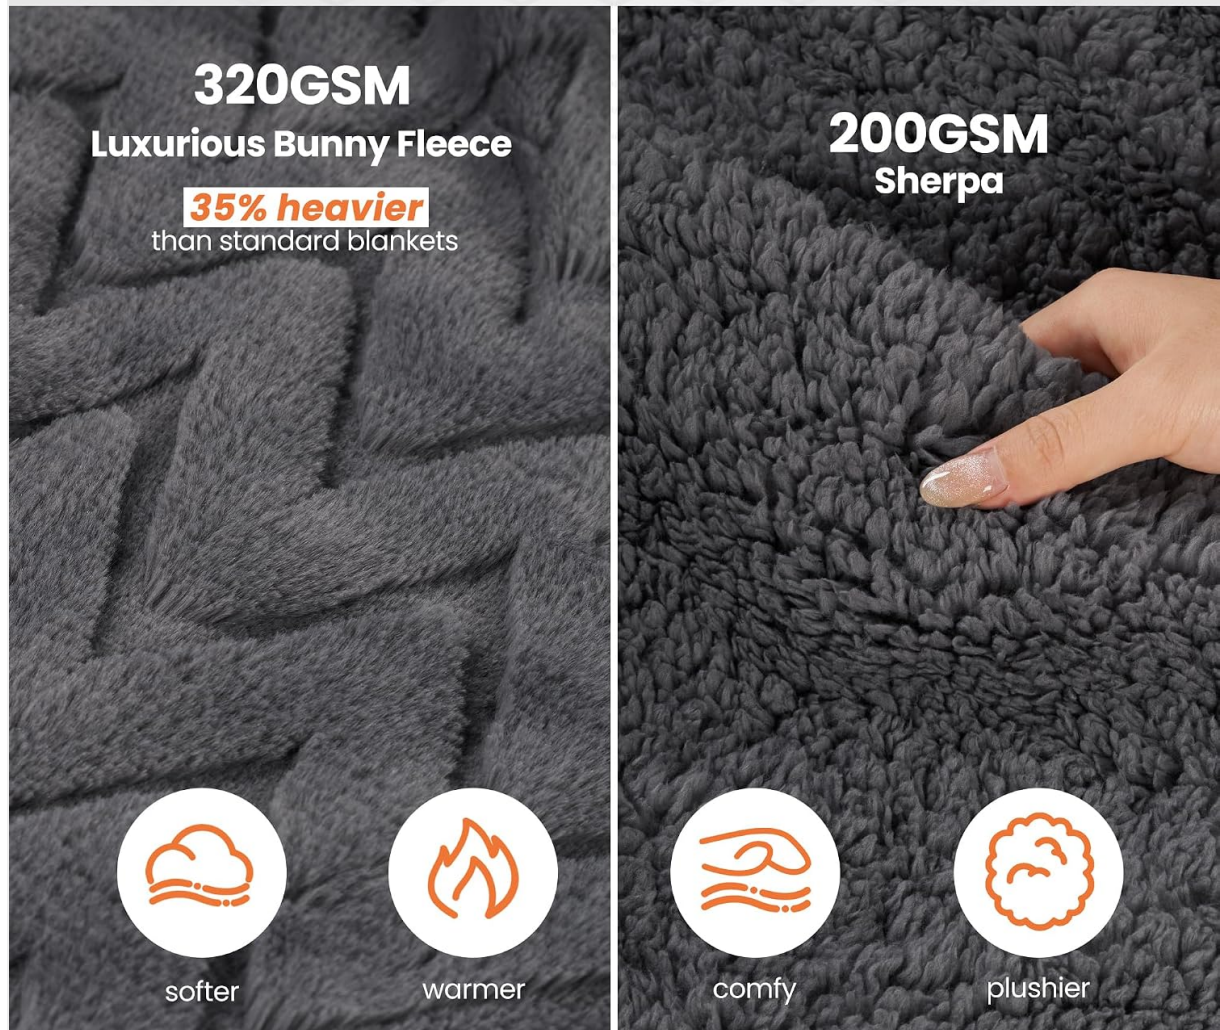


Image: Detail of the blanket's dual-sided fabric, highlighting the luxurious Bunny Fleece and soft Sherpa for superior warmth and comfort.

NEWLY UPGRADED M-PATTERN DESIGN



The **M-pattern design** can enhance the aesthetic appeal of the bedroom more than plain blankets



Image: The blanket's M-pattern design, offering an enhanced aesthetic and soft tactile experience.

3.2 Dual Functionality

The CURECURE blanket can be used as an electric heated blanket or as a regular, unheated throw blanket, providing versatile comfort.

2-in-1 Electric & Regular Blanket

Dual functionality as an electric heated blanket/regular blanket



Electric Heated Blanket

softer warmer comfy plushier

Regular Blanket

≥200 GSM blankets stay warm
even unheated

Image: The blanket's dual functionality, usable as an electric heated blanket or a comfortable regular throw.

4. SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the blanket from its packaging. Inspect the blanket and control unit for any signs of damage. Do not use if damaged.
2. **Connect Controller:** Locate the connector on the blanket and the corresponding plug on the control unit. Firmly push the plug into the connector until it clicks securely into place. Ensure the connection is tight.
3. **Placement:** Lay the blanket flat on your bed, sofa, or desired surface. Ensure there are no folds, creases, or bunched areas.
4. **Power Connection:** Plug the power cord of the control unit into a standard 220-240V AC electrical outlet.

2-in-1 Electric & Regular Blanket

Dual functionality as an electric heated blanket/regular blanket



Electric Heated Blanket

softer warmer comfy plushier

Regular Blanket

≥200 GSM blankets stay warm even unheated

Image: The detachable controller connecting to the blanket, demonstrating the ease of setup.

5. OPERATING INSTRUCTIONS

The CURECURE Electric Heated Blanket features a simple one-button control for ease of use.

5.1 Control Unit Functions

- **Power On/Off:** Press the power button once to turn the blanket on. Press and hold the power button to turn it off.
- **Heat Settings:** The blanket has 4 adjustable heat levels. After turning on, press the power button repeatedly to cycle through the heat settings (1, 2, 3, 4). Indicator lights will show the selected level.
- **Automatic Shut-off:** For safety and energy conservation, the blanket will automatically turn off after 10 hours of continuous use.



Image: The control unit with a single button for power and temperature adjustment, displaying indicators for 4 heat settings and the 10-hour auto-off timer.

5.2 Recommended Usage

The blanket is suitable for use on beds, sofas, or in office settings to provide personal warmth.



Image: Examples of the heated blanket in use, providing warmth in a bed, on a sofa, and at an office desk.

6. CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your heated blanket.

6.1 Cleaning Instructions

1. **Disconnect:** Always ensure the blanket is unplugged from the wall outlet and the control unit is detached from the blanket before cleaning.
2. **Machine Wash:** The blanket is machine washable. Use a gentle cycle with cold water (below 30°C).
3. **Hand Wash:** The blanket can also be hand washed.
4. **Drying:** Hang to dry. Do not tumble dry. Ensure the blanket is completely dry before reconnecting the control unit and plugging it in.
5. **Do Not:** Do not bleach, iron, or dry-clean the blanket. These actions can damage the heating elements and fabric.

MACHINE WASHABLE



Image: Visual guide for cleaning the blanket, emphasizing machine washability after detaching the control panel, and other care instructions.

6.2 Storage

When not in use, store the blanket in a cool, dry place. Avoid folding it tightly or placing heavy objects on it, which could damage the internal wiring.

7. TROUBLESHOOTING

If you experience issues with your CURECURE Electric Heated Blanket, please refer to the following common problems and solutions:

- **Blanket not heating:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check that the control unit is firmly connected to the blanket.
 - Verify that the power button on the control unit has been pressed and a heat setting is selected.
 - If the blanket has been on for 10 hours, the auto-off feature may have activated. Turn the blanket off and then on again.
- **Control unit indicator lights are off:**

- Check the power connection to the wall outlet and the blanket.
- Ensure the power button has been pressed.
- **Blanket feels too hot or not warm enough:**
 - Adjust the heat setting using the control unit. There are 4 levels to choose from.
 - Ensure the blanket is not folded or bunched, which can concentrate heat in one area.

If the problem persists after following these steps, please contact customer support.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	FPK1813A
Dimensions	130 x 180 cm
Material	Polyester (Bunny Fleece & Sherpa)
Color	Dark Gray
Weight	2 Kilograms
Heat Settings	4 Levels
Automatic Shut-off	10 Hours
Special Feature	Overheat Protection
Power Cord Length	2.5 meters (approx. 8.2 feet)

9. WARRANTY AND SUPPORT

Specific warranty details for the CURECURE Electric Heated Blanket FPK1813A are not provided in the available product information. For warranty claims, technical support, or any questions not covered in this manual, please refer to the contact information provided with your purchase or visit the official CURECURE website.