

[Manuals.plus](#) /

› [taopodo](#) /

› taopodo Portable Speaker M13 User Manual

taopodo M13

taopodo Portable Speaker M13 User Manual

Model: M13

1. INTRODUCTION

Thank you for purchasing the taopodo Portable Speaker M13. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

- taopodo Portable Speaker M13
- Power Cable
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Image 3.1: Front view of the taopodo M13 Portable Speaker, showing the control buttons and input ports.

3.1 Control Buttons

- **Power Button:** Press and hold to power on/off. Short press to play/pause.
- **Volume Down / Previous Track:** Short press for volume down. Long press for previous track.
- **Volume Up / Next Track:** Short press for volume up. Long press for next track.
- **EQ Button:** Short press to cycle through equalizer modes.
- **Light Mode Button:** Short press to change RGB light modes.

3.2 Input Ports

- **DC5V Port:** For charging the speaker using the provided power cable.
- **USB Port:** For playing audio from a USB flash drive.
- **TF Card Slot:** For playing audio from a MicroSD (TF) card.
- **AUX Port:** For connecting external audio devices via a 3.5mm auxiliary cable.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided power cable to the DC5V port on the speaker and the other end to a compatible USB power adapter (not included). The charging indicator light will show charging status and turn off when fully charged.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button for 3 seconds. You will hear an audible prompt.
- **To Power Off:** Press and hold the Power button for 3 seconds. You will hear an audible prompt.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing blue LED).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "**taopodo M13**" from the list of devices.
4. Once connected, the speaker will emit an audible confirmation, and the blue LED will stop flashing.

4.4 TWS (True Wireless Stereo) Pairing

TWS allows you to connect two taopodo M13 speakers for a stereo sound experience.

1. Ensure both M13 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button. The speaker will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. Once connected, you will hear an audible confirmation.
4. Now, connect your device to the primary speaker via Bluetooth as described in Section 4.3.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

- **Play/Pause:** Short press the Power button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.

5.2 RGB Light Modes

Short press the Light Mode button to cycle through various RGB lighting effects. Press and hold to turn the lights off.

5.3 EQ Modes

Short press the EQ button to switch between different equalizer sound profiles (e.g., Bass Boost, Vocal, Standard).

5.4 Auxiliary (AUX) Input

Connect an external audio device using a 3.5mm audio cable to the AUX port. The speaker will automatically switch to AUX mode.

5.5 USB Playback

Insert a USB flash drive containing MP3 audio files into the USB port. The speaker will automatically detect and play the audio files.

5.6 TF Card Playback

Insert a MicroSD (TF) card containing MP3 audio files into the TF card slot. The speaker will automatically detect and play the audio files.

6. MAINTENANCE

6.1 Cleaning

Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure all port covers are securely closed before cleaning with water.

6.2 Waterproofing (IPX7)

The speaker is IPX7 waterproof, meaning it can be submerged in water up to 1 meter for 30 minutes. Ensure all port covers are tightly sealed before exposing the speaker to water. Do not expose to saltwater or other corrosive liquids.

Video 6.1: Demonstration of the speaker's IPX7 waterproof capability, showing it being exposed to water.

6.3 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode. Turn device Bluetooth off and on. Move device closer to speaker.
No sound from speaker.	Volume too low; incorrect input mode; device not playing.	Increase speaker and device volume. Check input mode (Bluetooth, AUX, USB, TF). Ensure audio is playing on the connected device.
TWS pairing fails.	Speakers too far apart; one speaker already connected to another device.	Ensure speakers are close to each other. Disconnect any existing Bluetooth connections from both speakers before TWS pairing.

8. SPECIFICATIONS

- **Model:** M13
- **Brand:** taopodo
- **Connectivity:** Bluetooth 5.4
- **Speaker Output Power:** 30 Watts

- **Waterproof Rating:** IPX7
- **Playtime:** Up to 30 hours
- **Features:** TWS Pairing, RGB Lights, USB Playback, TF Card Playback, AUX Input
- **Dimensions:** 4"D x 1.9"W x 2.5"H
- **Item Weight:** 1.08 pounds

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact taopodo customer service through the retailer where the product was purchased. Keep your proof of purchase for warranty claims.