

Manuals.plus /

> [ZWP](#) /

> ZWP Replacement Remote Control User Manual for Under Desk Elliptical Machines

ZWP Replacement Remote Control for Under Desk Elliptical Machines

ZWP Replacement Remote Control User Manual

For Under Desk Elliptical Machines

INTRODUCTION

This manual provides comprehensive instructions for the ZWP Replacement Remote Control. It is designed to help you set up, operate, and maintain your remote control for various compatible under-desk elliptical machines. Please read this manual thoroughly before use to ensure proper function and longevity of your device.

PRODUCT OVERVIEW

The ZWP Replacement Remote Control is a durable and ergonomic device designed to operate compatible under-desk elliptical machines. It features a comfortable hand feeling and is constructed from high-quality ABS material with soft silicone buttons for reliable performance.



Image 1: The ZWP Replacement Remote Control shown alongside a compatible under-desk elliptical machine, illustrating its operational distance of up to 8 meters.



Image 2: A detailed view of the remote control, highlighting the "FUNCTION" button and the high-quality ABS material with soft silicone buttons used in its construction.

SETUP

1. Battery Installation

The remote control requires two 1.5V AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the cover back into place until it clicks securely.

Requires Two 1.5V AAA Batteries

(Batteries are not included)



NEW ABS

Image 3: Illustration showing the battery compartment of the remote control and the correct orientation for inserting two 1.5V AAA batteries.

2. Pairing Instructions

The manufacturer provides the following pairing instruction. Please note that the button names mentioned may refer to functions on the elliptical machine itself or a different type of device. If these instructions do not apply directly to your elliptical machine, please consult your elliptical's user manual for specific pairing procedures.

To re-pair the remote control with your device:


1. Within 10 seconds of plugging the power cord of your elliptical machine into the electrical outlet:
2. Press and hold the **'Head Up'** and **'Foot Down'** buttons simultaneously for 10 seconds.
3. The adjustable base (or corresponding mechanism on your elliptical) should re-pair with the remote.

If your remote does not have "Head Up" and "Foot Down" buttons, or if your elliptical machine does not have an "adjustable base," please refer to the user manual provided with your specific elliptical machine for pairing instructions.

OPERATION

The remote control features several buttons for controlling your under-desk elliptical machine. Familiarize yourself with the

button layout and their functions:

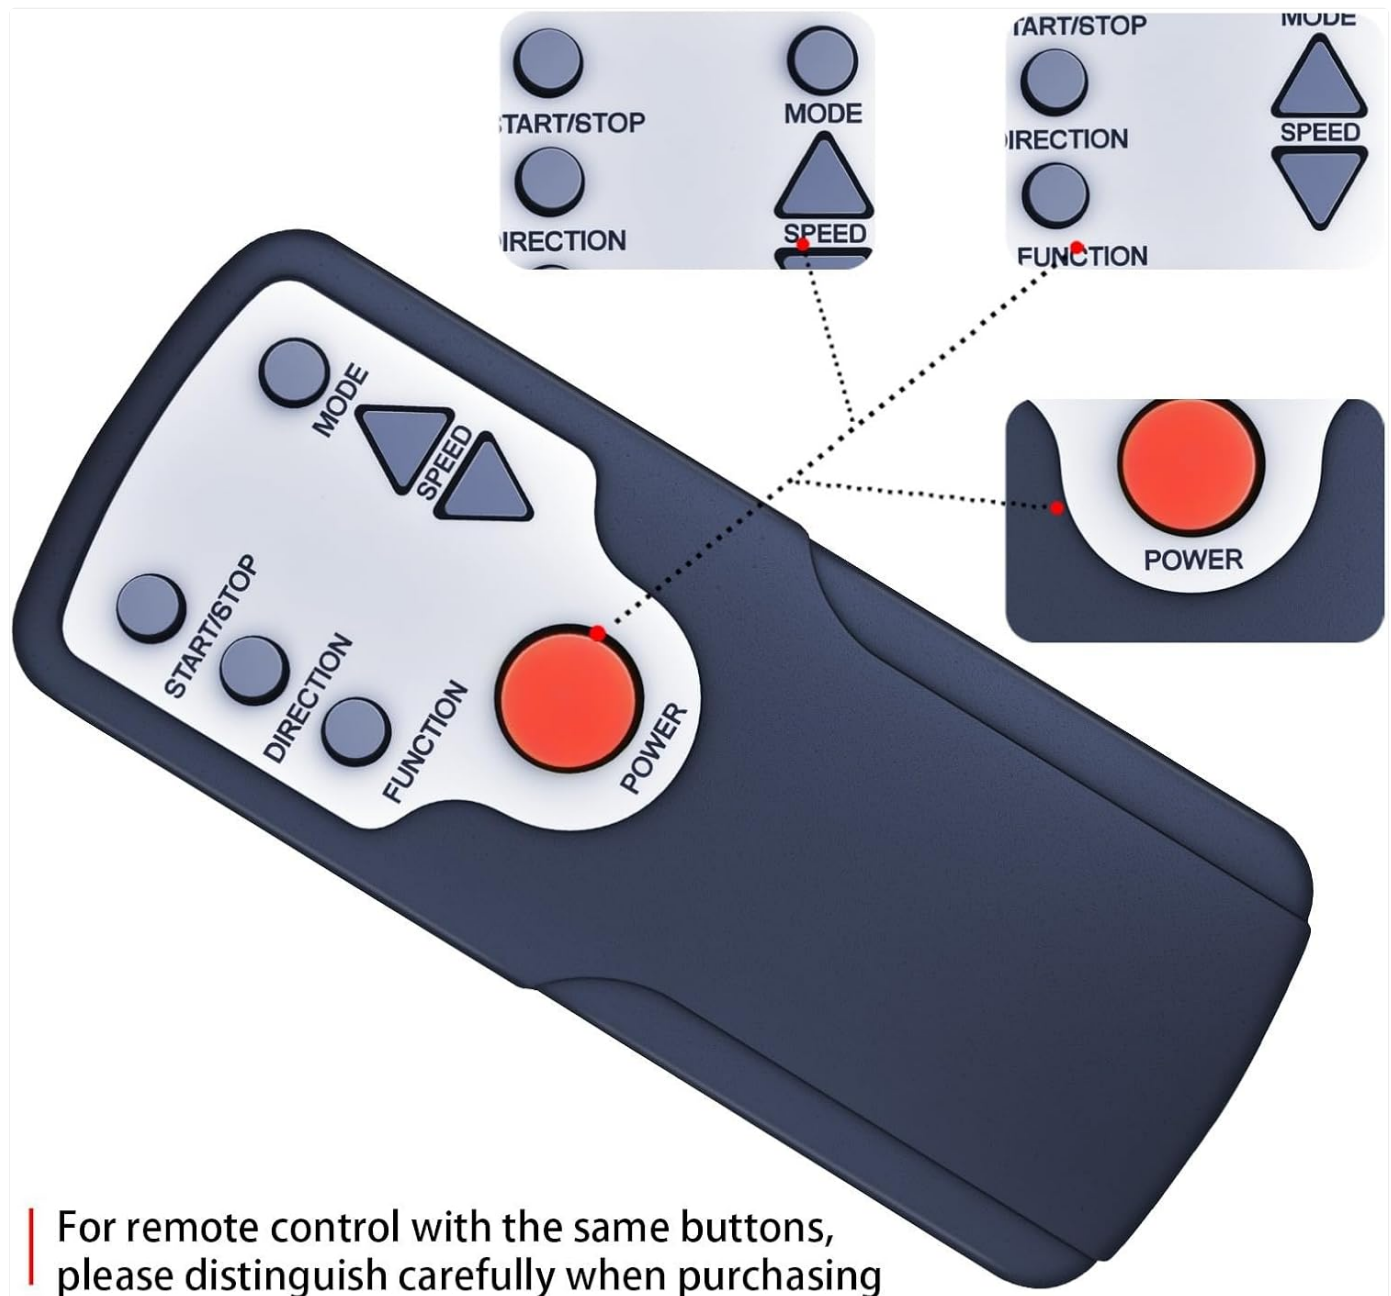

For remote control with the same buttons,
please distinguish carefully when purchasing

Image 4: A close-up of the remote control, highlighting the "SPEED" and "POWER" buttons and their positions.

- **POWER Button:** Turns the elliptical machine on or off.
- **START/STOP Button:** Initiates or pauses the elliptical's movement.
- **MODE Button:** Cycles through different exercise modes or display options.
- **SPEED Buttons (Up/Down Arrows):** Adjusts the speed or intensity level of the elliptical.
- **DIRECTION Button:** Changes the direction of the elliptical's movement (if supported by your machine).
- **FUNCTION Button:** Activates additional functions or settings (refer to your elliptical's manual for specific functions).

Ensure the remote is pointed towards the elliptical machine for optimal signal transmission. The operational distance is approximately 8 meters.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use

abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's surface and internal components.

Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops functioning. Refer to the "Battery Installation" section under Setup for instructions on how to replace the two 1.5V AAA batteries. Always dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not responding.	- Dead or incorrectly installed batteries. - Remote is out of range. - Remote is not paired with the elliptical. - Obstruction between remote and elliptical.	- Replace batteries with new 1.5V AAA batteries, ensuring correct polarity. - Move closer to the elliptical machine (within 8 meters). - Follow the "Pairing Instructions" in the Setup section. - Remove any objects blocking the signal path.
Elliptical machine not turning on/off.	- Elliptical machine is not plugged in or powered on. - Remote control issue (see above).	- Check the elliptical's power connection and power switch. - Troubleshoot remote control as described above.
Buttons not functioning correctly.	- Low battery power. - Button stuck or damaged.	- Replace batteries. - Gently press the button to ensure it's not stuck. If damaged, contact support.

SPECIFICATIONS

- **Brand:** ZWP
- **Compatible Devices:** Under Desk Elliptical Machines (e.g., Putnen MF-H-01, HJDFGSS D802, CURSOR Fitness C5, GEONEO S200, Medilax P70324, Morelax M858, DOMNIU, Yagud ZF0801, Roylvan TD05-EB-010, VIVURN 018)
- **Power Source:** 2 x 1.5V AAA Batteries (not included)
- **Material:** High-quality ABS with soft silicone buttons
- **Color:** Black
- **Item Weight:** 2.08 ounces (approx. 59 grams)
- **Package Dimensions:** 7.4 x 2.5 x 1.1 inches (approx. 18.8 x 6.35 x 2.8 cm)
- **Operational Distance:** Up to 8 meters

WARRANTY AND SUPPORT

For any questions or issues regarding your ZWP Replacement Remote Control, please contact the seller or manufacturer directly. Specific warranty information may be provided with your purchase documentation. Please retain your proof of purchase for warranty claims. If you require further assistance with your elliptical machine, please refer to the user manual provided by the elliptical machine's manufacturer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FHJSB5Z4>

More documents and user manuals: <https://manuals.plus/>