

Manuals.plus /

› GloryAir /

› GloryAir 2.11Gal (8L) Quiet Top Fill Cool & Warm Mist Humidifier User Manual

GloryAir HQ-JS902R

GloryAir 2.11Gal (8L) Quiet Top Fill Cool & Warm Mist Humidifier User Manual

Model: HQ-JS902R

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your GloryAir 2.11Gal (8L) Cool & Warm Mist Humidifier. Please read it thoroughly before first use and retain it for future reference.

2. PRODUCT OVERVIEW

The GloryAir HQ-JS902R Humidifier is designed to enhance air quality in large rooms up to 650 sq ft, offering both cool and warm mist options. It features smart humidity control, a large 8L (2.11 Gal) water tank for extended operation, and quiet performance suitable for bedrooms.

Key Features:

- **Cool & Warm Mist Modes:** Switch between cool mist for quick relief and plant care, or warm mist for enhanced warmth and broader humidification.
- **Powerful Humidification:** Delivers 500mL/h mist, covering up to 650 sq ft with an 80-hour runtime.
- **Large Capacity & Smart Control:** 8L tank with custom humidity levels from 45% to 95% via an external humidistat.
- **Quiet Operation:** Operates at just 35dB in sleep mode, ideal for undisturbed rest.
- **User-Friendly Design:** Top-fill water addition, 1-24 hour timer, interval mode, aroma pad for essential oils, and remote control.
- **7-Color Breathing Lights:** Optional ambient lighting, with all lights turning off in sleep mode.

Components:

GloryAir | HQ-JS902

7.87" 7.87" 21.34"

Depth | Width | Height



What's in the Box



User Manual



Remote Control



Cleaning Brush



Extensive Tube

Figure 1: What's in the Box - 8L Humidifier, User Manual, Extensive Tube, Remote Control, Cleaning Brush.





Figure 2: GloryAir Humidifier with its extended mist tube and remote control.

3. SAFETY INSTRUCTIONS

To ensure safe operation, please adhere to the following guidelines:

- Do not fill past the MAX line indicated on the water tank.
- Do not drop essential oils directly into the sink or water tank; use the designated aroma pad.
- Do not add water directly into the mist tube or base chamber.
- Do not place the humidifier tilted; ensure it is on a flat, stable surface.

- Always unplug the unit before cleaning or refilling.
- Keep out of reach of children and pets.



Figure 3: Important Safety Warnings for Humidifier Use.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the humidifier on a firm, flat, water-resistant surface at least 6 inches (15 cm) away from walls and appliances.
3. **Assemble Mist Tube:** Attach the extensive mist tube to the top of the humidifier if desired. The 360° adjustable nozzle can be rotated to direct mist.
4. **Fill Water Tank:** Lift the top cover and pour clean, cool tap water directly into the water tank. Do not exceed the 'MAX' fill line. For best results and to prevent mineral buildup, use distilled water.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet (120 Volts AC). The unit will beep once, indicating it is ready for use.



Figure 4: Top-fill design for easy water replenishment.

Video: Top-Fill and Mist Output Demonstration

Video 1: This video from GloryAir Direct demonstrates the top-fill feature and the humidifier's mist output, showcasing its ease of use and effectiveness.

5. OPERATING INSTRUCTIONS

Your humidifier can be controlled via the touch panel on the unit or the included remote control.

Convenient Remote Control



Figure 5: Convenient remote control for easy operation.

Control Panel & Remote Functions:

- **ON/OFF:** Power the unit on or off.
- **TIMER:** Set the operating time from 1 to 24 hours. The unit will automatically shut off when the timer expires.
- **MIST:** Adjust mist output level (4 levels: Low, Medium, High, Extra High).
- **HUMIDITY:** Set desired humidity level from 45% to 95%. The unit will maintain this level automatically.
- **WARM MIST:** Activate or deactivate the warm mist function.
- **COLOR LIGHT:** Cycle through 7-color breathing lights or turn them off.
- **SLEEP MODE:** Turns off all display lights and operates quietly for undisturbed sleep.



Figure 6: Overview of Humidifier Features and Control Panel.

Aroma Diffuser Function:

To use the aroma diffuser, pull out the small aroma pad box located on the side of the unit. Add a few drops of your favorite essential oil to the pad, then reinsert the box. The mist will carry the scent into the room.



Figure 7: Built-in Aroma Box for essential oils.

6. MAINTENANCE

Regular cleaning is crucial for optimal performance and hygiene. It is recommended to clean the humidifier once a week.

Cleaning Steps:

1. Unplug the humidifier and remove the base chamber from the main water tank. Empty any remaining water.
2. Prepare a 1:5 vinegar solution (1 part vinegar to 5 parts water). Fill the tank and base with the solution.
3. Soak the tubing and other removable parts in the vinegar solution for 20 minutes.
4. Use a soft cloth and the provided cleaning brush to wipe all parts. Rinse thoroughly with clean water and allow to air dry completely before reassembly.



Figure 8: How to Clean Your GloryAir Humidifier.

7. TROUBLESHOOTING

If you encounter issues with your humidifier, please consult the following common problems and solutions:

- **No Mist:** Check if the water tank is empty. Ensure the unit is properly assembled and powered on. Clean the transducer if mineral buildup is present.
- **Unusual Noise:** Ensure the unit is on a flat, stable surface. Check for any foreign objects in the water tank or base.
- **Leaking:** Verify that the water tank is correctly seated and not overfilled. Ensure all parts are securely in place.
- **Odor:** Clean the water tank and all components thoroughly. Use distilled water to minimize mineral and bacterial growth.

For persistent issues, please contact GloryAir customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	GloryAir
Model Name	HQ-JS902R
Capacity	2.11 Gallons (8L)
Floor Area Coverage	650 Square Feet
Operation Mode	Ultrasonic
Mist Output	500mL/h
Runtime	Up to 80 hours
Humidity Control Range	45%-95%
Noise Level	35dB (Sleep Mode)
Timer	1-24 Hours
Voltage	120 Volts (AC)
Wattage	170 watts
Product Dimensions	7.87"D x 7.87"W x 21.34"H
Item Weight	5.3 Pounds
UPC	648564210192

9. WARRANTY & SUPPORT

GloryAir offers a 12-month warranty from the date of purchase. For warranty claims, technical support, or any inquiries, please contact GloryAir customer service through your retailer or the official GloryAir website.