

VIANIS V83605-D2D

VIANIS Dusk to Dawn Outdoor Hanging Light Fixture Instruction Manual

Model: V83605-D2D

INTRODUCTION

Thank you for choosing the VIANIS Dusk to Dawn Outdoor Hanging Light Fixture. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions thoroughly before beginning installation and retain them for future reference.

SAFETY INFORMATION

WARNING: RISK OF ELECTRIC SHOCK. Disconnect power at the circuit breaker or fuse box before installation or servicing.

- All electrical connections must be in accordance with local codes and ordinances, National Electric Code (NEC), and ANSI/NFPA 70-1999.
- Consult a qualified electrician if you are unsure about wiring procedures.
- Wear safety glasses and gloves during installation.
- Ensure the fixture is securely mounted to a structural element capable of supporting its weight.
- Do not exceed the maximum wattage specified for the bulb.

PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Outdoor Hanging Light Fixture (1)
- Mounting Hardware Kit (1)
- Instruction Manual (1)
- Shade (Pre-assembled)

Note: Bulb is not included. Requires one E26 base bulb (max 100W incandescent, max 10W LED).

SPECIFICATIONS

Brand	VIANIS
Model Number	V83605-D2D
Color	Oil Rubbed Bronze (Gold Trim)
Material	Aluminum, Tempered Seed Glass
Dimensions (L x W x H)	6.3" x 6.3" x 12.67"
Adjustable Chain Length	Max 59 inches
Power Source	Corded Electric
Voltage	120V AC
Bulb Base	E26
Max Wattage	100W (Incandescent), 10W (LED)
Special Features	Dusk to Dawn Sensor, Adjustable Height, Anti-Rust, Waterproof



SETUP AND INSTALLATION

Follow these steps for proper installation. Professional installation is recommended if you are unfamiliar with electrical wiring.

Tools Required (Not Included):

- Screwdriver (Phillips and Flathead)
- Wire Strippers
- Electrical Tape
- Ladder

Installation Steps:

1. **Turn Off Power:** Locate the circuit breaker controlling the light fixture's power supply and turn it OFF. Verify power is off using a voltage tester.
2. **Prepare Mounting:** Attach the mounting bracket to the junction box using the provided screws. Ensure it is securely fastened.
3. **Adjust Chain Length:** The fixture comes with a 59-inch adjustable chain. Determine the desired hanging height and adjust the chain by removing links as needed. Secure the chain to the canopy and fixture loop.
4. **Wiring Connections:** Connect the fixture's wires to your household wiring:
 - Connect the **black** (live) wire from the fixture to the **black** (live) wire from the junction box.
 - Connect the **white** (neutral) wire from the fixture to the **white** (neutral) wire from the junction box.
 - Connect the **green or bare copper** (ground) wire from the fixture to the **green or bare copper** (ground) wire from the junction box.

Secure all connections with wire nuts and electrical tape.

5. **Mount Fixture:** Carefully tuck all wires into the junction box. Raise the canopy to the ceiling and secure it to the mounting bracket with the provided screws.
6. **Install Bulb:** Screw an E26 base bulb (not included) into the socket. Do not exceed the maximum wattage.
7. **Restore Power:** Turn the power back ON at the circuit breaker.



Slope Ceiling

The fixture is compatible with various ceiling types, including sloped ceilings.

OPERATING INSTRUCTIONS

This fixture features an integrated Dusk to Dawn sensor for automatic operation.

Dusk to Dawn Sensor Functionality:

- The built-in photocell sensor detects ambient light levels.
- The light fixture will automatically turn **ON** when it detects low light conditions (dusk).
- The light fixture will automatically turn **OFF** when it detects sufficient light (dawn).
- Ensure the sensor is not obstructed by objects or direct artificial light sources, as this may interfere with its operation.

Dusk to Dawn Sensor

Integrated Smart Algorithm, Stable and Reliable



Auto OFF at Dawn



Auto ON at Dusk

Automatic operation of the Dusk to Dawn sensor.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your light fixture.

- **Cleaning:** To clean the fixture, turn off the power supply. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or glass.
- **Bulb Replacement:** Ensure power is off before replacing the bulb. Allow the bulb to cool completely. Unscrew the old bulb and screw in a new E26 base bulb (max 100W incandescent, max 10W LED).
- **Inspection:** Periodically check for any loose connections, damaged wiring, or signs of wear. Address any issues promptly.
- **Weather Resistance:** The fixture is designed to be waterproof and anti-rust. However, ensure all seals and connections remain intact to maintain its weather-resistant properties.



Premium Aluminum Housing

Durable Shine, Resistant to Rust



- ✓ Die-cast Aluminum, Anti Rust
- ✓ Dusk to Dawn Sensor
- ✓ Weather-Resistant
- ✓ UV-Resistant
- ✓ Tempered Seeded Glass



- Other Easily Rusted Metals
- No Sensor
- Non-Weather-Resistant
- Prone to UV Damage
- Fragile Thin Glass Shade

The fixture is built with weather-resistant materials.

TROUBLESHOOTING

If you encounter issues with your light fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Loose wiring connection. Faulty bulb. Sensor malfunction.	Check circuit breaker/fuse. Verify all wiring connections are secure (power off first). Replace bulb. Ensure sensor is not obstructed or exposed to direct artificial light.
Light stays on during the day.	Sensor obstructed or receiving insufficient light. Sensor malfunction.	Clear any obstructions from the sensor. Relocate if necessary to an area with adequate natural light. Contact customer support if the issue persists.

Light flickers.	Loose bulb. Loose wiring connection. Incompatible bulb.	Tighten bulb. Check wiring connections (power off first). Ensure bulb is compatible with E26 base and wattage requirements.
-----------------	---	---

If troubleshooting steps do not resolve the issue, please contact VIANIS customer support.

WARRANTY AND SUPPORT

Your VIANIS Dusk to Dawn Outdoor Hanging Light Fixture is covered by a **3-year warranty** from the date of purchase.

This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by improper installation, misuse, accidents, or unauthorized modifications.

For warranty claims, technical assistance, or any questions regarding your product, please contact our professional after-sales team. Refer to your purchase documentation for contact details or visit the official VIANIS website.