

US2EFS7KB7AZP2Q2GV

Generic Cordless Stick Vacuum Cleaner

Model: US2EFS7KB7AZP2Q2GV

Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Generic Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and retain it for future reference.

Important Safety Instructions

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use in an enclosed space where vapors are present from oil base paint, paint thinner, mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Disconnect from electrical outlet before cleaning or maintenance.
- Use only identical replacement parts.

2. PRODUCT OVERVIEW

Package Contents

The following items are included in your package:

- Cordless Vacuum Cleaner (Main Body) x1
- Extension Rod x2
- Charging Cable (Type-C) x1
- Washable HEPA Filter x1
- Multifunctional Brush x1
- Floor Brush x1

Product Components

Familiarize yourself with the main parts of your vacuum cleaner:



Image: The main vacuum unit, extension rod, floor brush, multifunctional brush, and Type-C charging cable.

- **Main Unit:** Contains the motor, dust cup, and control buttons.
- **Extension Rod:** Connects the main unit to the floor brush or other attachments for extended reach.
- **Floor Brush:** Designed for cleaning hard floors and carpets.
- **Multifunctional Brush:** Suitable for cleaning narrow gaps, upholstery, and delicate surfaces.

- **Dust Cup:** Collects dust and debris.
- **HEPA Filter:** Filters fine dust particles.

Key Features

- **Effortless Portability:** Lightweight design for easy carrying and maneuvering throughout your home.
- **Reduced Arm Fatigue:** Ergonomic handle provides a comfortable grip for extended cleaning sessions.
- **Precise Control & Low Noise:** Offers efficient cleaning with a low noise design and advanced filtration system.
- **Broad Applications:** Effectively cleans various surfaces including car carpets, hard floors, and other household areas.
- **Effortless Cleaning Solution:** Designed for efficient removal of dirt and debris, improving cleaning efficiency.



110 degrees left and right

Dexterously deal with the corner area of your home



Up and down 80 degrees

The front end of the brush head can be horizontally penetrated into the bottom of the home

Image: The vacuum's brush head offers 110-degree left and right rotation and 80-degree up and down movement for enhanced maneuverability in corners and under furniture.

3. SETUP

Assembly

1. **Attach Extension Rod:** Insert one end of the extension rod into the main vacuum unit until it clicks securely into place.
2. **Attach Floor Brush:** Insert the floor brush onto the other end of the extension rod until it clicks securely.
3. **Attach Multifunctional Brush (Optional):** For handheld use or specific tasks, attach the multifunctional brush directly to the main unit or the extension rod.

Charging the Battery

Before first use, fully charge the vacuum cleaner. The battery capacity is 1200mAh.

1. Locate the Type-C charging port on the main unit.
2. Connect the provided Type-C charging cable to the vacuum cleaner.
3. Plug the other end of the charging cable into a suitable USB power adapter (not included) or a USB port.
4. The indicator light will show the charging status. Refer to the indicator light guide for details (if available on device).
5. Once fully charged, disconnect the charging cable.



Image: The Type-C charging port on the main unit, indicating convenient charging.

4. OPERATING INSTRUCTIONS

Basic Operation

1. Ensure the vacuum cleaner is fully assembled and charged.
2. Press the power button on the main unit to turn the vacuum cleaner ON.
3. Guide the floor brush over the surface you wish to clean. The ergonomic handle allows for comfortable maneuvering.
4. After cleaning, press the power button again to turn the vacuum cleaner OFF.



Image: The vacuum cleaner configured with the brush nozzle, demonstrating its use for cleaning upholstery and narrow gaps on a sofa.



Image: The wireless vacuum cleaner in action, effectively cleaning debris from a hard floor surface.

Using Attachments

- **Floor Brush:** Ideal for daily cleaning of hard floors, tiles, and low-pile carpets.
- **Multifunctional Brush:** Use for cleaning crevices, corners, car interiors, keyboards, and other hard-to-reach areas. It can be attached directly to the main unit for handheld use.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Cleaning the Dust Cup

1. Ensure the vacuum cleaner is turned OFF and disconnected from any charging cable.
2. Detach the dust cup from the main unit.
3. Empty the collected dust and debris into a waste bin.
4. Wipe the inside of the dust cup with a dry cloth if necessary.
5. Reattach the dust cup securely to the main unit.

Filter Maintenance

The vacuum cleaner features a triple dust lock filter system, including a washable HEPA filter, to prevent secondary pollution.



Image: Exploded view of the triple dust lock filter system, showing the countercurrent baffle, primary filter, and HEPA filter components.

1. Turn OFF and unplug the vacuum cleaner.
2. Remove the dust cup and carefully extract the filter components.
3. Tap the primary filter and HEPA filter gently to remove loose dust.
4. The HEPA filter is washable. Rinse it under running water until clean. Do not use detergents.
5. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use the vacuum cleaner with wet filters.
6. Reassemble the filters and dust cup in the correct order.

Note: Replace the HEPA filter periodically (e.g., every 3-6 months, depending on usage) to maintain optimal suction and filtration efficiency.

6. TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, please refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted. Power button not pressed correctly.	Charge the vacuum cleaner fully. Press the power button firmly.
Reduced suction power.	Dust cup is full. Filters are clogged. Nozzle/hose is blocked.	Empty the dust cup. Clean or replace filters. Check for and remove any blockages.
Vacuum stops during operation.	Battery is low. Overheating protection activated.	Recharge the battery. Turn off the vacuum and allow it to cool down for at least 30 minutes. Check for blockages.
Unusual noise.	Blockage in nozzle or hose. Damaged component.	Check for and remove any blockages. If noise persists, contact customer support.

7. SPECIFICATIONS

Technical specifications for the Generic Cordless Stick Vacuum Cleaner (Model US2EFS7KB7AZP2Q2GV):



Image: Product dimensions, illustrating the overall height and base measurements.

- **Brand:** Generic
- **Model Name:** US2EFS7KB7AZP2Q2GV
- **Form Factor:** Stick
- **Color:** Multicolor
- **Product Dimensions:** 15.87"L x 8.7"W x 3.7"H (Main Unit)
- **Item Weight:** Approximately 360g (body) *(Note: '818 pounds' listed in product data is likely a typo for shipping weight)*
- **Battery Capacity:** 1200mAh
- **Power:** 120W
- **Charging Type:** Type-C
- **Included Components:** Cordless Vacuum Cleaner, 2x Extension Rod, Charging Cable, Washable HEPA Filter, Multifunctional Brush, Floor Brush

8. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer.

Extended protection plans may be available for purchase:

- **2-Year Protection Plan:** Available for extended coverage.
- **3-Year Protection Plan:** Available for extended coverage.
- **Complete Protect:** A comprehensive plan covering eligible past and future purchases.

For technical support, replacement parts, or warranty claims, please contact the seller or refer to the customer support information provided with your purchase.

Customer Support: For assistance, please visit the seller's support page or contact them directly through the platform where the product was purchased.