

## VGR VGR-885 S2

# VGR 885 S2 Cordless Barber Clippers and Trimmers Kit Instruction Manual

Model: VGR-885 S2

## 1. INTRODUCTION

---

Thank you for choosing the VGR 885 S2 Cordless Barber Clippers and Trimmers Kit. This professional hair cutting kit is designed for precision and durability, featuring high-performance brushless motors, DLC-coated ceramic blades, and a versatile 21-speed adjustment system. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your new grooming tools.



Image 1.1: The VGR 885 S2 Cordless Barber Clippers and Trimmers Kit, showcasing both the clipper and trimmer units on their magnetic charging bases.

## 2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please read and adhere to the following safety guidelines:

- Always unplug the device before cleaning or changing attachments.
- Keep blades away from children.
- Do not use near water or in wet environments.
- Avoid contact with eyes and face.
- Always supervise children when this product is in use or accessible.
- Dispose of used blades responsibly according to local regulations.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel for assistance.
- Use only the provided charging cables and adapter.

### 3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x Hair Clipper
- 1x Hair Trimmer
- 2x Magnetic Charging Docks
- 2x USB Charging Cables
- 1x Adapter
- 1x Bottle of Lubricant Oil
- 1x Cleaning Brush
- 10x Guide Combs for Clipper (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm, 15mm, 18mm, 21mm, 24mm)
- 4x Guide Combs for Trimmer (1.5mm, 3mm, 4.5mm, 6mm)
- 1x Portable Travel Box

## USB CHARGING

Two charging methods:

1. Charging through adapter with USB cable, charge the device directly by connecting the Type-C socket to the unit.
2. Charging through stand, connect the charging stand with adaptor put the unit on the dock with front direction.



CLIPPER

3

Hours  
charging

260

Minutes  
working

4600

mAh

TRIMMER

2

Hours  
charging

180

Minutes  
working

2000

mAh

## Magnetic suction



Image 3.1: All components of the VGR 885 S2 kit, including the clipper, trimmer, charging bases, guide combs, and accessories, neatly arranged in the portable suitcase.

## 4. SETUP

### 4.1 Initial Charging

Before first use, fully charge both the clipper and trimmer. The devices can be charged using two methods:

1. **Direct USB Charging:** Connect the USB cable directly to the Type-C socket on the device and then to the adapter.
2. **Charging Dock:** Connect the charging stand to the adapter. Place the clipper or trimmer onto its respective dock, ensuring the unit faces forward for proper contact. The magnetic connection will secure the device.

The clipper requires approximately 3 hours for a full charge, providing up to 260 minutes of run time. The trimmer requires approximately 2 hours for a full charge, providing up to 180 minutes of run time. The LED display will indicate battery status.



Image 4.1: Illustration of the two charging methods: direct USB connection and using the magnetic charging dock.

### 4.2 Blade Adjustment (Clipper)



The clipper features a 5-position taper lever for fine-tuning cutting length without a guide comb. Adjust the lever to select lengths from 0.8mm to 2mm (0.8mm, 1.1mm, 1.4mm, 1.7mm, 2mm).



Image 4.2: Diagram showing the 5-level taper lever adjustment on the clipper for precise cutting lengths.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off and Speed Adjustment

Press the power button to turn the device on or off. Both the clipper and trimmer feature a 21-speed adjustment roller. The clipper's speed ranges from 7000 to 9000 RPM, and the trimmer's from 6000 to 8000 RPM. Roll the infinite speed regulation wheel to adjust the motor speed in 100 RPM increments. Scroll forward for acceleration and backward for deceleration.

The integrated LED display shows the current motor speed (RPM) and remaining usage time (MIN).



Image 5.1: Close-up of the clipper's LED display showing RPM and remaining battery life, along with the speed adjustment roller.

The devices also include a spot LED light button for improved visibility during use.

## 5.2 Attaching Guide Combs

Select the appropriate guide comb for your desired hair length. For the clipper, choose from 10 combs ranging from 1.5mm to 24mm. For the trimmer, choose from 4 combs ranging from 1.5mm to 6mm. Align the comb with the blade and push firmly until it clicks into place. Ensure the comb is securely attached before operating the device.

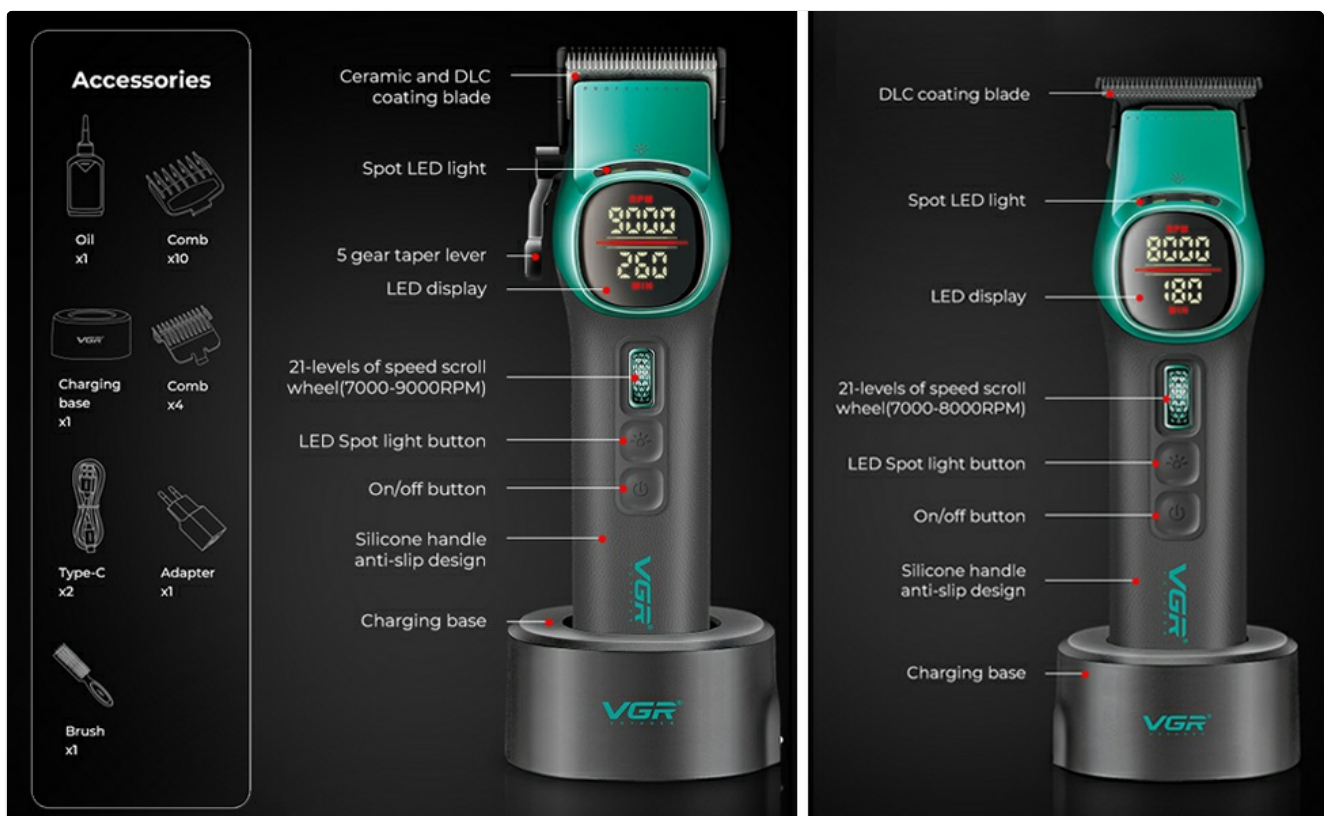


Image 5.2: Visual representation of the various guide comb sizes for both the clipper and trimmer.

The DLC-coated ceramic blades are designed for smooth trimming and reduced skin irritation, suitable for various hair types.

## 6. MAINTENANCE

### 6.1 Cleaning the Blades

After each use, ensure the device is turned off and unplugged. Use the provided cleaning brush to remove any loose hair from the blades and the area around them. For a more thorough cleaning, the blades can be carefully detached and rinsed under running water. Ensure blades are completely dry before reattaching or storing.

### 6.2 Lubrication

Regular lubrication is crucial for maintaining blade performance and longevity. After cleaning and drying the blades, apply a few drops of the provided lubricant oil to the teeth of the blades. Turn on the device for a few seconds to allow the oil to distribute evenly. Wipe off any excess oil.



Image 6.1: Close-up of the DLC-coated ceramic blades, highlighting their precision design for smooth cutting.



## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided charger.
Blades pull hair or cut poorly.	Blades are dull, dirty, or not lubricated.	Clean the blades thoroughly and apply lubricant oil. If problem persists, blades may need replacement.
Device overheats.	Extended continuous use or dirty blades.	Allow the device to cool down. Clean and lubricate blades. Ensure proper ventilation during use.
Charging indicator not working.	Improper connection or faulty charger.	Ensure USB cable and adapter are securely connected. Try a different power outlet.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	VGR-885 S2
Clipper Battery Capacity	4600mAh
Trimmer Battery Capacity	2000mAh
Clipper Charging Time	3 Hours
Trimmer Charging Time	2 Hours
Clipper Working Time	Up to 260 Minutes
Trimmer Working Time	Up to 180 Minutes
Motor Type	Brushless DC (BLDC) Motor
Clipper Speed Range	7000-9000 RPM (21-speed adjustment)
Trimmer Speed Range	6000-8000 RPM (21-speed adjustment)
Blade Material	DLC-Coated Ceramic
Clipper Guide Combs	1.5, 3, 4.5, 6, 9, 12, 15, 18, 21, 24 mm
Trimmer Guide Combs	1.5, 3, 4.5, 6 mm
Power Input	Clipper: 5V=2A, Trimmer: 5V=1A
Package Dimensions	13.58 x 10.91 x 3.35 inches
Item Weight	4.25 Pounds





Image 8.1: A detailed table summarizing the key technical specifications of the VGR 885 S2 kit.

## 9. WARRANTY AND SUPPORT

VGR products are manufactured with high-quality standards. This product comes with a **1-Year Limited Warranty** from the date of purchase, covering defects in materials and workmanship under normal use. For technical assistance, troubleshooting, or warranty claims, please contact VGR customer support. Our support team is available to assist you.



Image 9.1: VGR offers a 1-year warranty and 24-hour customer support for their products.