

Manuals.plus /

› YTE PRO /

› YTE PRO Handheld Cordless Vacuum Cleaner Model X006 User Manual

YTE PRO X006

YTE PRO Handheld Cordless Vacuum Cleaner - Model X006

User Manual

INTRODUCTION

Thank you for choosing the YTE PRO Handheld Cordless Vacuum Cleaner, Model X006. This compact and powerful device is designed for efficient cleaning across various environments, including your car, office, and home. Featuring 10,000PA suction power, a HEPA filter, and a lightweight design, it is ideal for tackling dust, pet hair, and crumbs. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your vacuum cleaner to ensure optimal performance and longevity.

PRODUCT OVERVIEW & WHAT'S IN THE BOX

Your YTE PRO Handheld Cordless Vacuum Cleaner comes with a range of accessories to enhance its versatility.

Image: All components included in the YTE PRO Handheld Cordless Vacuum Cleaner package.

Included Components:

- Handheld Vacuum Unit
- Type-C Charging Cable
- HEPA Filter (pre-installed)
- Long Blow Nozzle
- Multi-surface Brush
- Push-in Brush
- Little Cleaning Brush
- Two Connectors
- Flexible Hose
- User Manual

SETUP

Initial Charging:

Before first use, fully charge the vacuum cleaner. Connect the provided Type-C charging cable to the vacuum and a suitable power source (e.g., adapter, power bank, laptop, car charger). The charging indicator light will illuminate red during charging and turn green when fully charged. A full charge typically takes approximately 3.5 hours and provides up to 25 minutes of runtime.

Fast&Easy Charging
USB A to C Charging Cable

- 2000mAh High Capacity
- Type-C Charging
- 3.5H Fast Charging
- 25-35Min Long RunTime

Power Bank **Laptop** **Adapter** **Car Charger**

Image: Charging options for the YTE PRO Handheld Cordless Vacuum Cleaner.

Attaching Accessories:

Select the appropriate nozzle or brush for your cleaning task. Attach it firmly to the vacuum's suction port. For extended reach or specific angles, use the flexible hose with the connectors. The small connector is

typically used to attach the hose to the vacuum cleaner end, allowing other accessories to be connected to the hose.



Image: Instructions for attaching the flexible hose and other accessories.

OPERATING INSTRUCTIONS

Powering On/Off:

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn it off. The vacuum operates at a single power level, providing consistent 10,000PA suction.

Using Attachments:

- **Multi-surface Brush:** Ideal for carpets, upholstery, and general debris.
- **Push-in Brush:** Suitable for cleaning pet hair from fabrics and tight corners.
- **Crevice Nozzle:** Designed for reaching narrow gaps, car interiors, and furniture crevices.
- **Flexible Hose:** Provides extended reach for awkward spaces, such as under seats or behind furniture.

4 IN 1 For Various Scenarios



Multi-surface Brush



Push-in Brush



Crevice Nozzle



Flexible Hose

Image: Versatile attachments for different cleaning needs.



Flexible Hose

Suitable for cleaning all kinds of hard to reach corners



Image: Examples of the vacuum cleaner's use in various settings.

The powerful 10,000PA suction, driven by vortex technology, effectively picks up various debris including dust, hair, food residue, paper, and beans.

Strong Suction

99% efficient dust removal



33000RPM
Powerful Motor



Image: Demonstration of the vacuum's strong suction capability.

MAINTENANCE

Regular maintenance ensures your vacuum cleaner continues to perform efficiently.

4-Step Filter Care Guide

Quick & Easy to Clean Up



Image: Four-step filter care guide.

Cleaning the Dust Cup and Filter:

1. Rotate the dust cup according to the unlocking label to detach it from the main unit.
2. Remove the HEPA filter from the dust cup.
3. Empty the collected debris from the dust cup into a trash receptacle.
4. Rinse the dust cup and HEPA filter under running water. Use the small cleaning brush to remove any stubborn debris from the filter pleats.
5. Allow both the dust cup and filter to air dry completely before reassembling. **Important: Ensure the vacuum cleaner and filter are completely dry before re-use to prevent damage.**



Image: Detailed steps for cleaning the handheld vacuum.

TROUBLESHOOTING

If you encounter any issues with your YTE PRO Handheld Cordless Vacuum Cleaner, please refer to the following common solutions:

- **Reduced Suction:** Check if the dust cup is full and needs emptying. Ensure the HEPA filter is clean and dry. Verify that no attachments or the suction inlet are blocked by large debris.
- **Vacuum Not Turning On:** Ensure the battery is fully charged. If the charging indicator light is not on when connected, check the charging cable and power source.
- **Short Battery Life:** Ensure the unit is fully charged before use. Battery life can vary based on usage intensity.
- **Unusual Noise:** Check for any obstructions in the suction path or within the dust cup/filter assembly.

If problems persist after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	YTE PRO
Model Name	X006
Special Feature	Cordless, HEPA Filtration, Large Capacity Dust Cup, Lightweight, Portable
Filter Type	HEPA Filter
Is Cordless?	Yes
Capacity	400 Milligrams
Maximum Suction	10000 PA (equivalent to 1000 Meters in some contexts, but PA is the correct unit for suction)
Recommended Uses	Car, Office, Home, Pet Hair
Form Factor	Handheld
Color	Gray
Product Dimensions	13.6"L x 3.3"W x 4.1"H
Battery Life	Up to 25 minutes
Item Weight	1.1 pounds
Batteries Required	1 x 9V battery (included)



Image: Product dimensions for the YTE PRO Handheld Cordless Vacuum Cleaner.

WARRANTY & SUPPORT

The YTE PRO Handheld Cordless Vacuum Cleaner comes with an 18-month warranty. For warranty claims, product inquiries, or technical assistance, please refer to the contact information provided in your product packaging or visit the official YTE PRO website. Our customer support team is available to assist you with any questions or concerns.