

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [realme](#) /

› [realme C71 4G Smartphone User Manual](#)

realme RMX5313

realme C71 4G Smartphone User Manual

Model: RMX5313

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your realme C71 4G Smartphone. Please read this manual thoroughly to ensure proper use and to maximize the performance of your device.

PACKAGE CONTENTS

Verify that your package contains the following items:

- realme C71 Handset
- Charger
- USB Data Cable
- SIM Tray Ejector
- Phone Case



Image: Contents of the realme C71 smartphone package, including the phone, charger, cable, SIM ejector, and phone case.

DEVICE OVERVIEW

Familiarize yourself with the physical features of your realme C71 smartphone.



Image: Front and rear view of the realme C71 smartphone, highlighting its design and camera module.

- **Front Camera:** For selfies and video calls.
- **Earpiece:** For audio during calls.
- **Volume Buttons:** Adjust media and call volume.
- **Power Button:** Turn the device on/off, lock/unlock screen.
- **USB Port:** For charging and data transfer.
- **Speaker:** For audio output.
- **SIM Card Tray:** Insert SIM and microSD cards.
- **Rear Cameras:** For high-quality photos and videos.
- **Flash:** Provides illumination for photos in low light.

SETUP

1. Inserting SIM and microSD Cards

1. Locate the SIM card tray on the side of your phone.
2. Insert the SIM tray ejector tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card into the tray with the gold contacts facing down, ensuring they are correctly aligned.
4. Carefully push the tray back into the phone until it clicks into place.

2. Initial Power On

1. Press and hold the **Power Button** until the realme logo appears.
2. Follow the on-screen prompts to select your language, connect to Wi-Fi, and set up your Google account.

3. Charging the Battery

Connect the USB data cable to the phone's USB port and the charger. Plug the charger into a power outlet. The battery indicator will show charging status.

OPERATING

Basic Navigation

- **Touch:** Tap an icon to open an app or select an item.
- **Swipe:** Move your finger across the screen to scroll or navigate between screens.
- **Pinch:** Use two fingers to zoom in or out on images and web pages.
- **Long Press:** Press and hold an item for more options.

Calls and Contacts

To make a call, open the **Phone** app, enter the number, and tap the call icon. To add a contact, open the **Contacts** app and tap the add new contact icon.

Messaging

Open the **Messages** app to send and receive SMS/MMS messages.

Internet and Connectivity

- **Wi-Fi:** Go to **Settings > Wi-Fi** to connect to available networks.
- **Mobile Data:** Go to **Settings > Mobile Network** to enable or disable mobile data.
- **Bluetooth:** Go to **Settings > Bluetooth** to pair with other Bluetooth devices.

Camera

Open the **Camera** app. Tap the shutter button to take a photo. Swipe left or right to switch between photo, video, and other modes.

Up to 24 GB Dynamic
RAM Upto 128 GB



Image: realme C71 smartphone screen showcasing the dynamic RAM feature with various app icons.

Display Settings

Adjust brightness, screen timeout, and eye comfort mode in **Settings > Display & Brightness**. The 90Hz Eye Comfort Display provides a smoother visual experience.

Battery Management

Your realme C71 features a 6300mAh battery. To optimize battery life, go to **Settings > Battery** to view usage, enable power saving modes, and manage app power consumption.

MAINTENANCE

Cleaning Your Device

Use a soft, lint-free cloth to gently wipe the screen and body of your phone. Avoid using harsh chemicals or abrasive materials.

Software Updates

Regularly check for system updates to ensure your device has the latest features and security patches. Go to **Settings > About device > Up to date**

Storage Management

To free up storage space, regularly clear cache, uninstall unused apps, and transfer large files to cloud storage or an external device. Go to **Settings > Storage**.

TROUBLESHOOTING

Problem	Solution
Device does not power on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, perform a force restart by holding the Power button for 10-15 seconds.
Apps are crashing or freezing	Clear the cache of the problematic app (Settings > Apps > [App Name] > Storage > Clear cache). If the issue persists, uninstall and reinstall the app. Ensure your device software is up to date.
Poor battery life	Reduce screen brightness, disable unused features like Wi-Fi or Bluetooth, close background apps, and check battery usage in Settings to identify power-hungry applications.
Cannot connect to Wi-Fi	Restart your phone and Wi-Fi router. Forget the network in Wi-Fi settings and reconnect. Ensure the Wi-Fi password is correct.

SPECIFICATIONS

Feature	Detail
Model Number	RMX5313

Feature	Detail
Operating System	Android 14
RAM	4 GB (up to 24 GB Dynamic RAM)
Internal Storage	64 GB (expandable up to 128 GB via microSD)
Display	6.745 inch, 90Hz Eye Comfort Display
Battery Capacity	6300mAh
Cameras	37MP (main rear camera)
Processor	Unisoc T7250 Chip (CPU Speed: 1.6 GHz, CPU Model: 80C31)
Connectivity	4G, Bluetooth, USB, Wi-Fi, GPS
Audio Jack	3.5 mm
Dimensions	16.72 x 7.66 x 0.79 cm
Weight	200 g
IP Rating	IP54

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Use only realme-approved chargers and accessories.
- Avoid dropping or subjecting the device to severe impact.
- Do not attempt to disassemble or repair the device yourself. Refer to authorized service personnel.
- Dispose of the device and its battery responsibly according to local regulations.

WARRANTY AND SUPPORT

Your realme C71 smartphone comes with a limited warranty. For detailed warranty terms and conditions, please refer to the warranty card included in your package or visit the official realme website.

For technical support, product inquiries, or service requests, please contact realme customer service through their official channels.

Online Support: Visit the official realme support website.

Customer Service Hotline: Refer to your regional realme website for contact numbers.