

Schneider 43A1

SCHNEIDER TV LED 4K - 43A1

USER MANUAL

1. Introduction

Thank you for choosing the Schneider 43A1 4K UHD LED TV. This television combines advanced display technology with smart features to provide an immersive viewing experience. Featuring a 4K Ultra High Definition display, QLED-LCD technology with Direct LED backlighting, and the VIDAA Smart TV platform, your new TV offers vibrant colors, deep blacks, and access to a wide range of entertainment.

This manual provides essential information for the safe and efficient use of your television. Please read it thoroughly before operating the device and retain it for future reference.



Image 1.1: Front view of the Schneider 43A1 TV with VIDAA interface.

2. Safety Information

To ensure safe operation and prevent damage, please observe the following safety precautions:

- **Placement:** Position the TV on a stable, level surface. Avoid placing it in direct sunlight, near heat sources, or in environments with high humidity or dust.
- **Ventilation:** Ensure adequate ventilation around the TV. Do not block ventilation openings. Maintain a minimum distance of 10 cm from walls or other objects.
- **Power Supply:** Use only the specified power supply voltage. Ensure the power cord is not pinched or walked on. Disconnect the power plug during lightning storms or when unused for extended periods.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Liquids:** Do not expose the TV to dripping or splashing liquids. Do not place objects filled with liquids, such as vases, on the TV.
- **Children:** Supervise children to ensure they do not climb on the TV or furniture.
- **Wall Mounting:** If wall-mounting, use a VESA compatible bracket (200 x 200 mm) and ensure proper installation by qualified personnel to prevent injury.

3. Package Contents

Please check that all items are present and in good condition:

- Schneider 43A1 4K UHD LED TV
- Remote Control
- Power Cable
- TV Stand (2 pieces)
- Screws for TV Stand
- User Manual (this document)

4. Setup

4.1 Unpacking

Carefully remove the TV from its packaging. It is recommended to keep the original packaging for potential future transport or service needs.

4.2 Stand Installation

If you are not wall-mounting the TV, attach the included stand pieces to the bottom of the TV using the provided screws. Ensure the stand is securely fastened before placing the TV upright.

4.3 Wall Mounting (Optional)

The Schneider 43A1 is compatible with VESA 200 x 200 mm wall mounts. For safe installation, it is highly recommended to use a professional installer. Refer to your wall mount's instructions for specific details.

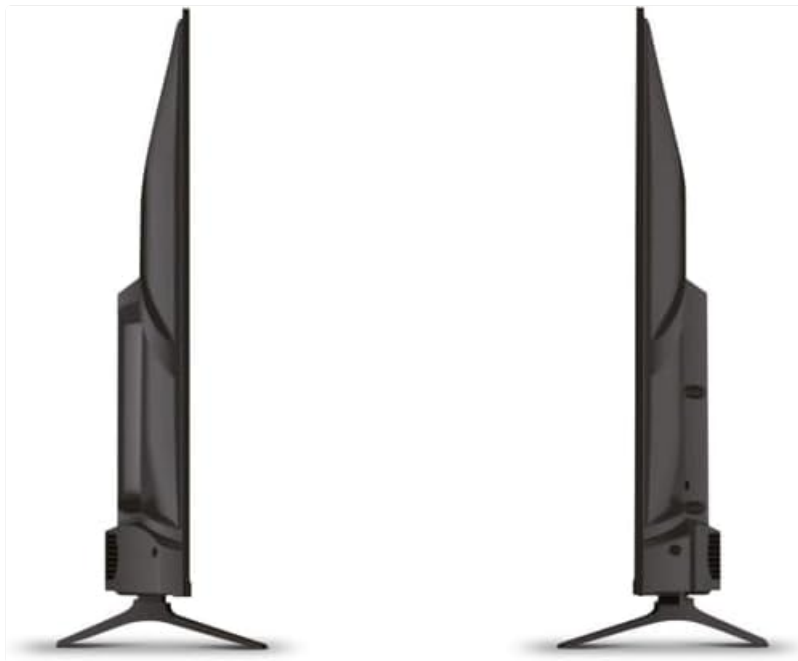


Image 4.1: Side view of the Schneider 43A1 TV, illustrating its profile for placement or wall mounting.

4.4 Connecting External Devices

Your TV offers various connectivity options:

- **HDMI:** Connect up to three HDMI 2.0 devices (e.g., Blu-ray player, game console, set-top box) to the HDMI ports.
- **USB:** Two USB ports are available for connecting USB storage devices to play media.
- **AV/Audio Input:** For older devices requiring composite video and stereo audio.
- **Coaxial Output:** For connecting to an external audio system.
- **Antenna/Cable Input:** Connect your antenna or cable TV signal for DVB-T/T2/C/S2 reception.



Image 4.2: Rear view of the Schneider 43A1 TV, highlighting connection ports.

4.5 Connecting Power

Plug the power cable into the TV's power input, then into a suitable wall outlet.

4.6 Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process. This includes selecting your

language, connecting to a Wi-Fi network, and scanning for available channels (DVB-T/T2/C/S2).

5. Operating

5.1 Remote Control Functions

The remote control allows you to navigate the TV's features:

- **Power Button:** Turns the TV on or off.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes TV channels.
- **Input/Source:** Selects the input source (HDMI, USB, TV Tuner).
- **Navigation Buttons:** For menu navigation.
- **Smart TV Buttons:** Direct access to popular apps like Netflix, Prime Video, YouTube.

5.2 Smart TV (VIDAA)

The integrated VIDAA Smart TV platform provides access to a variety of applications and streaming services. Connect your TV to the internet via Wi-Fi to enjoy features like Netflix, Prime Video, and YouTube. Bluetooth connectivity allows for wireless connection to compatible audio devices.



Image 5.1: Angled front view of the Schneider 43A1 TV, displaying the VIDAA Smart TV interface.

5.3 Input Selection

Press the 'Input' or 'Source' button on your remote control to switch between connected devices (HDMI 1, HDMI 2, HDMI 3, USB, AV, TV Tuner).

5.4 Picture and Sound Settings

Access the TV's menu to adjust picture and sound settings. The 4K UHD resolution, QLED-LCD technology, and Direct LED backlighting ensure a high-quality visual experience. The TV also features upscaling to enhance lower-resolution content. Audio is delivered via 2 x 8 W RMS stereo speakers with Dolby Audio support.

5.5 PC Monitor Mode

The TV can be used as a PC monitor by connecting your computer via an HDMI cable. This mode

optimizes the display for computer use.

6. Maintenance

6.1 Cleaning the TV

Before cleaning, ensure the TV is unplugged from the power outlet.

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (do not spray directly onto the screen).
- **Exterior:** Use a soft, dry cloth to wipe the TV casing. Avoid abrasive cleaners or solvents.

6.2 Software Updates

Your TV may receive software updates to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates automatically or check for them manually through the settings menu.

7. Troubleshooting

If you encounter issues with your TV, refer to the following common problems and solutions:

- **No Power:**
 - Check if the power cable is securely plugged into the TV and the wall outlet.
 - Ensure the wall outlet is functioning (test with another device).
 - Press the power button on the remote control or on the TV itself.
- **No Picture/Sound:**
 - Verify the correct input source is selected (e.g., HDMI 1, TV).
 - Check all cable connections between the TV and external devices.
 - Ensure the volume is not muted or set to minimum.
 - If using an antenna, check the antenna connection and perform a channel scan.
- **Remote Control Not Working:**
 - Replace the batteries in the remote control.
 - Ensure there are no obstructions between the remote and the TV's IR sensor.
- **Smart TV/Network Issues:**
 - Check your Wi-Fi router and internet connection.
 - Go to the TV's network settings to re-connect to your Wi-Fi network.
 - Restart the TV and your router.

If the problem persists after trying these solutions, please contact customer support.

8. Specifications

Feature	Specification
Model	Schneider 43A1

Display Size	109 cm (43 inches)
Resolution	4K Ultra HD (3840 x 2160 pixels)
Display Technology	QLED-LCD with Direct LED Backlight
Contrast Ratio	1100:1
Brightness	200 cd/m ²
Audio Output	2 x 8 W RMS Stereo
Audio Technology	Dolby Audio
HDMI Ports	3 (HDMI 2.0)
USB Ports	2
Other Inputs	AV/Audio Input
Outputs	Coaxial Output
Tuner	DVB-T/T2/C/S2
Smart TV Platform	VIDAA (Netflix, Prime Video, YouTube)
Wireless Connectivity	Wi-Fi, Bluetooth
VESA Compatibility	200 x 200 mm
Weight	7.5 Kilograms