

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [WDZP](#) /
- › [WDZP Under Desk Elliptical Machine Remote Control User Manual](#)

WDZP Under Desk Elliptical Machine Remote Control

WDZP Under Desk Elliptical Machine Remote Control User Manual

Model: Under Desk Elliptical Machine Remote Control


1. PRODUCT OVERVIEW

This remote control is designed for use with various under-desk elliptical machines. It provides convenient wireless operation for functions such as starting/stopping, changing direction, adjusting speed, and selecting modes.



Image 1.1: Front and back view of the WDZP Under Desk Elliptical Machine Remote Control. The front features control buttons, while the back shows the battery compartment.

Treadmill Remote brings you benefits



Feature	Treadmill Remote Control	WITHOUT REMOTE
Safety	Can be held easily while running, offering quick control in case of emergency.	May require you to stop running to adjust settings.
Ease of Use	Simple buttons for quick adjustments.	Can require navigation through several screens.
Accuracy	Instant, precise control over speed and incline.	May have a slight delay due to Bluetooth connection.
Distraction-Free	No phone notifications or distractions.	Can be interrupted by messages, calls, or app notifications.
Portability	Lightweight and easy to carry around.	Relies on your phone, which may be bulky or heavy.

Image 1.2: Close-up view of the WDZP remote control highlighting its buttons and functions. Buttons include START/STOP, MODE, DIRECTION, SPEED (up/down arrows), FUNCTION, and POWER.

Compatibility

This remote control is compatible with the following under-desk elliptical machine models:

- VIVURN 018
- Putnen MF-H-01
- HJDFGSS D802
- CURSOR Fitness C5
- GEONEO S200
- Medilax P70324
- Morelax M858
- DOMNIU
- Yagud ZF0801
- Roylvan TD05-EB-010

for Putnen MF-H-01, HJDFGSS D802, CURSOR Fitness C5,
GEONEO S200, Medilax P70324, Morelax M858, DOMNIU,
Yagud ZF0801, Roylvan TD05-EB-010 Under Desk Elliptical Remote



Perfectly compatible with your device

Image 1.3: WDZP remote control positioned in front of an under-desk elliptical machine, illustrating its compatibility and intended use.

2. SETUP

Battery Installation

The remote control requires two AAA batteries (not included) for operation. No programming is required; simply install the batteries, and the remote will be ready for use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.

No Setup • No App • No Stress



Image 2.1: Illustration demonstrating the correct method for installing two AAA batteries into the remote control's battery compartment.

3. OPERATING INSTRUCTIONS

The remote control utilizes infrared technology, providing a strong signal within a range of 12 meters (40 feet) and a 180-degree emission angle.

Ready to Use / No Setup Required / Easy Operation



Image 3.1: A user is shown operating an under-desk elliptical machine with the WDZP remote control, demonstrating typical usage and convenience.

Button Functions

- **POWER:** Turns the elliptical machine on or off.
- **START/STOP:** Initiates or pauses the elliptical machine's movement.
- **MODE:** Cycles through different operating modes or programs of the elliptical machine.
- **DIRECTION:** Changes the direction of the elliptical's pedal movement.
- **SPEED (▲/▼):** Adjusts the speed of the elliptical machine. Press ▲ to increase speed, and ▼ to decrease speed.
- **FUNCTION:** Activates additional functions or settings specific to your elliptical model. Refer to your elliptical machine's manual for details.



Image 3.2: This chart highlights the benefits of using a dedicated remote control for fitness equipment, including enhanced safety, ease of use, accuracy, and portability, compared to operating without one.

4. MAINTENANCE

To ensure optimal performance and longevity of your remote control:

- Keep the remote control clean and dry. Avoid exposure to liquids.
- Clean the surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.
- Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If the remote control is not functioning as expected, consider the following:

- **No response from elliptical:** Ensure the batteries are correctly installed and not depleted. Replace batteries if necessary.
- **Intermittent response:** Check for any obstructions between the remote control and the elliptical machine's infrared receiver. Ensure you are within the effective operating range (up to 12 meters).

- **Specific function not working:** Verify that the elliptical machine is powered on and that the function is supported by your specific elliptical model.

If issues persist after following these steps, refer to the warranty and support information.

6. SPECIFICATIONS

Brand	WDZP
Model	Under Desk Elliptical Machine Remote Control
ASIN	B0FHPFZMHQ
Package Dimensions	1.5 x 1 x 0.55 inches
Item Weight	0.705 ounces
Color	White/Black
Special Feature	Ergonomic design
Max Number of Supported Devices	1 (per remote)
Compatible Devices	Elliptical machines (specific models listed in Section 1)
Remote Technology	Infrared
Remote Distance	Up to 12 meters (40 feet)



Image 6.1: This image provides the physical dimensions of the remote control: approximately 4.72 inches in length, 0.59 inches in width, and 1.96 inches in depth.

7. WARRANTY AND SUPPORT

The WDZP remote control comes with a 6-month warranty. This warranty covers manufacturing defects and quality issues. For support, including free exchange or refund for eligible issues, please contact the manufacturer or seller.

Manufacturer: WDZP