

Tenda CP3-V3.0

Tenda 2K Indoor Security Camera CP3-V3.0 Instruction Manual

Model: CP3-V3.0 | Brand: Tenda

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your Tenda 2K Indoor Security Camera CP3-V3.0. Please read this guide thoroughly before use to ensure optimal performance and safety.

WHAT'S IN THE BOX

- Tenda CP3 Indoor Security Camera
- 64GB Memory card
- Power Adapter
- Quick Installation Guide
- Wall-Mounted Accessory Kit

SETUP GUIDE

Follow these steps to set up your Tenda CP3 camera:

1. **Power On:** Connect the camera to the power adapter using the provided USB cable and plug it into a power outlet. The camera is corded electric and not battery-powered.
2. **Download App:** Scan the QR code in the Quick Installation Guide or search for the "Tenda Security" app in your mobile app store (iOS/Android).
3. **Account Creation:** Open the app and create an account or log in if you already have one.
4. **Add Device:** Follow the in-app instructions to add your CP3 camera. This typically involves scanning a QR code displayed on your phone with the camera's lens. Ensure your Wi-Fi network is 2.4 GHz (5GHz is not supported).
5. **Mounting (Optional):** Use the included wall-mounted accessory kit to install the camera on a ceiling or wall if desired. The camera also features rubber feet for stable placement on flat surfaces.

No blind spots

355°



Image: Tenda CP3 Camera with its power adapter, USB cable, and wall-mounting kit.

OPERATING INSTRUCTIONS

360° Monitoring & Pan/Tilt Control

The Tenda CP3 offers a 355° horizontal pan and 70° vertical tilt, providing comprehensive coverage without blind spots. Use the mobile app to remotely control the camera's viewing angle. You can also set up automatic patrol modes for continuous monitoring of specific areas.

Automatic Patrol Modes

Standard and Custom Patrol Options

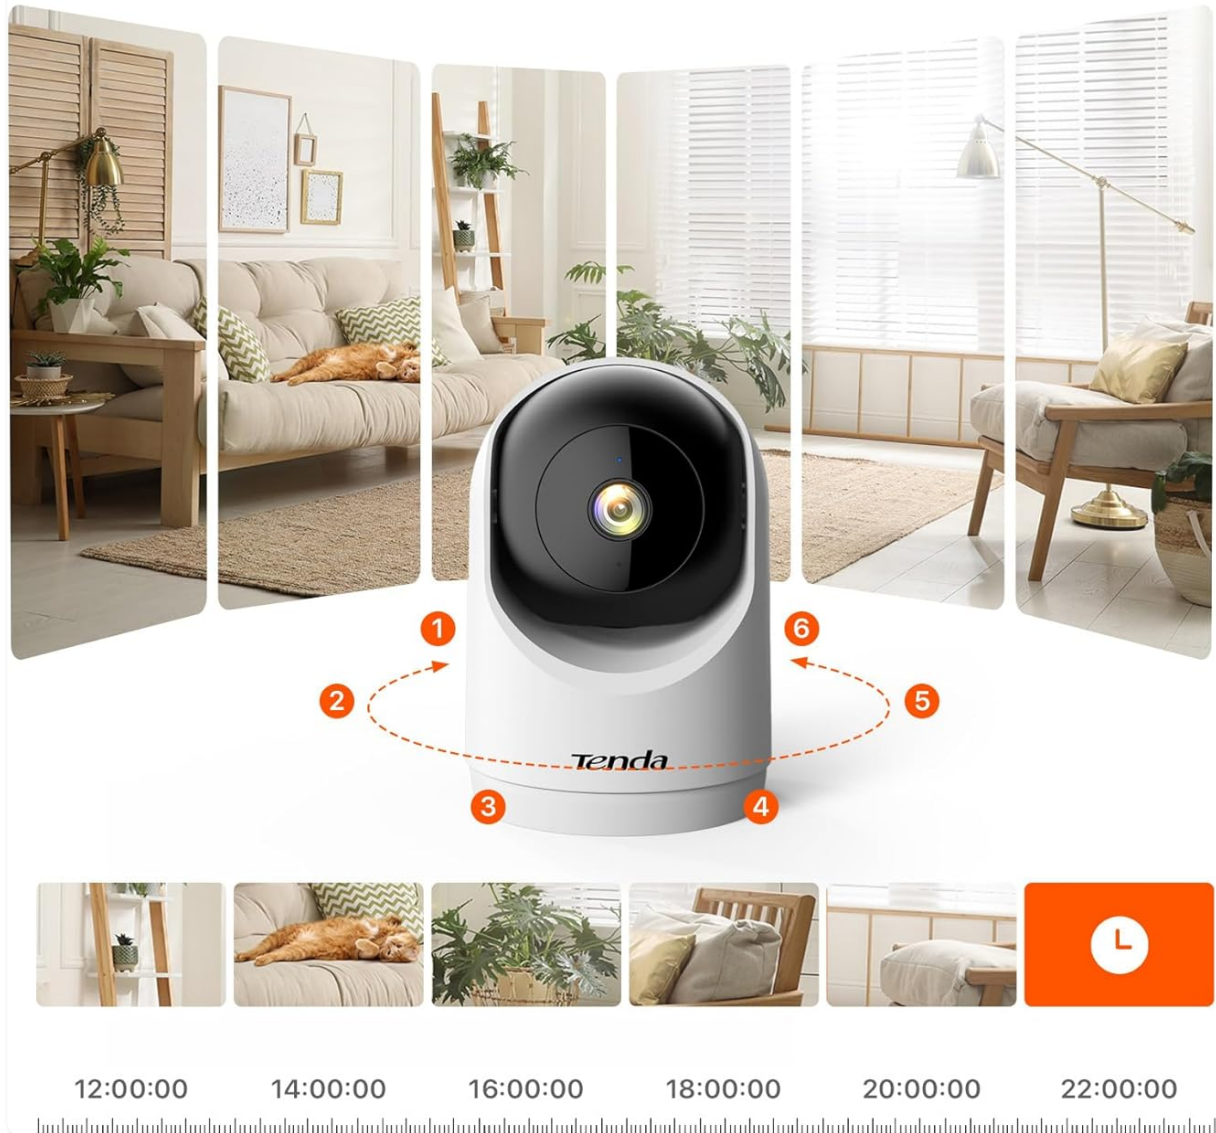


Image: Tenda CP3 Camera rotating horizontally to cover a wide area of a room.

Motion Detection & Real-Time Alerts

The camera supports motion and human detection. When abnormal movement is detected, the app will send real-time notifications and alarm sounds to your mobile device. You can customize detection areas and sensitivity levels within the app settings.

Motion Detection & Smart Tracking

The camera can automatically track moving people, and the APP will send a notification

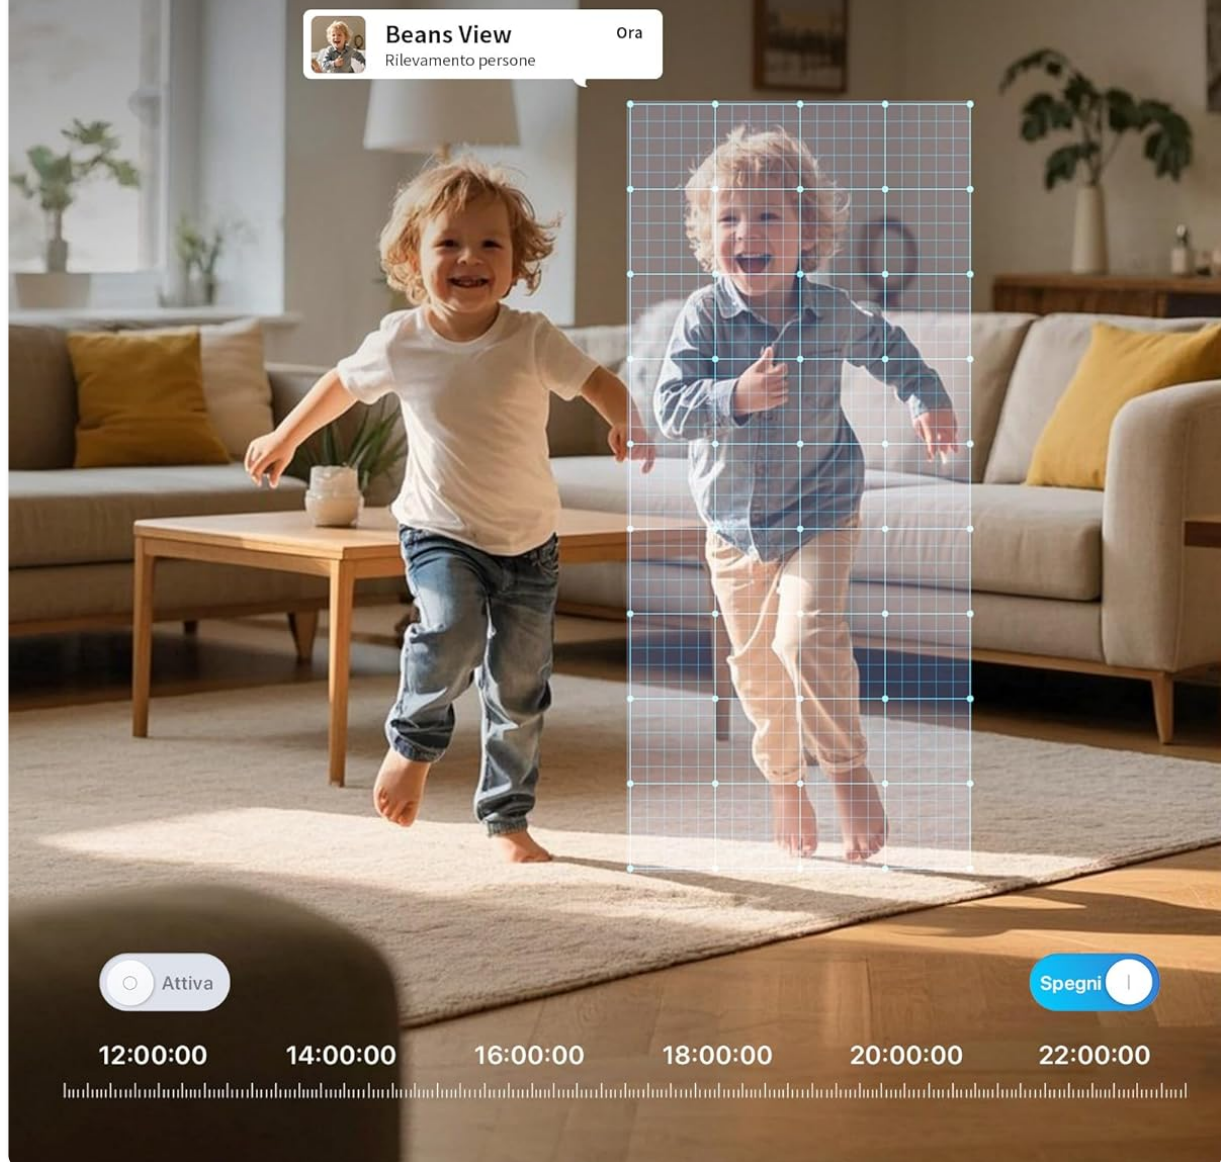


Image: Tenda CP3 Camera tracking the movement of two children in a living room, with a grid overlay indicating motion detection.

Two-Way Audio

Utilize the built-in two-way audio feature to communicate through the camera. This allows you to comfort pets or babies, or issue warnings to intruders directly from your phone.

Two-way Voice & Family Sharing

You or your family can communicate with the baby through the camera



Image: A child and a dog in a living room, with speech bubbles indicating two-way audio communication through the Tenda CP3 Camera.

Night Vision

Equipped with an intelligent infrared algorithm and four infrared fill lights, the CP3 provides clear black and white night vision up to 33 feet (10 meters) in dark environments.

Privacy mode & 12m night vision

You can customize the time to turn off the camera



Image: A Tenda CP3 Camera monitoring a sleeping child in a dimly lit room, demonstrating its night vision capabilities.

Storage Options

The Tenda CP3 supports multiple storage methods:

- **Micro SD Card:** Supports up to 256GB for local storage. A 64GB card is included with this model.
- **Cloud Storage:** Offers 24/7 cloud storage with triple encryption protection. Free cloud storage for the first three months is typically included.
- **NVR/NAS:** Supports NVR/NAS for recording storage via Tenda protocol or Onvif protocol (for Tenda NVR only).

Multiple storage methods



**SD card up to
256GB**

**Tenda NVR 24/7
Video Storage**



**TDSEE free cloud storage
for the first 3 months**



Image: A Tenda CP3 Camera highlighting its multiple storage options: Micro SD card, Tenda NVR 24/7 Video Storage, and TDSEE free cloud storage for the first 3 months.

Privacy Features

The CP3 includes a timed masking function to protect your privacy. You can set schedules for the camera lens to turn off monitoring and recording.



Image: A Tenda CP3 Camera demonstrating its privacy mode, where the lens is physically shuttered during specified times.

SPECIFICATIONS

Feature	Detail
Indoor/Outdoor Usage	Indoor
Video Capture Resolution	2K (2304x1296)

Connectivity Technology	Wireless (2.4 GHz Wi-Fi 6)
Power Source	Corded Electric
Special Feature	Motion Sensor, 2-Way Audio, Night Vision, Pan/Tilt
Mounting Type	Ceiling Mount, Wall Mounting, Tabletop
Item Dimensions (L x W x H)	3 x 3 x 4.34 inches
Item Weight	12.3 ounces
Included Components	64GB Memory card, Power Adapter, Quick Installation Guide, Tenda CP3 Indoor Security Camera, Wall-Mounted Accessory Kit

MAINTENANCE

- **Cleaning:** Gently wipe the camera lens and body with a soft, dry cloth. Avoid using liquid cleaners.
- **Firmware Updates:** Regularly check the Tenda Security app for firmware updates to ensure optimal performance and security.
- **Storage Management:** Periodically review recorded footage and manage your SD card or cloud storage to prevent data overflow.

TROUBLESHOOTING

- **Connection Issues:** Ensure your Wi-Fi is 2.4 GHz and the camera is within range. Try restarting your router and the camera.
- **App Not Responding:** Close and reopen the app. If the issue persists, reinstall the app.
- **Poor Video Quality:** Check your internet connection speed. Ensure the camera lens is clean and free from obstructions.
- **Motion Detection Not Working:** Verify motion detection is enabled in the app settings and adjust sensitivity levels.

WARRANTY & SUPPORT

For warranty information and customer support, please refer to the Quick Installation Guide included in your package or visit the official Tenda website. You can also contact Tenda Official seller support directly through the Amazon platform.