

Eastar EUP-80

Eastar EUP-80 Digital Piano User Manual

Model: EUP-80

[Box](#) [Setup](#) [Operation](#) [Introduction](#) [Features](#) [What's in the](#)
[Connectivity](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty &](#)
[Support](#)

1. INTRODUCTION

Thank you for choosing the Eastar EUP-80 Digital Piano. This instrument is designed to provide a rich and responsive playing experience for beginners and experienced musicians alike. Featuring 88 velocity-sensitive keys, a wide array of tones and rhythms, and versatile connectivity options, the EUP-80 is suitable for various musical applications. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your digital piano.



Figure 1: Eastar EUP-80 Digital Piano

2. PRODUCT FEATURES

- **Responsive Velocity-Sensitive Keyboard:** The EUP-80 features 88 full-size, touch-sensitive keys, offering a dynamic and customizable playing experience. The keys are designed for stable and accurate performance.



SPLIT MODE FOR DUAL VOICE PERFORMANCE

Independent voices for each side
— mix, play, and perform with freedom.

Figure 2: Responsive Velocity-Sensitive Keyboard with Touch Sensitivity Graph

- **Abundant Function Panel:** The control panel integrates buttons for various functions including split, chord, record, metronome, and transposition. It offers 128 tones, 128 rhythms, and 60 demo songs.



Multi-Function, Minimal Design

Wood-Grain Anti-Slip Keys

Figure 3: Control Panel with Essential Functions

- **Multiple Connectivity Options:** The piano provides versatile connection options such as MIDI USB, pedal input, power interface, aux out, and a headphone jack.



Figure 4: Connectivity Ports

- **Beginner-Friendly Kit:** The EUP-80 digital piano set includes headphones, piano stickers for learning, a sustain pedal, a music stand, and a power adapter, making it suitable for beginners.



Figure 5: Included Accessories

- **Space-Saving Design:** The piano features a unique and elegant wood grain design with a compact body, allowing for flexible placement in various home environments.



Figure 6: Slim and Space-Saving Design

3. WHAT'S IN THE BOX

Upon unpacking, please ensure all the following items are present:

- Eastar EUP-80 Digital Piano
- Headphones
- Sustain Pedal
- Music Stand
- Piano Stickers
- Power Adapter (DC 12V 3A)
- User Manual (this document)

4. SETUP INSTRUCTIONS

4.1 Assembling the Stand

The Eastar EUP-80 Digital Piano comes with a detachable stand. Follow these steps to assemble it:

1. Carefully remove all components from the packaging.
2. Attach the four legs to the main piano body using the provided screws. Ensure they are securely

fastened.

3. Place the assembled piano on a stable, flat surface.

4.2 Connecting the Sustain Pedal

Connect the sustain pedal cable to the "PEDAL" port located on the rear panel of the piano.

4.3 Power Connection

Connect the power adapter to the "DC 12V" power interface on the rear panel of the piano, then plug the adapter into a standard electrical outlet.

4.4 Music Stand Placement

Insert the music stand into the designated slot on top of the piano.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **Power** button (usually located on the control panel) to turn the piano on or off.

5.2 Volume Control

Adjust the master volume using the **VOLUME** knob on the control panel. Rotate clockwise to increase volume, counter-clockwise to decrease.

5.3 Selecting Tones, Rhythms, and Demo Songs

Use the **TONE/DEMO/RHYTHM** button to cycle through modes. Once a mode is selected, use the **NEXT** button or specific number keys (if available) to select the desired tone, rhythm, or demo song.

5.4 Metronome Function

Press the **METRONOME** button to activate the metronome. Adjust the tempo using the appropriate controls (refer to the specific button layout on your piano).

5.5 Advanced Functions (Split, Chord, Record, Transpose)

The EUP-80 includes various advanced functions accessible via dedicated buttons or combinations with the **FUNCTION** button.

- **Split:** Divides the keyboard into two sections, each with a different voice.
- **Chord:** Enables chord playing modes.
- **Record:** Allows recording and playback of your performances.
- **Transpose:** Shifts the pitch of the entire keyboard up or down.

Refer to the detailed instructions in the full manual for specific steps on activating and adjusting these functions.

Your browser does not support the video tag.

Video 1: Overview of Eastar EUP-80 Digital Piano features and sound. This video demonstrates the piano's design, key action, connectivity, and various tones and rhythms.

6. CONNECTIVITY

The Eastar EUP-80 offers several ports for connecting to external devices:

- **PEDAL:** For connecting the included sustain pedal.
- **MIDI USB:** Connect to a computer or other MIDI devices for recording, software control, or educational applications.
- **SUS (Sustain):** An alternative or additional sustain pedal input.
- **OUT (Aux Out):** Connect to external speakers, amplifiers, or recording equipment.
- **PHONE (Headphone Jack):** For private practice using headphones.
- **DC 12V:** Power adapter input.

7. MAINTENANCE

7.1 Cleaning

To clean the piano, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and a mild soap solution, then wipe dry immediately. Avoid using abrasive cleaners, solvents, or waxes, as these can damage the finish.

7.2 Storage and Environment

Store the piano in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid placing heavy objects on the keyboard.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	<ul style="list-style-type: none"> ◦ Power not connected or turned on. ◦ Volume too low. ◦ Headphones connected. 	<ul style="list-style-type: none"> ◦ Ensure power adapter is connected and power button is pressed. ◦ Increase the VOLUME knob. ◦ Unplug headphones if sound is desired from built-in speakers.
Keys not responding	<ul style="list-style-type: none"> ◦ Piano is off. ◦ Incorrect mode selected. 	<ul style="list-style-type: none"> ◦ Turn on the piano. ◦ Check tone selection.
Sustain pedal not working	<ul style="list-style-type: none"> ◦ Pedal not connected correctly. ◦ Faulty pedal. 	<ul style="list-style-type: none"> ◦ Ensure pedal is fully inserted into the "PEDAL" port. ◦ Test with another compatible pedal if available.

9. SPECIFICATIONS

Feature	Detail
Brand	Eastar
Model Name	EUP-80
Item Model Number	EB2046
Number of Keys	88

Feature	Detail
Key Type	Velocity-Sensitive, Full-Size
Tones	128
Rhythms	128
Demo Songs	60
Connectivity Technology	MIDI USB, Aux Out
Connector Type	USB
Headphones Jack	3.5mm Jack
Power Source	Corded Electric (DC 12V)
Product Dimensions	15"D x 48"W x 34"H
Item Weight	28.6 pounds
Body Material	Wood
Color	Black
Skill Level	Beginner
Special Features	Headphone Jack, MIDI Controller, Recording, Touch-Sensitive Keys

10. WARRANTY AND SUPPORT

10.1 Product Warranty

Eastar products are covered by a standard manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Eastar website for detailed warranty terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, troubleshooting, or any questions regarding your Eastar EUP-80 Digital Piano, please contact Eastar customer support.

- **Website:** [Visit the Eastar Store on Amazon](#)
- **Email:** Refer to your product packaging or the official website for contact email.
- **Phone:** Refer to your product packaging or the official website for contact phone number.