



Manuals.plus /

› ELEMARA /

› ELEMARA S608 24V 2-Seater XL Ride-On UTV Instruction Manual

## ELEMARA S608

# ELEMARA S608 24V 2-Seater XL Ride-On UTV Instruction Manual

Model: S608 | Brand: ELEMARA

## IMPORTANT SAFETY INFORMATION

---

Read all instructions carefully before assembly and operation. Keep this manual for future reference.

- **Age Range:** Suitable for children aged 3 to 8 years.
- **Maximum Weight Capacity:** Do not exceed 140 lbs (63.5 kg).
- **Seatbelts:** Always ensure children are securely fastened with the provided seatbelts during operation.
- **Adult Supervision:** Constant adult supervision is required. The vehicle can be controlled by a parent using the remote control for younger children or for safety intervention.
- **Terrain:** Designed for various terrains including grass, gravel, pavement, and slight inclines. Avoid steep slopes or uneven surfaces that may cause tipping.
- **Automatic Power-Off:** The vehicle features an automatic power-off function to protect against excessive speed or weight. If activated, wait 3-5 seconds before restarting.
- **Charging:** Only use the provided charger. Do not overcharge.

## WHAT'S IN THE BOX

---

Verify all components are present before beginning assembly:

- ELEMARA S608 Ride-On UTV (main body and components)
- Instruction Manual
- Remote Control
- Charger

## SETUP AND ASSEMBLY

---

Assembly is required. Please refer to the detailed diagrams and step-by-step instructions provided in the included physical manual for precise assembly. A screwdriver may be required. Ensure all connections are secure before initial use.

### Initial Battery Charging

Before first use, fully charge the 24V 10AH battery for 8-12 hours. The battery indicator on the dashboard will show the charge level. Do not charge for more than 12 hours to prevent battery damage.

## Remote Control Setup

The remote control requires AAA batteries (not included). Follow the instructions in the physical manual to pair the remote control with the UTV. Once paired, the remote can adjust speed and direction, providing an extra layer of safety for younger riders.

## OPERATING INSTRUCTIONS

---

### Powering On/Off

Press the 'START/STOP' button on the dashboard to turn the vehicle on or off. An engine sound will indicate power status.

### Driving Modes

- **Child Manual Drive:** The child operates the steering wheel and foot pedal.
- **Parental Remote Control:** An adult can override child control using the remote control to steer, adjust speed, and apply brakes.

### Speed Settings

The UTV offers three speed settings: 3.1 MPH (Low), 3.7 MPH (Mid), and 4.5 MPH (High). These can be adjusted via the dashboard controls or the remote control.

### Multimedia Features

- **Music:** The dashboard features built-in music options.
- **Bluetooth Connectivity:** Connect your device via Bluetooth (search for "YX") to play custom audio.
- **USB/AUX Input:** Use the provided ports for additional audio input.

### Lighting

The UTV is equipped with LED headlights and rear lights for enhanced visibility and realism. These can be turned on/off via dashboard controls.



Image: Child driving the ELEMARA S608 UTV, demonstrating both manual steering and parental remote control options.

Your browser does not support the video tag.

Video: A full demonstration and review of the ELEMARA 24V Kids ATV 4WD, showcasing its features and operation.

## MAINTENANCE

---

### Battery Care

- **Charging:** Charge the 24V 10AH battery for 8-12 hours after each use. A voice prompt will alert you when the battery is low.
- **Storage:** If storing the vehicle for an extended period, ensure the battery is fully charged and disconnect it. Recharge every 3 months to maintain battery health.

- **Replacement:** Replacement batteries can be purchased from authorized retailers.

## Cleaning

Wipe down the vehicle with a damp cloth. Avoid using harsh chemicals or abrasive cleaners. Do not spray water directly onto electrical components.

## Tire Care

The UTV features anti-slip durable knobby tires. Regularly inspect tires for wear and tear. Ensure no debris is lodged in the treads.



Image: The anti-slip durable wheels of the ELEMARA S608 UTV are designed for diverse terrains, including concrete, grassland, gravel, and boardwalks.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not move	Low battery; Loose connection; Automatic power-off activated	Charge battery; Check all wire connections; Wait 3-5 seconds and restart.
Vehicle moves slowly	Low battery; Overload (exceeding 140 lbs); Driving on difficult terrain	Charge battery; Reduce weight; Switch to a smoother surface or lower speed setting.
Remote control not working	Batteries dead; Not paired correctly	Replace remote control batteries; Re-pair remote control following manual instructions.

## SPECIFICATIONS

- **Brand:** ELEMARA
- **Model Number:** S608
- **Battery:** 24V 10AH
- **Motor:** 4\*45W
- **Speeds:** 3.1 MPH, 3.7 MPH, 4.5 MPH
- **Dimensions (L x W x H):** 48.2" x 31.5" x 31"
- **Item Weight:** 78 Pounds
- **Material:** Metal, Polypropylene
- **Features:** 2-Seater, 4WD, Remote Control, Bluetooth, LED Lights, 2 Spring Suspension, Soft Start Function, Automatic Power-Off

# Super Powered 24V 10AH

Faster and Stronger



3.1 MPH  
(Low Speed)



3.7 MPH  
(Mid Speed)



4.5 MPH  
(High Speed)



**Low power indicates  
warning sound.**

Image: The powerful 24V 10AH battery and 4\*45W motor of the ELEMARA S608 UTV ensure longer playtimes and robust performance. Speed settings and a low battery warning are also indicated.

## WARRANTY AND SUPPORT

This ELEMARA S608 UTV comes with a **2 Year Limited Warranty**. For warranty claims, technical support, or replacement parts, please contact ELEMARA customer service through your purchase platform or the contact information provided in the original packaging.