

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FUNYET](#) /

› [FUNYET 14-inch Laptop N5095 User Manual](#)

FUNYET DuetBook N5095

FUNYET 14-inch Laptop N5095

USER MANUAL

Model: DuetBook N5095

Introduction

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your FUNYET 14-inch Laptop N5095. Please read this guide thoroughly to ensure optimal performance and longevity of your device.



Image: Front view of the FUNYET 14-inch Laptop N5095, highlighting its key specifications on the screen.

1. Initial Setup

1.1 Unboxing and First Power On

1. Carefully remove the laptop and all accessories from the packaging. The box should contain the laptop, AC adapter, warranty card, and this instruction manual.
2. Connect the AC adapter to the laptop's DC-in port and then to a power outlet.
3. Open the laptop lid. The laptop may power on automatically, or you may need to press the power button located on the keyboard.

1.2 Windows 11 Pro Configuration

Upon first boot, you will be guided through the Windows 11 Pro setup process. Follow the on-screen instructions to:

- Select your region and keyboard layout.
- Connect to a Wi-Fi network.
- Sign in with your Microsoft account or create a new one.
- Set up a PIN for quick login.
- Adjust privacy settings.



Image: The Windows 11 Pro operating system interface shown on the laptop screen.

2. Operating Your Laptop

2.1 Keyboard and Touchpad

The laptop features a full-sized keyboard and a large, responsive touchpad for navigation. Refer to the image below for key layout.



Image: Detailed view of the laptop's keyboard and touchpad.

2.2 Connecting Peripherals

Your laptop is equipped with various ports for connecting external devices:

- **USB 3.0 Ports:** Two ports for high-speed data transfer with USB devices.
- **HDMI Port:** Connect to external displays or projectors.
- **Headphone Jack:** For audio output to headphones or external speakers.
- **TF Card Slot:** For expanding storage with a TF (MicroSD) card.
- **DC-in Port:** For connecting the AC power adapter.

Wireless connectivity includes Bluetooth and Wi-Fi (2.4G/5G) for connecting to networks and wireless accessories.

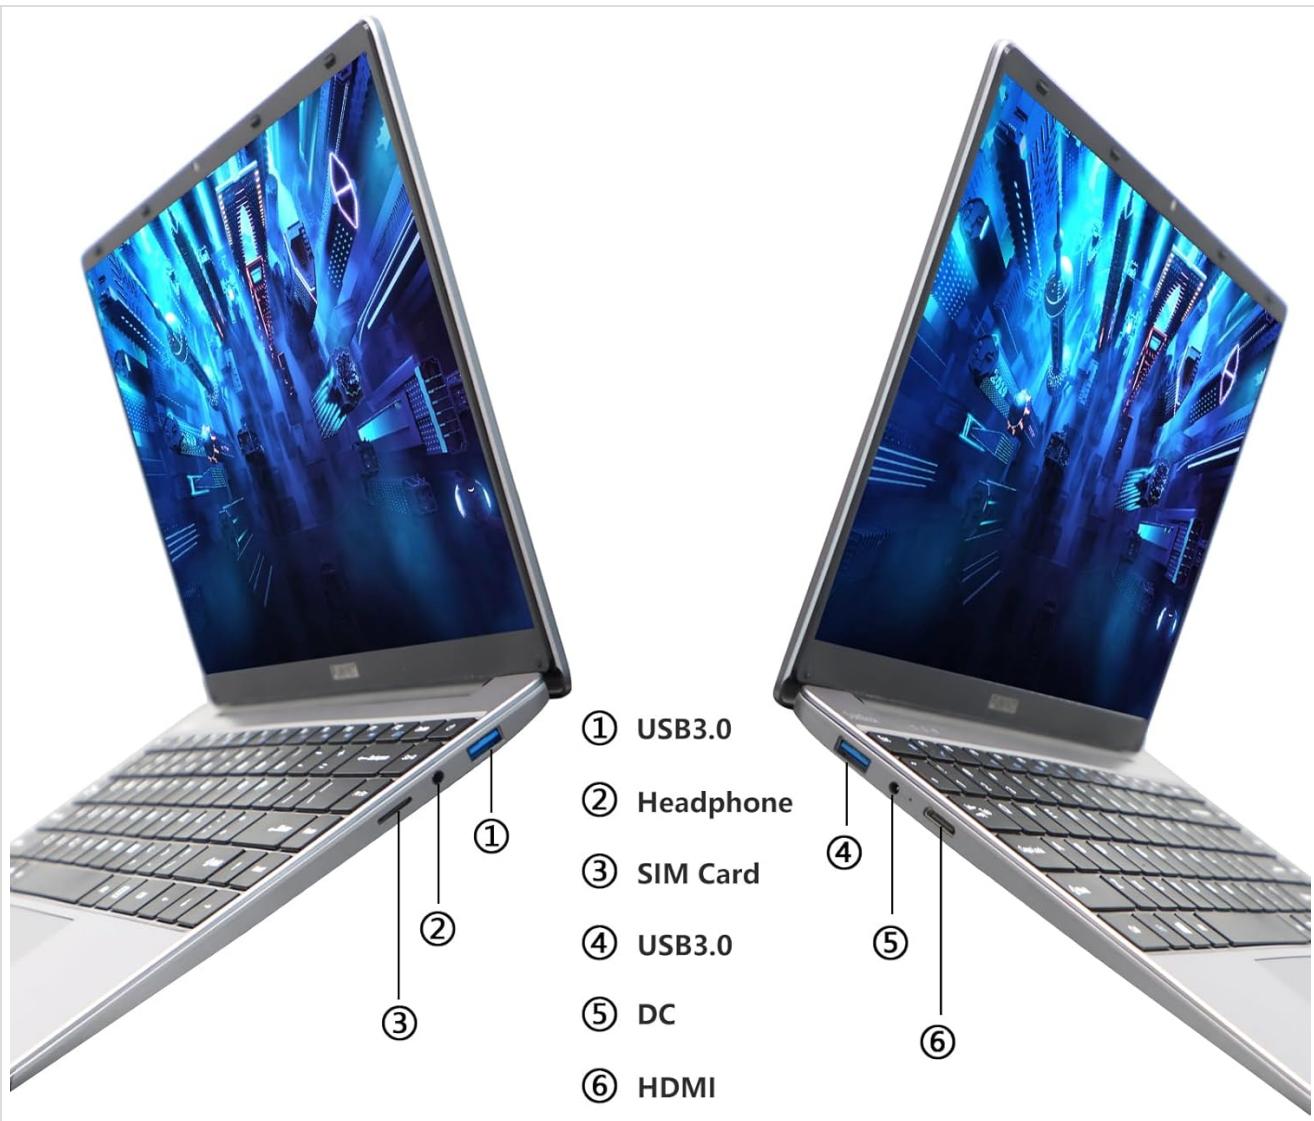


Image: Diagram illustrating the various ports on the sides of the laptop.

2.3 Display Features

The 14.1-inch FHD IPS display offers a 1920x1080 resolution. The laptop supports a 180-degree opening angle, allowing for flexible viewing positions.

Support 180° Opening



3lb



0.8in

Image: The laptop's screen fully opened to a 180-degree flat position.

2.4 Battery Management

The laptop is equipped with a 3800mAh (7.6V/5000mAh) battery. For optimal battery life, ensure the laptop is fully charged before first use. Unplug the AC adapter once the battery is fully charged to prevent overcharging. For extended storage, charge the battery to approximately 50% and store the device in a cool, dry place.



Image: Laptop screen showing a full battery charge indicator.

3. Maintenance

3.1 General Care

- Keep the laptop clean by wiping surfaces with a soft, dry cloth. Avoid liquid cleaners directly on the screen or keyboard.
- Ensure proper ventilation. Do not block the air vents to prevent overheating.
- Avoid exposing the laptop to extreme temperatures, direct sunlight, or high humidity.
- Handle the laptop with care to prevent physical damage.

3.2 Storage Expansion

The laptop's storage can be expanded using a TF (MicroSD) card. Insert the TF card into the designated slot until it clicks into place. To remove, gently push the card in until it springs out.

4. Troubleshooting

Issue	Possible Cause	Solution
Laptop does not power on.	Low battery or power adapter issue.	Ensure the AC adapter is securely connected and the power outlet is functional. Charge the laptop for at least 30 minutes before attempting to power on again.
Wi-Fi connection issues.	Incorrect Wi-Fi password, router issues, or Wi-Fi adapter disabled.	Verify the Wi-Fi password. Restart your router. Check Windows settings to ensure Wi-Fi is enabled.
Slow performance.	Too many applications running, low storage space, or outdated drivers.	Close unnecessary applications. Check available storage on the SSD. Update Windows and device drivers.
Screen is blank or flickering.	Display driver issue, external display conflict, or hardware problem.	Restart the laptop. If connected to an external monitor, disconnect it. Update graphics drivers.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact FUNYET support.

5. Technical Specifications

Feature	Detail
Model Name	DuetBook N5095
Processor	Intel 11th Gen Celeron N5095 (up to 2.9 GHz, 4 Cores, 4 Threads)
Graphics	Intel UHD Graphics (Integrated)
RAM	16GB DDR4
Storage	512GB SSD (Expandable via TF card)
Display	14.1-inch FHD IPS (1920 x 1080 pixels)
Operating System	Windows 11 Pro
Wireless Connectivity	Wi-Fi (2.4G/5G), Bluetooth 4.2
Ports	2x USB 3.0, 1x HDMI, 1x Headphone Jack, 1x DC-in, 1x TF Card Slot
Battery	3800mAh (7.6V/5000mAh) Lithium Ion
Dimensions (LxWxH)	12.7 x 8.3 x 0.8 inches
Weight	3 pounds

14.1 INCH 1920*1080 IPS



Image: Visual summary of key laptop features and specifications.

6. Warranty and Support

FUNYET provides comprehensive support for your laptop:

- **Warranty:** 2-year warranty from the date of purchase.
- **Returns/Exchanges:** 6 months of free replacement or return service.
- **Online Support:** 24/7 online support with instant responses.
- **Phone Support:** Available every business day from 4 PM to 10 PM Pacific Time.

For assistance, please contact FUNYET support:

- **Telephone:** +1 800-986-9631
- **Email:** funyetstore@outlook.com

24/7-hour online instant response



2-year warranty



6month free
exchange/return
policy



18hr per business day
English phone support
(4AM-10PM PT)



TEL:+1
800-986-9631



Email:
funyetstore@outlook.com

Image: FUNYET customer support and warranty details.