

[Manuals.plus](#) /

› [CIRCLE JOY](#) /

› CIRCLE JOY 8-in-1 Rechargeable Electric Wine Opener Set Instruction Manual

CIRCLE JOY CJ-EKPQ

CIRCLE JOY 8-in-1 Rechargeable Electric Wine Opener Set Instruction Manual

Model: CJ-EKPQ | Brand: CIRCLE JOY

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your CIRCLE JOY 8-in-1 Rechargeable Electric Wine Opener Set. Please read this manual thoroughly before first use and retain it for future reference.



Image 1.1: The CIRCLE JOY 8-in-1 Electric Wine Opener Set, including the electric opener, aerator, foil cutter, vacuum pump, and wine stoppers.

Package Contents:

- 1 x Electric Wine Opener
- 1 x Foil Cutter
- 1 x Electric Wine Aerator Pourer
- 1 x Wine Drip Ring
- 1 x Vacuum Pump
- 2 x Wine Stoppers
- 1 x USB-C Charging Cable
- 1 x Instruction Manual

2. SAFETY INFORMATION

- Keep out of reach of children. The corkscrew spiral and foil cutter blades are sharp.

- Do not immerse the electric wine opener or aerator in water or other liquids.
- Use only the provided USB-C cable for charging.
- Do not attempt to open bottles with damaged corks or synthetic corks that are not compatible with electric openers.
- Avoid touching the corkscrew spiral during operation.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.

3. SETUP

3.1 Charging the Devices

Both the electric wine opener and the electric wine aerator pourer are rechargeable via USB-C. Ensure both devices are fully charged before first use.

- Connect the provided USB-C cable to the charging port on the device and to a suitable USB power source (e.g., wall adapter, computer USB port).
- The charging indicator light will illuminate during charging.
- A full charge typically takes approximately 2 hours. The indicator light will turn off or change color when charging is complete.
- A fully charged electric opener can open up to 100 bottles.
- A fully charged aerator can pour from 30+ wine bottles.

≤ 2H

CHARGING TIME

**100 Corks per Charge
(Fully Charged)**

TYPE-C
FAST CHARGING

**30+ Wine Bottles per Charge
(Fully Charged)**



Image 3.1: Illustration of USB-C charging for both the electric wine opener and aerator. Charging time is approximately 2 hours.



Image 3.2: Visual guide showing the USB-C charging port and indicating 100 corks per charge for the opener and 30+ bottles per charge for the aerator.

3.2 Assembling the Electric Wine Aerator Pourer

Before using the aerator, ensure the silicone tube is properly inserted into the dispenser base.

ONE-TOUCH AERATION



Charge fully before first use
(LED turns off when charged).



Insert silicone tube
into dispenser base.



Attach aerator
securely to wine bottle.



Choose pouring mode and
press top button to start/stop.



Image 3.3: Step-by-step guide for charging the aerator, inserting the silicone tube, attaching it to a wine bottle, and selecting a pouring mode.

4. OPERATING INSTRUCTIONS

4.1 Using the Foil Cutter

The foil cutter is integrated into the base cap of the electric wine opener for convenient storage.

1. Remove the foil cutter from the bottom of the electric wine opener.
2. Place the foil cutter on top of the wine bottle.
3. Grip the bottle firmly and twist the foil cutter side-to-side to cut and remove the foil cap.



Image 4.1: The foil cutter is cleverly stored in the base cap of the electric wine opener, preventing loss and accidental contact with the spiral hook.

4.2 Using the Electric Wine Opener

The electric wine opener removes corks effortlessly in seconds.

1. After removing the foil, place the electric wine opener vertically on top of the wine bottle, ensuring it is centered over the cork.
2. Press and hold the "Down" button. The corkscrew will automatically penetrate the cork and pull it out of the bottle. The transparent window with blue LED lighting allows you to observe the process.
3. Once the cork is fully removed, lift the opener from the bottle.
4. To release the cork from the opener, press and hold the "Up" button. The cork will be released instantly.

EASY TO USE



Twist side-to-side
to remove foil cap



Place the opener vertically
on top of the bottle



Press bottom button
to extract cork



Press top button
to release cork



Image 4.2: Visual instructions for using the electric wine opener: twist foil cutter, place opener, press bottom button to extract cork, press top button to release cork.



Image 4.3: The electric wine opener features a blue LED light that enhances visibility during the uncorking process.


4.3 Using the Electric Wine Aerator Pourer

The electric aerator enhances wine flavor and aroma instantly.

1. Ensure the aerator is charged and the silicone tube is inserted.
2. Securely attach the aerator to the neck of the wine bottle.
3. **Measured Pour Mode:** Lightly tap the top button for a preset 75ml (2.5oz) pour. The aerator will automatically dispense and stop.
4. **Continuous Pour Mode:** Press and hold the top button for a continuous pour. Release the button to stop pouring.

TWO POURING MODES

Instantly Unlocks Smoother Taste

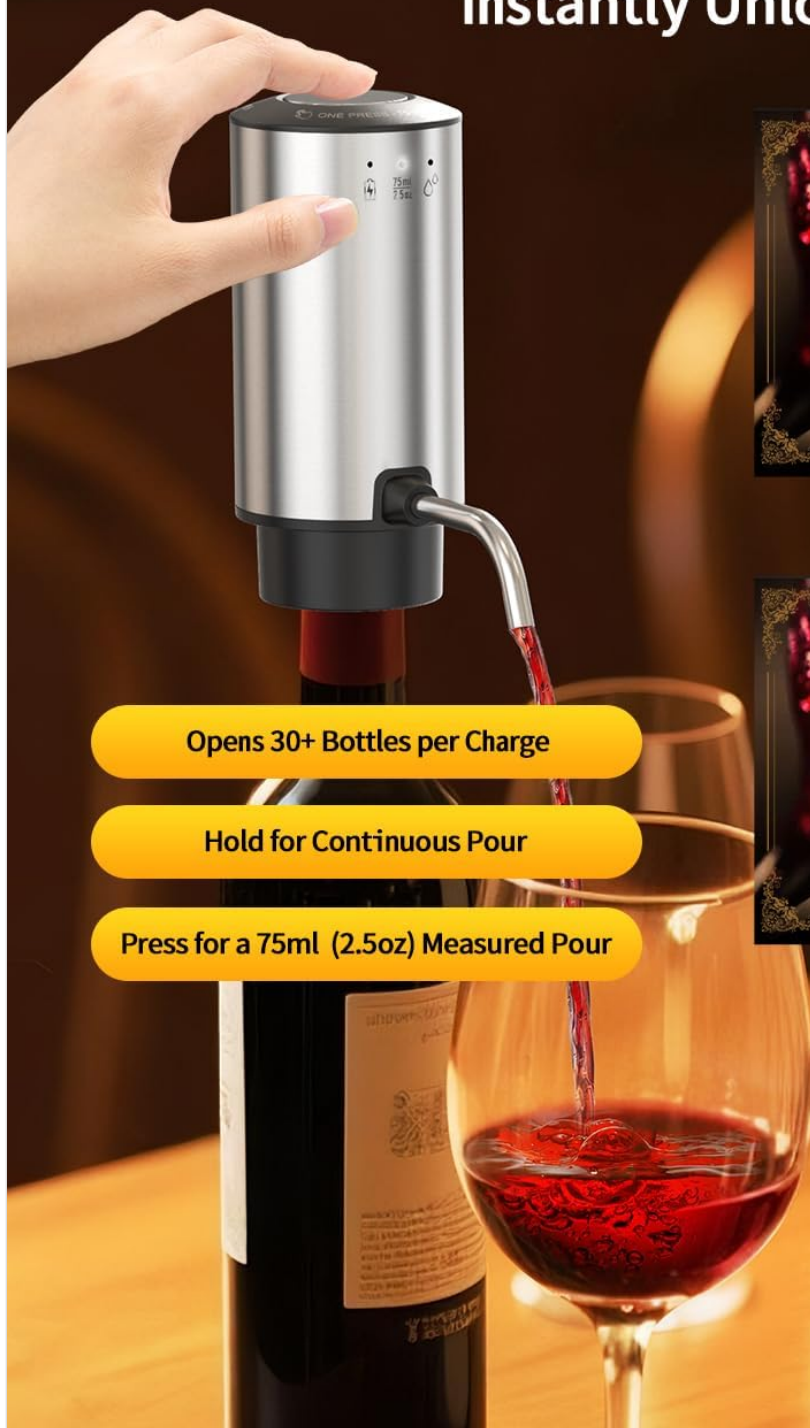

Opens 30+ Bottles per Charge

Hold for Continuous Pour

Press for a 75ml (2.5oz) Measured Pour



▲ Before



▲ After

Image 4.4: The electric aerator offers two pouring modes: a 75ml measured pour and a continuous pour, instantly enhancing the wine's taste.



Image 4.5: The drip-free pouring ring is designed to absorb spills, protecting wine labels and tabletops during pouring.

4.4 Using the Wine Drip Ring

Place the wine drip ring around the neck of the wine bottle before pouring to catch any drips and prevent stains.

4.5 Using the Vacuum Pump and Wine Stoppers

Preserve the freshness of your opened wine for up to 7 days.

1. Insert a wine stopper firmly into the neck of the opened wine bottle.
2. Place the vacuum pump over the wine stopper.
3. Pump the handle up and down approximately 15 times to remove air from the bottle, creating a vacuum seal.
4. To open, simply pull the stopper to release the vacuum.


SIP & SAVOR ANYWHERE | EFFORTLESS ELEGANCE



Home



 Party

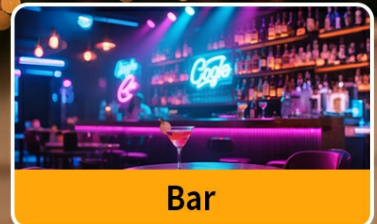

Bar



Picnic



Festival



Dating

Image 4.6: Instructions for using the vacuum pump with wine stoppers to preserve wine freshness for up to 7 days.

4.6 General Usage Overview

HOW TO USE

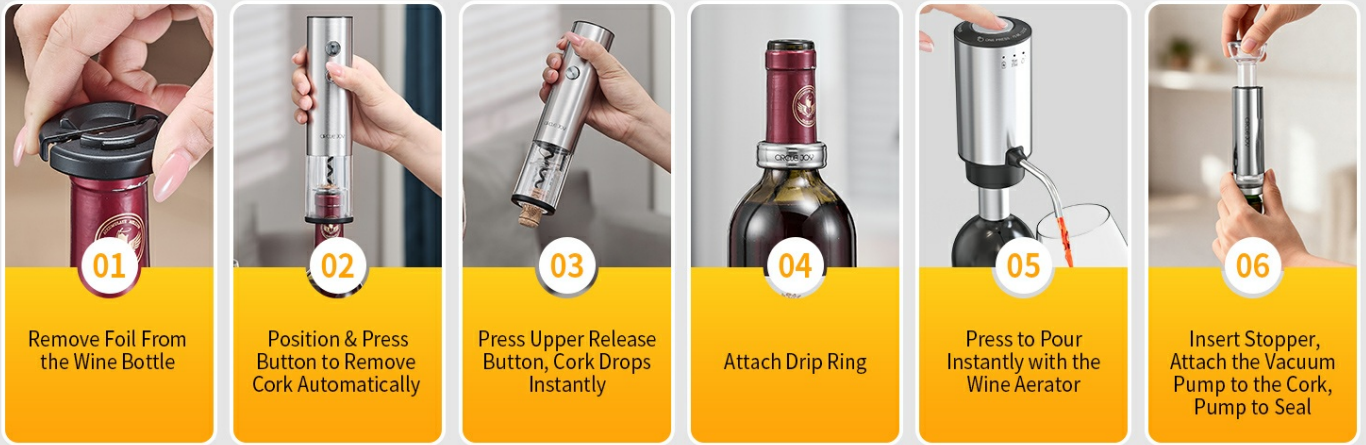 


Image 4.7: A visual summary of the six main steps for using the CIRCLE JOY wine set: remove foil, open bottle, release cork, attach drip ring, pour with aerator, and seal with vacuum pump.

Your browser does not support the video tag.

Video 4.1: An official CIRCLE JOY video demonstrating the unboxing, charging, and operation of the 8-in-1 Electric Wine Opener Set, including the opener, aerator, and vacuum pump functions.

5. MAINTENANCE AND CLEANING

5.1 Cleaning the Electric Wine Aerator Pourer

To ensure optimal performance and hygiene, clean the aerator after each use, especially when switching between different wines.

1. Remove the aerator from the wine bottle.
2. Place the silicone tube into a glass of clean water.
3. Press the aerator button to pump water through the system until it runs clear.
4. Wipe the exterior of the aerator with a soft, damp cloth. Do not immerse the main unit in water.
5. Allow all components to air dry completely before storage.

HOW TO CLEAN



Image 5.1: Visual guide demonstrating how to clean the electric wine aerator by running clean water through it.

5.2 General Care

- Wipe the electric wine opener and vacuum pump with a soft, damp cloth. Do not use abrasive cleaners.
- The wine drip ring's sponge can be cleaned and reused.
- Store all components in a dry place when not in use.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Electric opener not working	Low battery; not properly aligned on bottle.	Charge the opener fully; ensure it is centered and held vertically on the bottle.
Cork not removing completely	Low battery; cork is too fragile or synthetic.	Charge the opener; for difficult corks, manual removal may be necessary.
Aerator not pouring or slow pour	Low battery; silicone tube not properly inserted; aerator clogged.	Charge the aerator; ensure silicone tube is secure; clean the aerator by running water through it.
Vacuum pump not sealing	Stopper not inserted firmly; pump not properly aligned.	Ensure stopper is pushed down completely; align pump squarely over the stopper and pump 15+ times.

7. SPECIFICATIONS

- **Model Number:** CJ-EKPQ
- **Material:** Stainless Steel
- **Finish Type:** Polished
- **Item Weight:** 2.48 pounds (entire set)
- **Power Source:** Rechargeable Lithium Ion Battery (included)
- **Charging Interface:** USB-C
- **Electric Opener Capacity:** Up to 100 bottles per full charge
- **Electric Aerator Capacity:** 30+ bottles per full charge
- **Aerator Pour Modes:** 75ml (2.5oz) measured pour, Continuous pour
- **Wine Preservation:** Up to 7 days with vacuum pump and stoppers

8. WARRANTY AND SUPPORT

CIRCLE JOY provides 12 months of after-sales service. If you encounter any issues or have questions regarding your product, please contact our customer service team via email. We are committed to providing efficient and professional support.

For customer service inquiries, please refer to the contact information provided on the product packaging or the official CIRCLE JOY website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question