

[Manuals.plus](#) /

› [LINSY HOME](#) /

› LINSY HOME Futon Sofa Bed LH159SF4-JK Instruction Manual

LINSY HOME LH159SF4-JK

LINSY HOME Futon Sofa Bed LH159SF4-JK Instruction Manual

Model: LH159SF4-JK

INTRODUCTION

Thank you for choosing the LINSY HOME Futon Sofa Bed. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions thoroughly before use and retain them for future reference.



Image: The LINSY HOME Futon Sofa Bed in its sofa configuration, situated in a modern living room.

SAFETY INFORMATION

Always follow these basic safety precautions to reduce the risk of injury or damage:

- Ensure all parts are present and undamaged before assembly.
- Assemble the futon on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly.
- Do not exceed the maximum weight limit of **300 pounds**.
- Keep children and pets away from the assembly area.
- Regularly check all fasteners to ensure they remain tight.

SETUP AND ASSEMBLY

The LINSY HOME Futon Sofa Bed requires assembly. All necessary tools and clear instructions are included. Assembly typically takes an average adult approximately 30 minutes.

Assembly Steps:

1. Unpack all components and verify against the parts list provided in the packaging.
2. Attach the solid wood legs to the base of the futon using the provided hardware. Ensure they are securely fastened.
3. Position the futon sections and connect them according to the detailed diagrams in the included instruction sheet.
4. Ensure all connections are tight and stable before use.

Product Dimension



Recommended to used with
a mattress topper for better sleep

Image: Detailed product dimensions for the LINSY HOME Futon Sofa Bed, illustrating measurements in both sofa and bed modes.



| Thick and Supportive Cushion

Image: A close-up view of the solid wood legs, highlighting their sturdy construction.

OPERATING INSTRUCTIONS

The LINSY HOME Futon Sofa Bed features a 3-in-1 multifunctional design, allowing it to convert between a loveseat, recliner, and guest bed with adjustable backrest angles.

Adjusting the Backrest:

- **Loveseat (120°):** For standard seating, ensure the backrest is in the upright position.
- **Recliner (160°):** Gently push the backrest backward to engage the reclined position.
- **Sofa Bed (180°):** Push the backrest fully flat to convert the futon into a bed.

To adjust, lift the backrest slightly and push it forward or backward until it clicks into the desired angle. Ensure both sides of the backrest are adjusted evenly.



Image: Visual guide demonstrating the three adjustable positions: 120° (Normal Sofa), 160° (Recliner Sofa), and 180° (Sofa Bed).

Your browser does not support the video tag.

Video: Demonstration of the LINSY HOME Futon Sofa Bed's adjustable features and conversion between sofa and bed modes.

Comfort and Support:

- The futon features 7-inch thick doll cotton padding for comfort.
- For enhanced sleeping comfort, a mattress topper is recommended when using the futon as a bed.



Image: A close-up view of the thick and supportive cushion, highlighting its plush texture.

| Adjustable Backrest



120° - Normal Sofa



160° - Recliner Sofa



180° - Sofa Bed

Image: The futon in bed mode with a person resting, emphasizing the recommendation for a mattress topper for improved sleep.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your futon sofa bed.

Fabric Care:


- The corduroy fabric is designed to be durable and wear-resistant.
- For general cleaning, gently vacuum the fabric to remove dust and debris.
- For spills, blot immediately with a clean, dry cloth. Avoid rubbing, which can spread the stain.
- For tougher stains, use a mild fabric cleaner following the product instructions, testing on an inconspicuous area first.
- Do not use harsh chemicals or abrasive cleaners.

Cozy & Durable Corduroy



Attention
Secured with Velcro

Image: A close-up of the corduroy fabric, illustrating its texture and the velcro attachment mechanism for securing cushions.

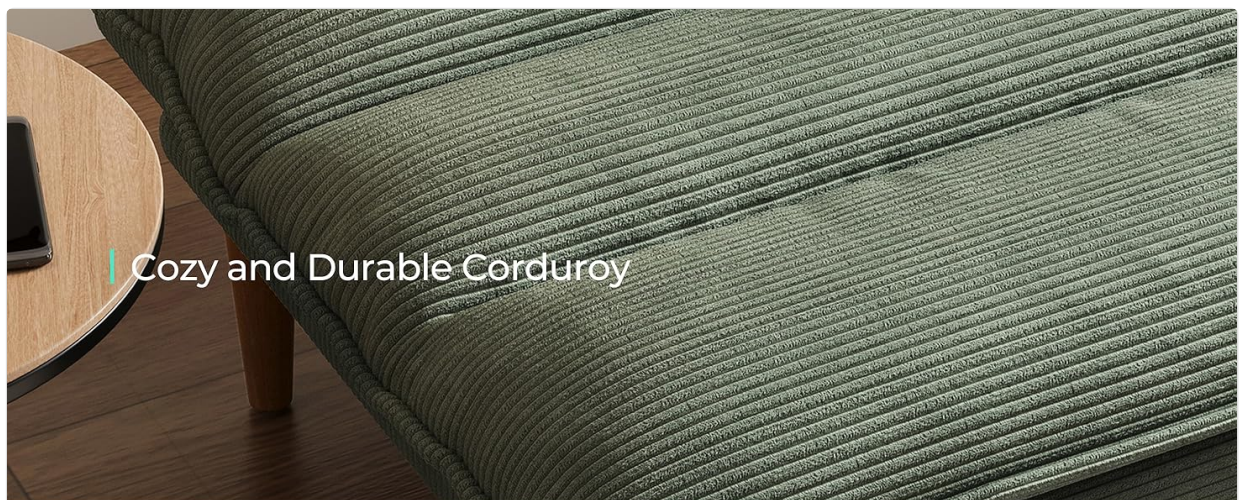

Cozy and Durable Corduroy

Image: A detailed view of the corduroy fabric, emphasizing its cozy and durable qualities.

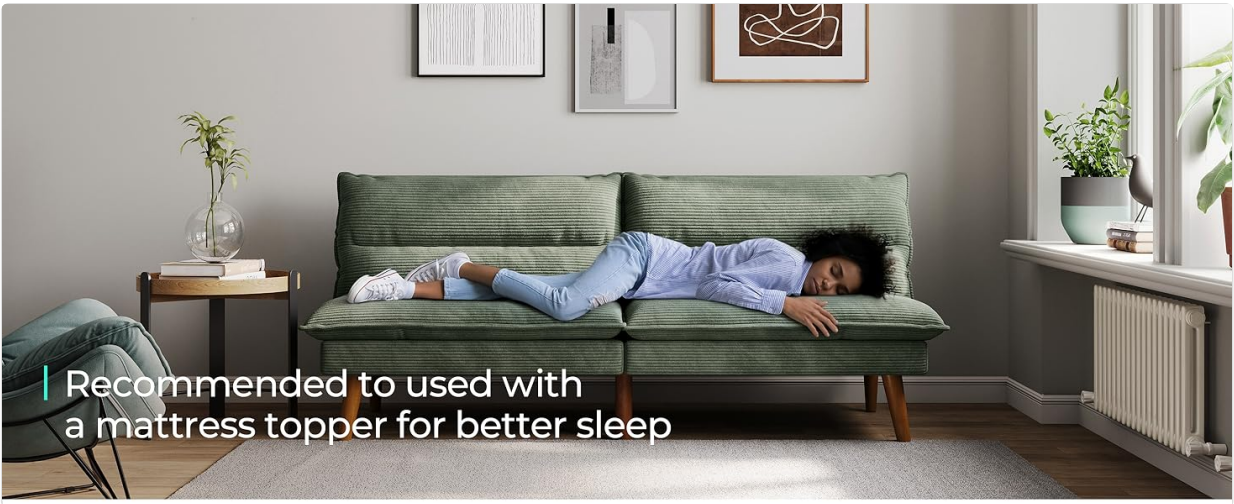


Image: A close-up showing the velcro strips located under the cushion, designed for secure attachment and stability.

TROUBLESHOOTING

If you encounter any issues with your LINSY HOME Futon Sofa Bed, please refer to the following common solutions:

Problem	Possible Cause	Solution
Difficulty adjusting backrest	Mechanism not fully engaged or obstructed.	Ensure no obstructions are present. Lift the backrest slightly and push firmly until it clicks into place.
Futon feels unstable or wobbly	Loose fasteners or uneven floor.	Check and tighten all screws and bolts. Ensure the futon is on a level surface.
Squeaking noises	Loose connections or friction between parts.	Tighten all hardware. Apply a small amount of silicone lubricant to moving parts if necessary.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	LINSY HOME
Model Number	LH159SF4-JK
Product Dimensions (Sofa)	31"D x 71"W x 34"H
Reclined Length (Bed)	71 Inches
Seat Depth	16.9 inches
Seat Height	16.5 Inches
Item Weight	65 Pounds

Feature	Detail
Weight Limit	300 Pounds
Seating Capacity	2
Upholstery Fabric Type	Corduroy
Frame Material Type	Wood
Fill Material	Cotton
Adjustable Backrest Positions	3 (120°, 160°, 180°)
Assembly Required	Yes (approx. 30 minutes)

WARRANTY AND SUPPORT

For warranty information or technical support, please contact LINSY HOME customer service. Refer to your purchase documentation for specific warranty terms and contact details.

You can also visit the official LINSY HOME store for more information:[LINSY HOME Store](#)