

[Manuals.plus](#) /

> [MSKOLER](#) /

> MSKOLER 36-inch Kids Kitchen Playset Instruction Manual

MSKOLER B0FHQ3NF14

MSKOLER 36-inch Kids Kitchen Playset Instruction Manual

Model: B0FHQ3NF14 | Brand: MSKOLER

1. INTRODUCTION

Welcome to the world of imaginative play with your new MSKOLER 36-inch Kids Kitchen Playset! This comprehensive manual provides detailed instructions for assembly, operation, and maintenance to ensure a safe and enjoyable experience for children aged 3 and up. This playset is designed to foster creativity, develop hands-on skills, and encourage social interaction through pretend cooking and kitchen activities.



Image: The complete MSKOLER 36-inch Kids Kitchen Playset, showcasing its vibrant pink color and various play features.

2. SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use. Keep this manual for future reference.

- **Age Recommendation:** Suitable for children 36 months (3 years) and up.
- **Adult Supervision:** Always ensure adult supervision during play, especially when using water features or small accessories.
- **Small Parts:** This playset contains small parts that may pose a choking hazard for children under 3 years.
- **Battery Safety:** If the playset requires batteries for light and sound features, ensure they are installed correctly according to polarity. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy is not used for an extended period.
- **Water Use:** Use clean water only for the sink's water circulation feature. Do not submerge the entire unit in water.
- **Cleaning:** Clean the playset with a damp cloth. Avoid harsh chemicals or abrasive cleaners.

3. WHAT'S IN THE BOX

Carefully unpack all components and verify that all items are present before beginning assembly. The package includes:

- Main Kitchen Playset Unit
- Play Sink with Running Water Feature
- Stove with Light and Sound
- Cooker and Pans
- Dessert Plates
- Toy Food Set (various fruits, vegetables, meats, desserts)
- Matched Stickers
- Utensils (spatula, knife, fork, spoon)
- Sauce Bottles and Seasonings
- Storage Locker and Cutlery Shelf
- Other accessories as shown in product images



Image: A detailed view of the various colorful accessories included with the kitchen playset, such as play food, sauce bottles, toy dishes, and cooking tools.

4. ASSEMBLY & SETUP

The MSKOLER Kids Kitchen Playset is designed for easy and straightforward assembly. Follow the steps below to set up your playset.

Assembly Video Guide:

Your browser does not support the video tag.

Video: A step-by-step guide demonstrating the easy assembly process of the MSKOLER Kids Kitchen Playset.

General Assembly Steps:

1. Unpack all components and lay them out on a clean, flat surface.
2. Assemble the base unit, ensuring all connections are secure.
3. Attach the main countertop and the upper kitchen structure.
4. Install the sink and faucet components.
5. Place the accessory shelves and hooks as indicated in the visual guide.
6. Apply the provided stickers to their designated areas for added detail.
7. Insert batteries (not included) into the designated compartment for light and sound features, ensuring correct polarity.



Image: Diagram illustrating the dimensions of the assembled kitchen playset (36 inches in height, 24 inches in width, 11 inches in depth).

5. OPERATING INSTRUCTIONS

This playset offers interactive features to enhance the pretend play experience.

5.1. Stove with Light and Sound

The electric stove features realistic cooking sounds and lights to simulate boiling and frying. Place a pot or pan on the stove burner and turn the knob to activate the effects. You can also add a small amount of water to the designated area on the stove to create a spraying effect, mimicking steam.



Image: Close-up of the stove area, showing the burners with light and sound features, and a pot with pretend food.

5.2. Sink with Running Water

The sink includes a unique water circulation system. Fill the sink basin with a small amount of water. Press the faucet handle to pump water through the tap, allowing children to pretend to wash play food and dishes. This feature teaches water-saving concepts.



Image: The toy sink with a working faucet, demonstrating the water circulation feature as water flows over pretend vegetables.

5.3. Pretend Food and Accessories

Utilize the wide array of toy food items, utensils, and storage areas to create various cooking scenarios. The playset includes items that can be 'cut' apart and reassembled, enhancing fine motor skills.



Image: A child's hands demonstrating the cutting of a toy vegetable with a plastic knife on a cutting board, part of the pretend play accessories.

6. MAINTENANCE

Proper care will extend the life of your playset.

- **Cleaning:** Wipe down all surfaces with a soft, damp cloth. For stubborn stains, use a mild soap solution and rinse thoroughly. Ensure all electronic components are dry before use.
- **Water System:** Regularly empty and clean the sink basin to prevent mold or mildew buildup. Use fresh water for each play session.
- **Storage:** Store the playset in a cool, dry place away from direct sunlight when not in use to prevent fading or warping.
- **Battery Replacement:** Replace batteries when light and sound features become dim or stop working. Refer to the battery compartment for correct battery type and orientation.

7. TROUBLESHOOTING

If you encounter any issues with your playset, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stove lights/sounds not working	Dead or incorrectly installed batteries.	Check battery polarity and replace with fresh batteries.
Sink water not circulating	Insufficient water in the basin or pump blockage.	Ensure enough water is in the sink. Check for any debris blocking the pump intake.
Playset unstable after assembly	Components not fully clicked into place.	Review assembly steps and ensure all parts are securely connected.

8. SPECIFICATIONS

- **Product Dimensions:** 11 x 24 x 36 inches (Depth x Width x Height)
- **Item Weight:** 5.66 pounds
- **Model Number:** B0FHQ3NF14
- **Manufacturer Recommended Age:** 3 years and up
- **Manufacturer:** MSKOLER

9. WARRANTY AND SUPPORT

MSKOLER is committed to providing high-quality products. For any questions, concerns, or warranty inquiries regarding your Kids Kitchen Playset, please contact our customer support team. Please have your model number (B0FHQ3NF14) ready when contacting support.

Contact information can typically be found on the product packaging or the official MSKOLER brand store on Amazon:

