

- Manuals.plus /
- > CLP /
 - > CLP Olema Dining Chair Cord Instruction Manual

CLP Olema Dining Chair Cord

CLP Olema Dining Chair Cord Instruction Manual

Model: Olema Dining Chair Cord

1. PRODUCT OVERVIEW

The CLP Olema Dining Chair Cord is designed to offer both high seating comfort and a modern aesthetic. This versatile upholstered chair is suitable for various settings, including dining rooms, kitchens, and living rooms. Key features include comfortable padding on the seat, backrest, and armrests, a durable corduroy cover, and a 180-degree swivel function with an auto-back mechanism.

The chair is supported by a stable four-legged base made of matt black powder-coated metal, ensuring a maximum load capacity of 150 kg. Integrated floor protectors prevent damage to delicate surfaces.



Image 1.1: The Olema Dining Chair Cord in a typical dining environment, showcasing its modern design and comfortable appearance.

2. SETUP INSTRUCTIONS

The CLP Olema Dining Chair Cord is designed for minimal assembly. The product is shipped largely pre-assembled, requiring no complex setup procedures.

2.1 Unpacking

1. Carefully remove the chair from its packaging.
2. Inspect all components for any signs of damage during transit. If any damage is found, please contact customer support immediately.
3. Remove all protective wrapping and packaging materials.

2.2 Placement

- Place the chair on a flat, stable surface.

- Ensure the floor protectors on the chair legs are intact and properly positioned to prevent scratching your floor.





Image 2.1: Front view of the Olema Dining Chair Cord, ready for use after unpacking.

3. OPERATING INSTRUCTIONS

3.1 Swivel Function

The Olema Dining Chair features a 180-degree swivel mechanism, allowing for easy rotation and increased freedom of movement while seated. To use, simply rotate the seat in the desired direction.

3.2 Auto-Back Function

The chair is equipped with an auto-back function. After rotating, the seat will automatically return to its original forward-facing position when not under active rotation. This ensures the chair always aligns neatly with your dining table or preferred orientation.



Image 3.1: Visual representation of the 180-degree swivel and auto-back mechanism, highlighting the chair's dynamic movement.

4. MAINTENANCE AND CARE

Proper care will extend the life and maintain the appearance of your Olema Dining Chair.

4.1 Corduroy Fabric Care

- **Regular Cleaning:** Vacuum the corduroy fabric regularly using an upholstery attachment to remove dust and loose debris.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. Do not rub, as this can spread the stain. For stubborn stains, use a mild fabric cleaner specifically designed for upholstery, testing on an inconspicuous area first. Follow the cleaner's instructions carefully.
- **Avoid Harsh Chemicals:** Do not use bleach, abrasive cleaners, or solvents, as these can damage the fabric.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading of the fabric color.

4.2 Metal Base Care

- **Cleaning:** Wipe the matt black powder-coated metal base with a soft, damp cloth. Dry immediately with a clean, dry cloth to prevent water spots.
- **Avoid Scratches:** Do not use abrasive cleaning pads or harsh chemicals that could scratch or damage the finish.
- **Floor Protectors:** Periodically check the floor protectors on the chair legs to ensure they are securely attached and not worn, replacing them if necessary to protect your flooring.



Image 4.1: Detailed view of the corduroy fabric, illustrating its texture and quality.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Olema Dining Chair.

5.1 Swivel Mechanism Not Smooth

- **Check for Obstructions:** Ensure there are no objects or debris lodged in the swivel mechanism beneath the seat.

- **Lubrication:** If the mechanism feels stiff, a small amount of silicone-based lubricant can be applied to the moving parts. Avoid oil-based lubricants as they can attract dust.

5.2 Chair Feels Unstable

- **Level Surface:** Ensure the chair is placed on a completely flat and level surface. Uneven flooring can cause perceived instability.
- **Inspect Legs:** Check all four legs and their connections to the base for any looseness. While assembly is minimal, ensure any pre-assembled parts are secure.
- **Weight Limit:** Verify that the maximum load capacity of 150 kg is not being exceeded.

5.3 Floor Scratches

- **Check Floor Protectors:** Inspect the floor protectors on the bottom of each leg. If they are missing, worn, or damaged, they should be replaced immediately.
- **Clean Protectors:** Ensure the floor protectors are clean and free of embedded grit that could scratch surfaces.

6. SPECIFICATIONS

Brand	CLP
Model	Olema Dining Chair Cord
Color	Taupe
Material (Frame)	Matt Black Powder-Coated Metal
Material (Upholstery)	Corduroy (75% cotton, 25% polyester)
Overall Width	56 cm (22.05 inches)
Overall Depth	62 cm (24.41 inches)
Overall Height	81 cm (31.89 inches)
Seat Height	48 cm
Seat Dimensions (W x D)	44 x 44 cm
Armrest Height	64 cm
Backrest Height	33 cm
Item Weight	7 kg
Maximum Load Capacity	150 kg
Swivel Function	180-degree with Auto-Back
Assembly Required	No (Minimal unpacking)



Image 6.1: Detailed dimensions of the Olema Dining Chair Cord for accurate measurement and planning.

7. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the retailer's policy where the product was purchased or contact CLP customer service directly. Contact details can typically be found on the manufacturer's official website or your purchase documentation.

When contacting support, please have your purchase receipt and the product model name (Olema Dining Chair Cord) ready.

© 2026 CLP. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FHQ4Q2SJ>

More documents and user manuals: **<https://manuals.plus/>**