

Manuals.plus /

› Tiksounds /

› Tiksounds M3-YE1 Bluetooth Speaker User Manual

Tiksounds M3-YE1

Tiksounds M3-YE1 Bluetooth Speaker User Manual

Model: M3-YE1

1. INTRODUCTION

Thank you for choosing the Tiksounds M3-YE1 Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Tiksounds M3-YE1 Bluetooth Speaker
- USB-C Charging Cable
- User Manual

3. PRODUCT OVERVIEW

The Tiksounds M3-YE1 is a compact, portable Bluetooth speaker designed for various activities. It features an ultra-light design with a durable clip for easy attachment, Bluetooth 5.3 connectivity, enhanced bass, and IP67 waterproof rating.

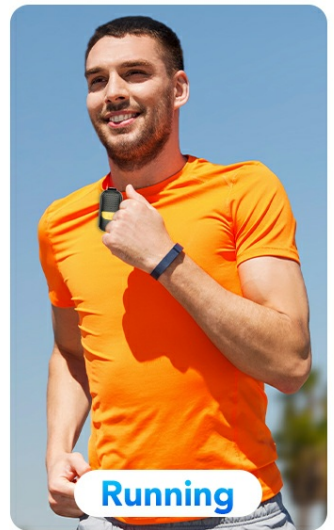


Image: Overview of the Tiksounds M3-YE1 Bluetooth Speaker, showcasing its compact size and clip design.

Key Features:

- **Ultra-light Design:** Weighing 53g with an improved clip for portability.
- **Bluetooth 5.3:** Provides stable and fast wireless connection.
- **Enhanced Audio:** Features a N52 neodymium driver for increased bass and volume.
- **Long Playtime:** Up to 15 hours of audio playback on a single charge.
- **IP67 Waterproof:** Protected against dust and water immersion.
- **Built-in Microphone:** For hands-free calling.
- **Easy Controls:** Large, accessible buttons for operation.



Image: The M3-YE1 speaker clipped to clothing, demonstrating its wearable and hands-free design for various activities.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. Use the provided USB-C cable to connect the speaker to a 5V/1A USB power adapter (not included) or a computer's USB port.

- The LED indicator will illuminate during charging.
- A full charge provides up to 15 hours of playtime.
- A 10-minute charge can provide approximately 2 hours of use.



Image: The M3-YE1 speaker held in a gloved hand, illustrating its compact size and highlighting its 15-hour battery life.

4.2 Bluetooth Pairing

To connect the speaker to your device:

1. Ensure the speaker is charged and powered off.
2. Press and hold the Power button for 4 seconds to turn on the speaker. The LED indicator will flash blue, indicating it is in pairing mode.
3. On your smartphone or tablet, enable Bluetooth and search for available devices.
4. Select "Tiksounds M3-YE1" from the list of devices.
5. Once connected, the LED indicator will turn solid blue, and you will hear a confirmation tone.

The speaker will automatically attempt to reconnect to the last paired device when powered on.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Press and hold the Power button for 4 seconds.
- **Power Off:** Press and hold the Power button for 4 seconds.

5.2 Music Playback



Image: Diagram illustrating the functions of the large control buttons on the M3-YE1 speaker for music playback and call management.

- **Play/Pause:** Press the Play/Pause button once.
- **Next Track:** Press the '+' button for 2 seconds.
- **Previous Track:** Press the '-' button for 2 seconds.

5.3 Volume Adjustment

- **Increase Volume:** Press the '+' button once.
- **Decrease Volume:** Press the '-' button once.

5.4 Hands-Free Calling

The built-in microphone allows for hands-free calls when connected to your smartphone.



Image: The M3-YE1 speaker positioned between two individuals, demonstrating its utility for hands-free communication via the built-in microphone.

- **Answer Call:** Press the Play/Pause button once.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button for 1 second.

6. WATERPROOF INFORMATION (IP67)

The Tiksounds M3-YE1 speaker features an IP67 waterproof rating. This means it is protected against dust ingress and can withstand immersion in water up to 1 meter (3.3 feet) for up to 30 minutes.

IP67 Waterproof

Keep The Music Playing Dust/Splash



Image: The M3-YE1 speaker in water, demonstrating its IP67 waterproof capability.

Important:

- Ensure the charging port cover is securely closed before exposing the speaker to water.
- Do not expose the speaker to saltwater or other chemicals.
- After exposure to water, dry the speaker thoroughly before charging.

7. MAINTENANCE AND CARE

- Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the speaker to strong impacts.
- If the speaker will not be used for an extended period, charge it at least once every three months to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on	Low battery	Charge the speaker fully.
Cannot pair with device	Bluetooth not enabled on device; Speaker not in pairing mode; Device too far.	Ensure Bluetooth is on. Put speaker in pairing mode. Move device closer (within 10m).
No sound or low volume	Volume too low on speaker or device; Speaker not connected.	Increase volume on both speaker and device. Re-pair the speaker.
Sound distortion	Volume too high; Device too far.	Reduce volume. Move device closer.

9. SPECIFICATIONS

Feature	Detail
Model Number	M3-YE1
Connectivity Technology	Bluetooth 5.3
Audio Output Mode	Stereo
Speaker Type	Portable Bluetooth Speaker
Material	Plastic
Waterproof Rating	IP67
Battery Life	Up to 15 Hours
Control Method	Touch Buttons
Additional Features	Bass Boost, Built-in Microphone, Lightweight, Portable
Compatible Devices	Smartphone, Tablet

10. WARRANTY AND SUPPORT

Tiksounds products are designed for reliability and performance. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Tiksounds website. Do not attempt to repair the product yourself.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FHQ91WJ6>

More documents and user manuals: **<https://manuals.plus/>**