

6651761591

Generic Dishwasher Faucet Adapter Aerator Snap Fitting Instruction Manual

For Kenmore/Sears Models: 665.1761591, 665.17621690, 665.17621691, 665.17621692, 665.17625690, 665.17625691, 665.17625692, 665.1765190 and others.

INTRODUCTION

This instruction manual provides detailed guidance for the installation, operation, and maintenance of your Generic Dishwasher Faucet Adapter Aerator Snap Fitting. This adapter is designed to facilitate the connection of portable dishwashers to standard kitchen sink faucets, ensuring a secure and leak-free water supply. Please read this manual thoroughly before installation and use to ensure proper function and longevity of the product.

PRODUCT OVERVIEW

The Dishwasher Faucet Adapter is a crucial component for portable dishwasher setups. It converts a standard faucet aerator thread into a quick-connect fitting for your dishwasher's water supply hose. The adapter includes a main body, a threaded connector, and a rubber washer for sealing.



Figure 1: The Dishwasher Faucet Adapter Aerator Snap Fitting, showing the main body and threaded connector.



Figure 2: Disassembled view of the adapter, illustrating the main body, threaded connector, and rubber washer.


COMPATIBILITY

This adapter is compatible with a wide range of Kenmore/Sears portable dishwasher models. Please verify your model number against the list below. You can typically find your appliance's model number on an information plate located on the back, under the burner, behind the door, under the cooktop, behind the drawer, or on the side of your appliance.

THANH HUYEN

APPLIANCE HUB

Shop Smart. Fix Fast. Smile More!

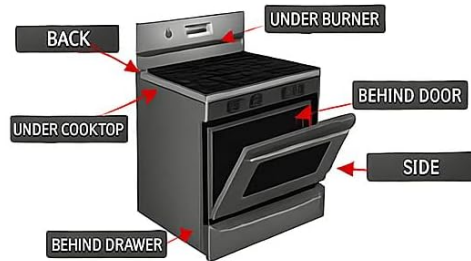

First

Check your appliance's corrice manual to find the correct part number for your needed replacemet.

Second

Locate the model number on your appliance's information plate. Use it to get the exact replacement part number from the manufacturer.

Third

Contact the manufacturer to ensure your part number is up to date and still available or has not been replaced by a new version.

Need help? Thanh Huyen Appliance Hub is here for you - Fast, Friendly, Reliable!

Figure 3: Illustration indicating typical locations for finding an appliance's model number.

Compatible Kenmore/Sears Models include:

- 110.84670700, 110.84670800, 110.84671100, 110.84671300, 110.84671600, 110.84671700, 110.84671800
- 110.84870100, 110.84870110, 110.84870300, 110.84870600, 110.84870610, 110.84870700, 110.84870800, 110.84870810
- 110.94518201, 110.94518401, 110.94570800, 110.94572200, 110.94572201, 110.94572400, 110.94572401
- 110.94818200, 110.94818400, 110.94872200, 110.94872400
- 19495, 441.831750
- 665.1711590, 665.1711592, 665.17152K210, 665.17152K211, 665.17152K212, 665.17152K213, 665.17152K214, 665.17152K215, 665.17152K216, 665.17152K217
- 665.17159K210, 665.17159K211, 665.17159K212, 665.17159K213, 665.17159K214, 665.17159K215, 665.17159K216, 665.17159K217
- 665.1741590, 665.17422991, 665.17422992, 665.17425791, 665.17425792, 665.17432001, 665.17432002, 665.1743591, 665.17439000, 665.17439002
- 665.1744990, 665.1744991, 665.17459001, 665.17482N710, 665.17489N710
- 665.1761590, 665.1761591, 665.17621690, 665.17621691, 665.17621692, 665.17625690, 665.17625691, 665.17625692
- 665.1765190, 665.1765191, 665.1765192, 665.1765193, 665.1765194
- 665.1765590, 665.1765591, 665.1765592, 665.1765593
- 665.1765990, 665.1765991, 665.1765992, 665.1765993, 665.1765994, 665.1765995
- 665.17669400, 665.17679400
- 665.17702K600, 665.1770590, 665.1770591, 665.1770592, 665.17709K600
- 665.17722000, 665.17722001, 665.17722002, 665.17722K900

- 665.17729000, 665.17729001, 665.17729002, 665.17729K900
- 665.17731790, 665.17731791, 665.17732990, 665.17732992

SETUP AND INSTALLATION

Follow these steps to properly install the dishwasher faucet adapter:

1. **Prepare the Faucet:** Ensure your faucet is clean and free of debris. Remove the existing aerator from your kitchen sink faucet by unscrewing it. If necessary, use pliers with a cloth to avoid scratching the faucet finish.
2. **Check Thread Size:** The adapter features a 15/16"-27 male thread and a 55/64"-27 female thread. Verify that one of these sizes matches your faucet's thread. Most standard sink faucets are compatible.
3. **Insert Washer:** Place the rubber washer (included) into the female end of the adapter. This washer is crucial for creating a watertight seal.
4. **Attach Adapter to Faucet:** Screw the appropriate end of the dishwasher faucet adapter onto your kitchen faucet. Hand-tighten until snug. Do not overtighten, as this can damage the threads or the washer.
5. **Connect Dishwasher Hose:** Once the adapter is securely attached to the faucet, connect your portable dishwasher's water supply hose to the snap fitting on the adapter. Ensure it clicks into place for a secure connection.
6. **Test for Leaks:** Slowly turn on the faucet and check for any leaks around the adapter and the dishwasher hose connection. If leaks occur, tighten slightly or re-seat the rubber washer.



Figure 4: A detailed view of the adapter's internal threading and the placement of the rubber washer, essential for a leak-free seal.

OPERATING INSTRUCTIONS

Once the adapter is installed and the dishwasher hose is connected:

1. **Turn on Faucet:** Turn on your kitchen faucet to allow water to flow to the portable dishwasher. The dishwasher will draw water as needed.
2. **Start Dishwasher Cycle:** Initiate the desired wash cycle on your portable dishwasher according to its own instruction manual.
3. **Monitor Operation:** Periodically check for any leaks or unusual operation during the dishwasher cycle.
4. **Turn off Faucet:** After the dishwasher cycle is complete, turn off the kitchen faucet.
5. **Disconnect Dishwasher:** To disconnect the portable dishwasher, simply press the release button on the snap fitting (if applicable) and pull the hose away from the adapter.

MAINTENANCE

Regular maintenance ensures the adapter functions correctly and extends its lifespan:

- **Cleaning:** Periodically unscrew the adapter from the faucet and rinse it under running water to remove any mineral deposits or debris. Use a soft brush if necessary.
- **Washer Inspection:** Inspect the rubber washer for signs of wear, cracking, or compression. Replace the washer if it appears damaged to prevent leaks.
- **Thread Condition:** Check the threads on both the adapter and your faucet for any damage. Damaged threads can lead to leaks or difficulty in attachment.
- **Storage:** If the adapter is not in continuous use, store it in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leaks from faucet connection.	Adapter not tightened sufficiently; damaged or misaligned rubber washer; incompatible thread size.	Hand-tighten the adapter further. Remove, inspect, and re-seat or replace the rubber washer. Confirm faucet thread size compatibility.
Water leaks from dishwasher hose connection.	Dishwasher hose not fully engaged with snap fitting; damaged snap fitting.	Ensure the dishwasher hose is fully pushed onto the snap fitting until it clicks. Inspect the snap fitting for damage; replace adapter if damaged.
Difficulty attaching adapter to faucet.	Incorrect thread alignment; mineral buildup on faucet threads; incompatible thread size.	Ensure threads are aligned before twisting. Clean faucet threads. Verify faucet thread size.

SPECIFICATIONS

- **Weight:** 0.15 lbs
- **Dimensions:** 1.5 x 1.5 x 1.6 inches (approximate)
- **Male Thread Size:** 15/16"-27

- **Female Thread Size:** 55/64"-27
- **Material:** Durable metal and plastic construction
- **Features:** Easy snap-on installation, corrosion-resistant

SUPPORT

For further assistance or inquiries regarding this product, please contact the manufacturer, Thanh Huyen Appliance Hub. When contacting support, please have your product model number ready. You can find information on locating your appliance's model number in the "Compatibility" section of this manual (Figure 3).