

Mecity T-38AUB-BK

Mecity 2-Slice Toaster (Model T-38AUB-BK) Instruction Manual

Your guide to safe and efficient operation

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and save these instructions. When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the toaster.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversized foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a fire or risk of electric shock.
14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

15. Do not attempt to dislodge food when the toaster is plugged in.
16. Do not operate unattended.
17. The crumb tray must be in place during operation.
18. Regularly clean the crumb tray to prevent fire hazards.

2. PRODUCT OVERVIEW

The Mecity 2-Slice Toaster is designed for efficient and versatile toasting. It features extra-wide slots, multiple browning settings, and specialized functions for various bread types.



Image: The Mecity 2-Slice Toaster in black, featuring two wide slots and a removable warming rack on top. Slices of bread are visible next to the toaster.

Components:

- **Toasting Slots:** Two extra-wide slots accommodate various bread types.
- **Browning Control Dial:** Adjusts toast shade from 1 (lightest) to 6 (darkest).
- **Function Buttons:** Cancel, Reheat, Defrost, Bagel.
- **Lever:** Lowers bread into the slots and initiates toasting.

- **Warming Rack:** Integrated rack for warming croissants or pastries.
- **Removable Crumb Tray:** Collects crumbs for easy cleaning.
- **Digital Countdown Timer:** Displays selected browning level and remaining toasting time.

4 Function Buttons

For Various Needs



CANCEL

Stop Toasting at Anytime



REHEAT

Heat and Warming Breads



DEFROST

Defrost and Toast Breads
For breads stored in refrigerator



BAGEL

Toast One Side and Warm the
Other Side



Image: A close-up view of the Mecenya 2-Slice Toaster's control panel, showing the 'CANCEL', 'REHEAT', 'DEFROST', and 'BAGEL' buttons, along with the browning control dial and digital display.

Extra-Wide Slots



Image: An overhead view of the toaster's extra-wide slots, with illustrations of a bagel, toast, English muffin, waffle, and pastries, demonstrating the versatility of the slots.

3. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains. Ensure adequate ventilation around the toaster.
3. **First Use (Burn-off):** Before first use, operate the toaster without bread on the highest browning setting (6) for a few minutes. This will burn off any manufacturing residues and may produce a slight odor or smoke, which is normal. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

4. OPERATING INSTRUCTIONS

Basic Toasting:

1. Insert up to two slices of bread into the toasting slots.
2. Select your desired browning level using the browning control dial (1-6). The digital display will show

the selected level for 4 seconds, then begin a countdown.

3. Press the lever down until it locks into place. The toasting cycle will begin.

4. Once the cycle is complete, the toast will automatically pop up.

Quick bread baking

It only takes 4 steps to toast.



Image: A four-step visual guide demonstrating how to use the toaster: 1. Put bread into slots. 2. Select browning level. 3. Press down the lever. 4. Enjoy your toasted bread.

6 Toast Settings

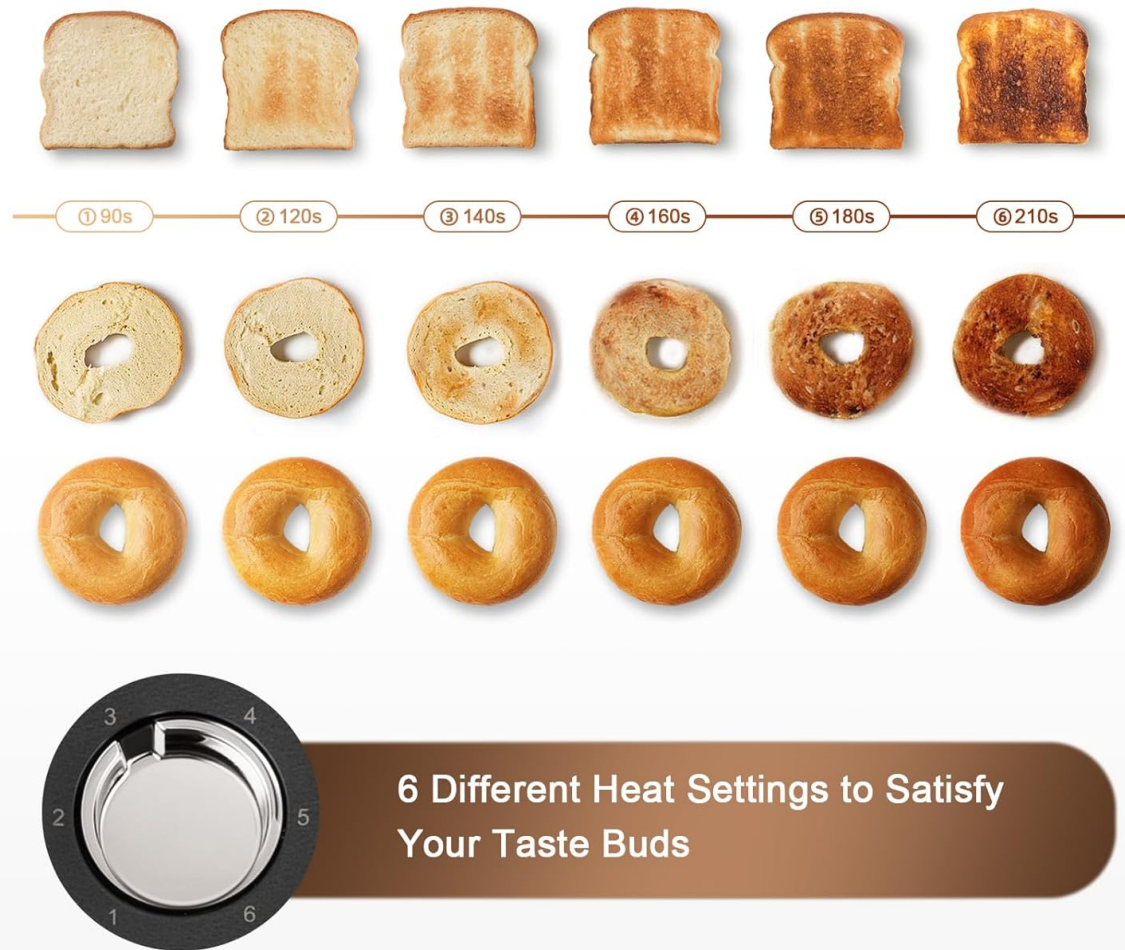


Image: A visual representation of six different browning levels, from lightly toasted (level 1) to very dark (level 6), with corresponding toast and bagel examples.

Using Function Buttons:

- **CANCEL:** Press this button at any time to stop the toasting cycle and pop up the bread.
- **REHEAT:** This mode warms up previously toasted bread for 30 seconds without further browning. Select your browning level, press the lever, then press the REHEAT button.
- **DEFROST:** This mode is for toasting frozen bread. It automatically adjusts the toasting time to defrost and toast. Select your browning level, press the lever, then press the DEFROST button.
- **BAGEL:** This mode toasts the cut side of bagels and warms the outer side. Insert the bagel with the cut side facing inwards. Select your browning level, press the lever, then press the BAGEL button.

Using the Warming Rack:

The integrated warming rack is suitable for warming croissants, pastries, or other items that should not be placed directly in the toasting slots.

1. Gently pull up the warming rack until it locks into position.
2. Place the items to be warmed on the rack.
3. Select a low browning setting (e.g., 1 or 2) and press the lever down.

4. Monitor the items closely to prevent burning.
5. Once warmed, lift the items carefully and push the warming rack back down for storage.

Your browser does not support the video tag.

Video: A short demonstration of the Mecity 2-Slice Toaster's features and functions, including the lever mechanism and the toasting slots.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and safe operation of your toaster.

1. **Always Unplug:** Before cleaning, always unplug the toaster from the power outlet and allow it to cool completely.
2. **Clean Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the surface.
3. **Clean Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting it. The crumb tray must be in place during operation.
4. **Do Not Immerse:** Never immerse the toaster in water or any other liquid.
5. **Food Stuck:** If food becomes stuck in the toaster, unplug the appliance and allow it to cool. Carefully remove the food with non-metallic tongs. Do not use metal utensils.

Easy-clean Crumb Tray

Pull out of the crumb tray and tip it into dustbin



Image: A hand removing the easy-clean crumb tray from the bottom of the Mecity 2-Slice Toaster, with toasted bread slices on a plate nearby.



Image: The underside of the Mecity toaster, illustrating the integrated cord wrap for neat storage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; lever not fully pressed down.	Ensure the toaster is securely plugged in. Check the power outlet with another appliance. Press the lever down until it locks.

Problem	Possible Cause	Solution
Bread is unevenly toasted.	Inconsistent bread thickness; moisture content of bread.	Ensure bread slices are of uniform thickness. Adjust browning setting as needed for different bread types.
Bread is stuck in the slots.	Oversized bread; toaster malfunction.	Unplug the toaster and allow it to cool. Carefully remove the bread with non-metallic tongs. Avoid inserting oversized items.
Smoke coming from toaster.	Crumbs in the bottom; food stuck; first use burn-off.	Press CANCEL, unplug, and allow to cool. Clean the crumb tray. Remove any stuck food. If it's the first use, this is normal.

7. SPECIFICATIONS

Feature	Detail
Brand	Mecity
Model Number	T-38AUB-BK
Color	Black
Material	Stainless Steel & BPA Free Plastic
Product Dimensions (L x W x H)	10.3" x 7" x 7.5"
Wattage	800 watts
Voltage	120 Volts (AC)
Number of Slices	2
Browning Settings	6
Special Features	Bagel Mode, Defrost Mode, Reheat Mode, Digital Countdown Timer, Warming Rack, Extra-Wide Slots (1.5 inch width, 4.7 inch depth, 5.4 inch length)
Item Weight	3.97 Pounds
UPC	850082039104

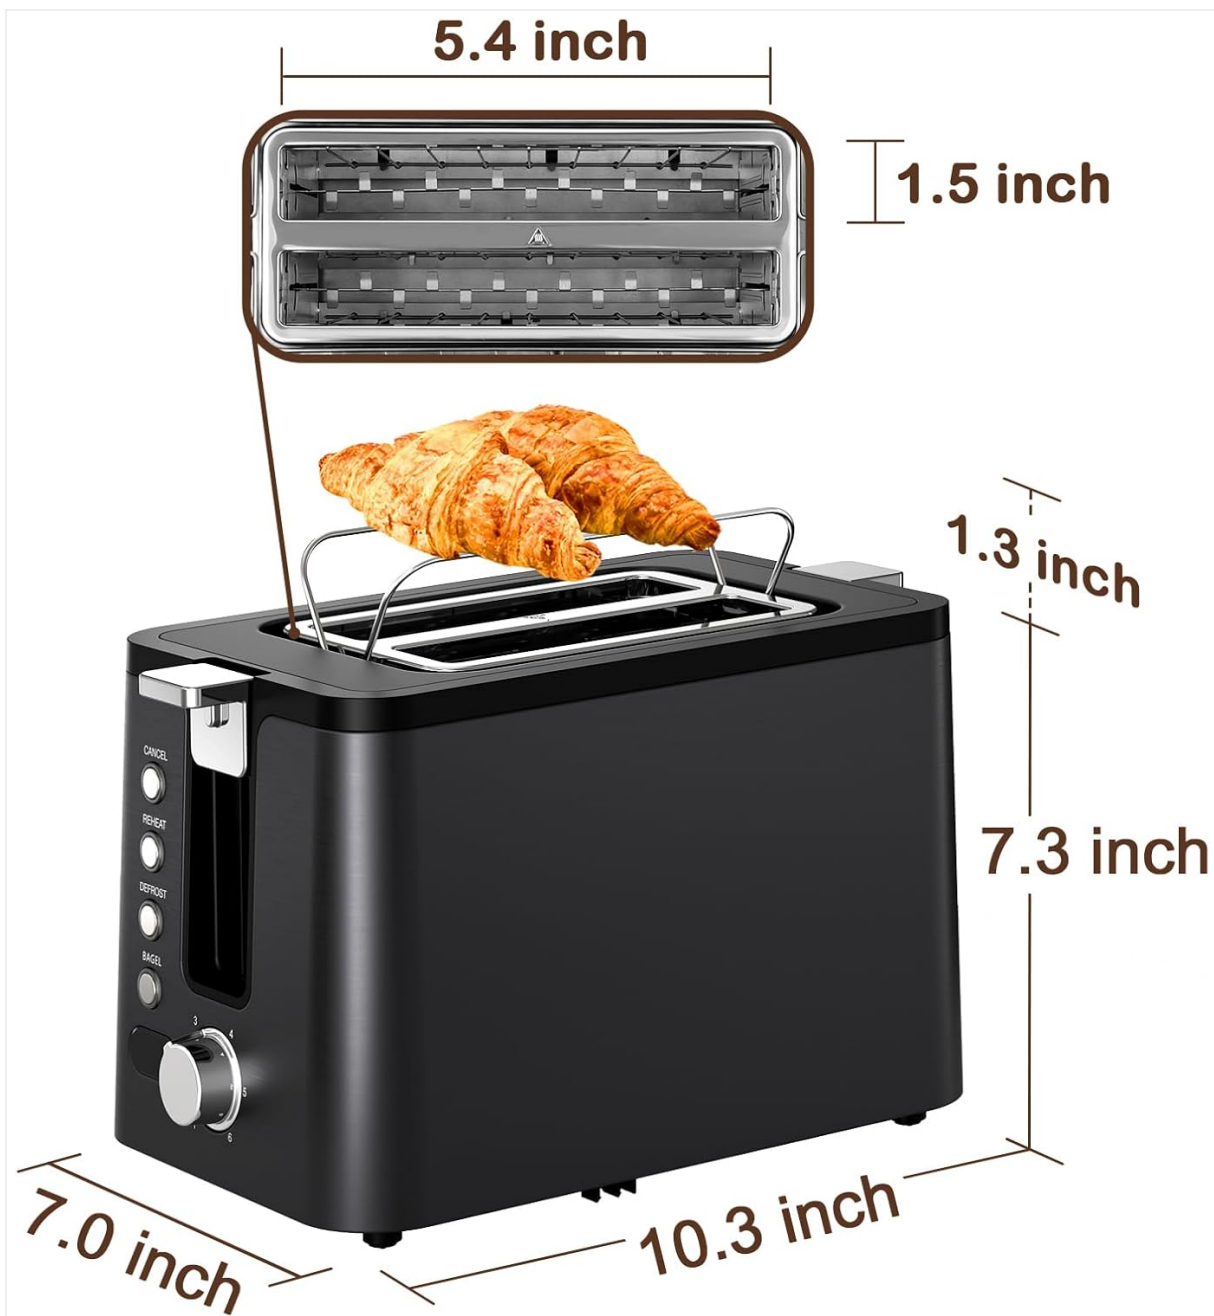


Image: A diagram showing the dimensions of the Mecity 2-Slice Toaster, including its length (10.3 inches), width (7.0 inches), height (7.5 inches), slot width (1.5 inches), and slot depth (4.7 inches).

8. WARRANTY AND SUPPORT

Mecity products are designed for reliability and performance. For warranty information or technical support, please refer to the warranty card included with your product or visit the official Mecity brand store.

For further assistance, you may visit the [Mecity Brand Store on Amazon](#).