

[Manuals.plus](#) /

› [Edillas](#) /

› Edillas Digital Kids Sport Watch 8563B Instruction Manual

Edillas 8563B

Edillas Digital Kids Sport Watch 8563B Instruction Manual

Model: 8563B

INTRODUCTION

This manual provides detailed instructions for the Edillas Digital Kids Sport Watch, Model 8563B. Please read this manual carefully before using the watch to ensure proper operation and longevity.

The Edillas 8563B is a durable and functional digital watch designed for children, featuring a 7-color LED backlight, alarm, stopwatch, date display, and 50-meter water resistance.

SETUP

Initial Power On and Time Setting

The watch comes with a pre-installed high-capacity battery. Upon first use, or after a battery replacement, you may need to set the time and date.

1. **Identify Buttons:** The watch has four buttons: **LIGHT** (top-left), **MODE** (bottom-left), **START** (top-right), and **RESET** (bottom-right).
2. **Enter Time Setting Mode:** Press the **MODE** button three times to enter the time setting mode. The seconds display will flash.
3. **Set Seconds:** Press the **RESET** button to reset the seconds to zero.
4. **Set Minutes:** Press the **START** button to move to the minutes setting. Press the **RESET** button to adjust the minutes.
5. **Set Hours:** Press the **START** button to move to the hours setting. Press the **RESET** button to adjust the hours (12/24 hour format can be toggled here).
6. **Set Date:** Continue pressing **START** to cycle through setting the month, date, and day of the week. Use the **RESET** button to adjust each value.
7. **Exit Setting Mode:** Press the **MODE** button once to exit the setting mode and return to the normal time display.

FUNCTION DISPLAY AND SETTINGS



Image: Watch face with labels for LIGHT, MODE, START, RESET buttons, and display segments for Hour, Minute, Second, and Weekday.

OPERATING INSTRUCTIONS

Normal Time Display

In normal mode, the watch displays the hour, minute, second, and day of the week. The 12/24 hour format can be selected during time setting.

Using the LED Backlight

Press the **LIGHT** button (top-left) to activate the 7-color LED backlight. Hold the **LIGHT** button for 3 seconds to cycle through different LED colors. The backlight will remain active for a few seconds after release.



Image: Demonstrates the watch's normal display and the night light effect with various LED colors.

Using the Stopwatch

1. **Enter Stopwatch Mode:** From the normal time display, press the **MODE** button once. The display will show "00:00:00".
2. **Start/Stop:** Press the **START** button to begin timing. Press **START** again to pause.
3. **Reset:** While paused, press the **RESET** button to clear the stopwatch to "00:00:00".
4. **Exit Stopwatch Mode:** Press the **MODE** button to return to the normal time display.

Setting and Using the Alarm

1. **Enter Alarm Mode:** From the normal time display, press the **MODE** button twice. The alarm time will be displayed, with the hour flashing.
2. **Set Alarm Hour:** Press the **RESET** button to adjust the alarm hour.
3. **Set Alarm Minute:** Press the **START** button to move to the alarm minutes setting. Press the **RESET** button to adjust the alarm minutes.

4. **Activate/Deactivate Alarm:** In alarm setting mode, press the **START** button to toggle the alarm ON/OFF. An alarm icon will appear on the display when activated.
5. **Exit Alarm Mode:** Press the **MODE** button to return to the normal time display.
6. **Silence Alarm:** When the alarm sounds, press any button to silence it.

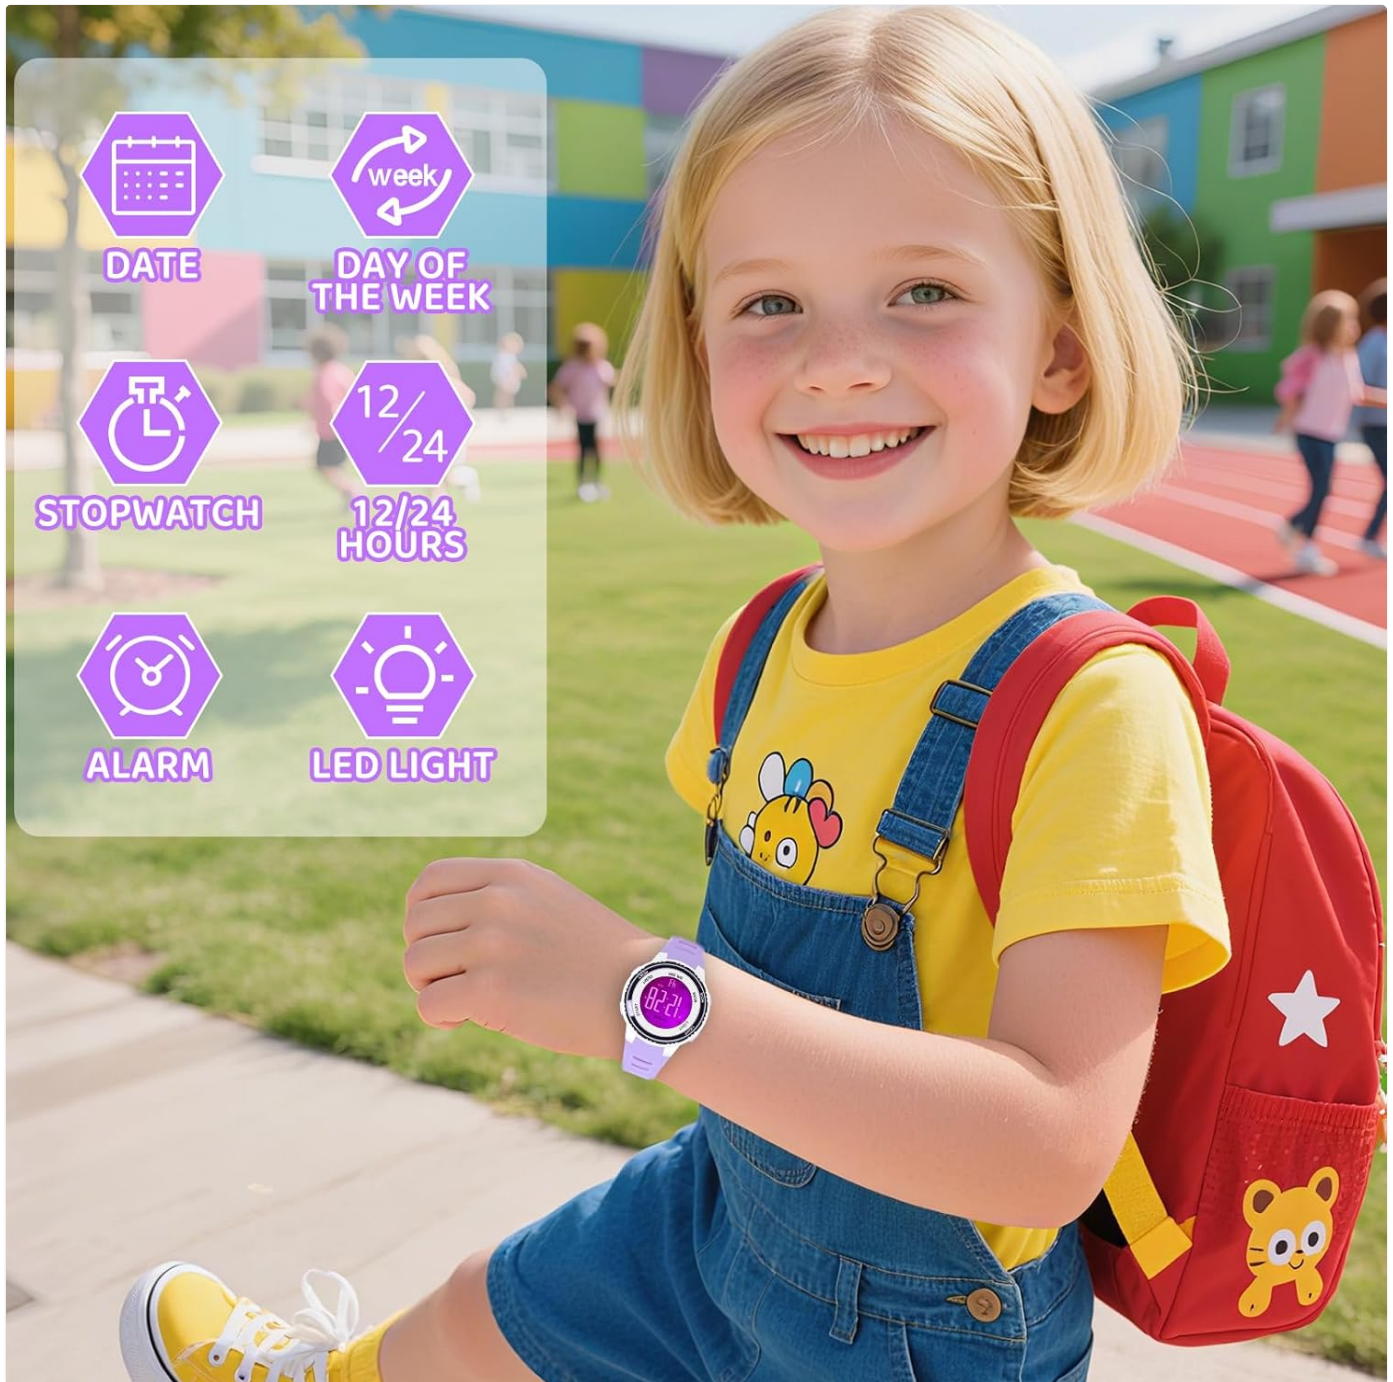


Image: Overview of watch functions including Date, Day of the Week, Stopwatch, 12/24 Hours, Alarm, and LED Light.

MAINTENANCE

Water Resistance

The Edillas 8563B watch is rated 50 meters (5 ATM) water resistant. This means it is suitable for hand washing, rain, and swimming. **Important: Do not press any buttons while the watch is submerged in water.** Avoid wearing the watch during diving or prolonged exposure to hot water (e.g., hot showers, saunas), as this can compromise the water seal and reduce the watch's lifespan.



Image: Demonstrates the watch's 30M water resistance for activities like hand washing, rain, and light water play.

Cleaning

Wipe the watch clean with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the watch's finish or strap.

Battery Replacement

The watch uses a standard non-rechargeable battery. When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low battery.	Replace the battery.
Time is inaccurate.	Time not set correctly or battery is low.	Reset the time according to the "Initial Power On and Time Setting" section. Replace battery if issue persists.
Water inside the watch.	Buttons pressed underwater or watch exposed to extreme temperatures.	Stop using the watch immediately. Take it to a qualified technician for inspection and repair. Avoid pressing buttons underwater.
LED backlight not working.	Low battery or internal fault.	Replace the battery. If the issue persists, contact customer support.

SPECIFICATIONS

- **Model Number:** 8563B
- **Display Type:** Digital
- **Water Resistance:** 50 Meters (5 ATM)
- **Functions:** Time (Hour, Minute, Second), Date, Day of Week, Alarm, Stopwatch, 12/24 Hour Format, 7-Color LED Backlight
- **Case Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Band Material:** TPU (Thermoplastic Polyurethane)
- **Dial Window Material:** Acrylic Resin
- **Case Diameter:** 44.5 mm
- **Case Thickness:** 17 mm
- **Band Width:** 1.6 cm
- **Band Length:** 24 cm
- **Product Weight:** 43 Grams
- **Minimum Fit Wrist:** 14 cm (5.51 in)
- **Maximum Fit Wrist:** 20 cm (7.85 in)
- **Power Source:** Battery Powered (1 Non-standard battery included)
- **Age Range Description:** Child



Image: Detailed dimensions of the watch, including case thickness, product weight, and wrist fit range.

WARRANTY INFORMATION

The product comes with a lifetime warranty. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you encounter any problems or have questions regarding your Edillas Digital Kids Sport Watch, please do not hesitate to contact our customer service team. We are committed to providing satisfactory service and will do our best to resolve any issues.

Contact information can typically be found on the seller's page or through your purchase platform.



Edillas Digital Kids Sport Watch 8563B Instruction Manual
© 2023 Edillas. All rights reserved.