

[Manuals.plus](#) /

› [KHROOLT](#) /

› KHROOLT Portable Dual Fuel Gas Grill and Butane Stove Model 001 Instruction Manual

KHROOLT 001

KHROOLT Portable Dual Fuel Gas Grill and Butane Stove Model 001

Instruction Manual

1. INTRODUCTION

Thank you for choosing the KHROOLT Portable Dual Fuel Gas Grill and Butane Stove, Model 001. This versatile appliance is designed for outdoor cooking, offering convenience and efficiency for various activities such as camping, tailgating, and patio use. It operates on either butane canisters or an LPG tank, providing flexibility for your fuel needs. Please read this manual thoroughly before use to ensure safe operation and optimal performance.



Image 1.1: The KHROOLT Portable Dual Fuel Gas Grill and Butane Stove in use, showing various foods being grilled.

2. SAFETY INFORMATION

Your safety is paramount. Adhere to the following guidelines to prevent injury or damage:

- Always read and understand the entire manual before operating the stove.
- Use only one fuel inlet at a time. The butane canister and LPG tank cannot be used simultaneously.
- Place the product on a stable, level surface or floor.
- Do not use the product in confined spaces. Ensure adequate ventilation.
- After use, always remove the fuel canister or disconnect the LPG tank and store it separately in a cool, well-ventilated area.
- Allow the product to cool completely before cleaning to avoid burns.
- The stove features overpressure protection, which automatically ejects unstable butane canisters for safety.
- The piezo ignition provides flame-lit confirmation, indicating successful ignition.
- Observe all local government regulations regarding outdoor cooking and waste disposal, especially when camping.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x Gas Grill Stove
- 1x Grilling Net

- 1x Baking Sheet
- 1x Brush
- 1x Food Clip
- 1x Frame
- 1x Oil Pan
- 6x Roasting Needles
- 1x Storage Case
- 1x English Manual (this document)
- Other Accessories for Use (as specified on packaging)

4. SETUP

The KHROOLT Portable Gas Grill requires minimal assembly. Follow these steps for initial setup:

1. **Unpack Components:** Carefully remove all items from the storage case.
2. **Position the Stove:** Place the gas grill stove on a stable, non-combustible surface outdoors, ensuring adequate clearance from flammable materials.
3. **Install Grill Net/Baking Sheet:** Place the desired cooking surface (grilling net or baking sheet) onto the stove.
4. **Insert Oil Pan:** Slide the oil pan into its designated slot beneath the cooking surface. Adding a small amount of water to the oil pan can help reduce flare-ups and make cleaning easier.
5. **Connect Fuel Source:**
 - **For Butane Canister:** Open the butane canister compartment, align the canister with the connector, and push it in until it locks securely. Ensure the canister is fully engaged and there are no leaks.
 - **For LPG Tank:** Connect an LPG tank (with a 9mm/0.35in inner diameter pipe) to the LPG inlet. Ensure all connections are tight and secure.

Important: Only one fuel source (butane or LPG) can be connected and used at a time.

Dual Intake Design

Meet Different Occasions Needs



*Please note both ports cannot be fed at the same time.

Image 4.1: Illustration of the dual fuel intake design, showing connection points for both butane canisters and LPG tanks.



Image 4.2: The grill with the top cover open, revealing the grilling net and the pull-out oil pan.

5. OPERATING INSTRUCTIONS

Once the stove is set up and the fuel source is connected, follow these steps to operate the grill:

1. **Ignition:** Turn the control knob to the 'MAX' position and press the ignition button. The piezo ignition system will spark, lighting the burner. Confirm that the flame is lit.
2. **Adjust Flame:** Use the adjustable control knob to regulate the flame intensity, from a low simmer to a high searing heat.
3. **Cooking:** Place food on the grilling net or baking sheet. The windproof frame helps maintain consistent heat during outdoor use.
4. **Monitoring:** Keep an eye on the food and adjust the temperature as needed. The removable grease tray collects drippings, reducing flare-ups.
5. **Shut Down:** When finished cooking, turn the control knob to the 'OFF' position. Ensure the flame is extinguished.
6. **Fuel Disconnection:** After the stove has cooled, disconnect the butane canister or LPG tank according to the safety instructions.

Well-intention Design



Overpressure Protection
High Safety



Electronic Ignition
Convenient to Use

Image 5.1: Detailed view of the control panel, highlighting the adjustment knob, electronic ignition, and overpressure protection.

6. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your grill:

- **Cool Down:** Always allow the grill to cool completely before attempting any cleaning or maintenance.
- **Cleaning the Cooking Surfaces:** The grilling net and baking sheet are detachable for easy cleaning. Use warm, soapy water and a non-abrasive sponge or brush. Avoid sharp or hard objects that could scratch the surfaces.
- **Cleaning the Oil Pan:** The deep oil pan has a pull-out design for convenient emptying and cleaning. Dispose of collected oil responsibly.
- **Exterior Cleaning:** Wipe down the exterior of the stove with a damp cloth. Do not immerse the entire unit in water.
- **Storage:** After cleaning and ensuring all parts are dry, store the stove and its components in the provided storage case. Remove and store fuel canisters or tanks separately in a cool, dry place away from direct sunlight and heat sources.

Detailed Information



Practical Frame

Protect Flames & Prevent Wind



Oil Pan

Pour out the Used Oil



Support Feet

Stable Placement

Image 6.1: Detailed view of the grill's components, including the protective frame, removable oil pan, and stable support feet.

7. TROUBLESHOOTING

If you encounter issues with your KHROOLT Portable Gas Grill, refer to the following common troubleshooting tips:

- **No Ignition/Flame:**

- Ensure the fuel canister is correctly inserted and locked, or the LPG tank is properly connected and its valve is open.
- Check if the fuel canister is empty and replace if necessary.
- Verify that the control knob is turned to the 'MAX' position before pressing the ignition button.

- **Weak Flame:**

- Check the fuel level in the canister or LPG tank.
- Ensure there are no obstructions in the burner or fuel line.

- **Gas Leak Smell:**
 - Immediately turn off the stove and disconnect the fuel source.
 - Move the stove to a well-ventilated area.
 - Check all connections for tightness. If the smell persists, do not use the stove and contact customer support.
- **Overpressure Protection Activated:**
 - If a butane canister is ejected, it indicates an overpressure situation. This is a safety feature.
 - Ensure the stove is not overheating due to prolonged use or blockage. Allow it to cool down.
 - Verify the canister is not damaged or overfilled.

8. SPECIFICATIONS

Feature	Specification
Brand	KHROOLT
Model Number	001
Product Dimensions (L x W x H)	41.5 x 28 x 11 cm (16.34 x 11.02 x 4.33 inches)
Material	Iron, Stainless Steel, Aluminum, Copper, Plastic
Fuel Type	Butane Canister, LPG Tank (Dual Fuel)
Applicable Butane Canister Size (D x H)	6.5 x 19.5 cm (2.56 x 7.68 inches)
Applicable LPG Tank Pipe Inner Diameter	9 mm (0.35 inches)
Heating Power	Up to 15,000 BTU
Pressure	0.25-0.3 MPa
Ignition Type	Piezo Electronic Ignition
Special Features	Corrosion Resistant, Windproof Frame, Overpressure Protection
Assembly Required	Yes
Gross Weight	3.2 kg (7.05 lbs)
Color	Black
UPC	754313351310



Image 8.1: Visual representation of the grill's dimensions.

9. WARRANTY AND SUPPORT

The KHROOLT Portable Dual Fuel Gas Grill and Butane Stove Model 001 comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use. For warranty claims, technical assistance, or any questions regarding your product, please contact KHROOLT customer support. Refer to the product packaging or the retailer's website for specific contact information.