

[Manuals.plus](#) /

› [Cecotec](#) /

› Cecotec Bolero DressCode 9970 Direct Drive 9 Kg Washing Machine User Manual

Cecotec Bolero DressCode 9970 Direct Drive

Cecotec Bolero DressCode 9970 Direct Drive 9 Kg Washing Machine User Manual

Model: Bolero DressCode 9970 Direct Drive | Brand: Cecotec



1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Cecotec Bolero DressCode 9970 Direct Drive 9 Kg Washing Machine. Please read these instructions carefully before installation and operation, and keep them for future reference.

The Cecotec Bolero DressCode 9970 is a 9 kg front-load washing machine with a Direct Drive motor, offering 1400 RPM spin speed and 11 washing programs. It features a FullColor screen, an XXL door for easy loading, and advanced functions like SteamMax, Spa Care, Soil Level, Delayed End, My Fav, internal light, Drum Clean Plus, and Stop&Go. This appliance is designed for high efficiency and quiet operation.

2. PRODUCT OVERVIEW

Familiarize yourself with the key components and features of your washing machine.



Figure 2.1: Front view of the Cecotec Bolero DressCode 9970 Direct Drive Washing Machine.

cecotec

Ficha de información del producto

REGLAMENTO DELEGADO (UE) 2019/2014 DE LA COMISIÓN en relación con el etiquetado energético de lavadoras y lavadoras-secadoras domésticas.

Nombre del proveedor o marca comercial: Cecotec Innovaciones, S.L.

Dirección del proveedor: Av. Reyes Católicos, 60, 46910, Alfafar (Valencia) SPAIN

Identificador del modelo: EU01_104030 - Bolero DressCode 9970 Direct Drive Steel

Parámetros generales del producto: Lavadora

Parámetro	Valor	Parámetro	Valor
Capacidad (c) (Kg)	9,0	Dimensiones en cm (a) (c)	Altura 84,5 Ancho 59,5 Profundidad 61
Índice de Eficiencia Energética (EEI _{hw}) (b)	51,9	Clase de eficiencia energética (b)	A (c)
Índice de eficiencia de lavado (a)	1,031	Efectividad del aclarado (g/kg) (a)	5,0
Consumo de energía en kWh por ciclo, basado en el programa eco 40-60. El consumo real de energía depende de las condiciones de utilización del aparato	0,494	Consumo de agua en litros por ciclo, basado en el programa eco 40-60. El consumo real de agua depende de las condiciones de utilización del aparato y de la dureza del agua	45
Temperatura máxima de los textiles tratados (°C) (c)	Capacidad 30 Media 29 Un cuarto 21	Humedad residual (%) (b)	Capacidad 53,9 Media 53,9 Un cuarto 53,9
Velocidad de centrifugado (rpm) (b)	Capacidad 1400 Media 1400 Un cuarto 1400	Clase de eficiencia de centrifugado y secado (b)	B (d)
Duración del programa (h:min) (b)	Capacidad 3:48 Media 2:54 Un cuarto 2:54	Tipo	Libre instalación
Ruido aéreo emitido expresado durante la fase de centrifugado (dB(A) re 1 pW) (b)	76	Ruido aéreo emitido expresado (fase de centrifugado) (b)	B (d)
Apagado (W)	0,50	Modo preparado (W)	N/A
Inicio diferido (W) (si procede)	4,00	Modo preparado en red (W) (si procede)	N/A

Duración mínima de la garantía ofrecida por el proveedor (a) (c): 3 años

Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado: NO

Información adicional:

Enlace al sitio web del proveedor, en el que se encuentra la información contemplada en el punto 9 del anexo II del Reglamento (UE) 2019/2023 de la Comisión: www.cecotec.es

- (a) Este elemento no se considerará pertinente a efectos del artículo 2, apartado 6, del Reglamento (UE) 2017/1369.
- (b) Para el programa ECO 40-60.
- (c) Los cambios en este punto no se considerarán relevantes a efectos del apartado 4 del artículo 4 del Reglamento (UE) 2017/1369.
- (d) Si la base de datos de productos genera automáticamente el contenido definitivo de esta celda, el proveedor no deberá adjuntar estos datos.

Figure 2.2: Product dimensions: 84.5 cm (H) x 59.5 cm (W) x 61 cm (D).



Figure 2.3: Direct Drive motor for efficient and quiet operation.

Key Features:

- **Direct Drive Motor:** Ensures high efficiency, quiet operation, and durability with minimal maintenance.
- **9 kg Capacity:** Suitable for large loads, saving time and energy.
- **1400 RPM Spin Speed:** Adjustable spin speed for efficient drying across various fabric types.
- **11 Washing Programs:** Diverse programs to suit different fabrics and washing needs.
- **FullColor Screen:** Intuitive and modern interface for easy program selection and monitoring.
- **XXL Door:** Facilitates easy loading and unloading, even for bulky items.
- **SteamMax Function:** Enhances washing with steam for deeper cleaning.
- **Spa Care Program:** Uses steam to sterilize clothes before washing, eliminating germs and bacteria, and softening fabrics.
- **Soil Level Function:** Automatically adjusts wash time based on selected dirt level.
- **Delayed End:** Allows scheduling the end of the wash cycle according to your convenience.
- **My Fav Function:** Saves your preferred washing program for quick access.
- **Internal Light:** Improves visibility inside the drum during loading and unloading.
- **Drum Clean Plus:** A self-cleaning function for the drum, extending its lifespan.
- **Stop&Go Function:** Pause the cycle to add or remove items.

3. SETUP & INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. This is a freestanding appliance.

3.1 Unpacking

Carefully remove all packaging materials. Ensure no parts are left inside the drum. Remove any transport bolts from the rear of the machine before use. Keep packaging materials out of reach of children.

3.2 Location

- Place the washing machine on a firm, level surface.
- Ensure there is adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or extreme temperatures.
- The product dimensions are 61 cm (depth) x 59.5 cm (width) x 84.5 cm (height).

3.3 Leveling

Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level. A level machine reduces vibration and noise during operation.

3.4 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread.
- Ensure all connections are tight to prevent leaks.
- Do not use old hoses; always use the new hoses supplied with the appliance.

3.5 Drain Connection

Securely place the drain hose into a standpipe or over the edge of a sink, ensuring it is properly fixed to prevent it from falling out during drainage.

3.6 Electrical Connection

- Plug the power cord into a grounded electrical outlet.
- Ensure the voltage (240 Volts) matches your household supply.
- Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

Operating your Cecotec washing machine is straightforward with its intuitive FullColor touchscreen interface.



Figure 4.1: Loading laundry through the XXL door.



Figure 4.2: FullColor touchscreen control panel for program selection.



Figure 4.3: Steam function in action, ideal for Spa Care or SteamMax programs.



Figure 4.4: Loading stained clothes, where the Soil Level function can be utilized.

4.1 Loading Laundry

- Open the XXL door and load clothes, ensuring not to overload the drum. The 9 kg capacity allows for substantial loads.
- Close the door firmly.

4.2 Adding Detergent

Add the appropriate amount of detergent and fabric softener to the dispenser drawers. Refer to your detergent packaging for recommended dosages.

4.3 Program Selection

- Turn on the washing machine.
- Use the FullColor touchscreen to select one of the 11 available washing programs (e.g., Cotton, Synthetics, Wool, Quick 15', ECO 40-60).
- Consider using the **Spa Care** program for steam sterilization or **SteamMax** for deeper cleaning.

4.4 Customizing Settings

- **Temperature Control:** Adjust the wash water temperature as needed.
- **Spin Speed:** Modify the spin speed up to 1400 RPM.
- **Soil Level:** Select the dirt level (e.g., light, normal, heavy) to optimize wash duration.
- **Delayed End:** Set a specific time for the wash cycle to finish.
- **My Fav:** Save your frequently used program and settings for quick recall.

4.5 Starting and Pausing

- Press the Start/Pause button to begin the cycle.
- To add or remove items during a cycle, use the **Stop&Go** function. Press the Start/Pause button, wait for the door to unlock, add/remove items, then close the door and press Start/Pause again to resume.

5. MAINTENANCE & CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

5.1 Drum Cleaning (Drum Clean Plus)

Utilize the **Drum Clean Plus** function periodically to clean the drum and remove any residue or odors. Follow the instructions on the FullColor screen for this program.

5.2 Detergent Dispenser

Remove and clean the detergent dispenser drawer regularly to prevent buildup of detergent and softener residues.

5.3 Door Seal

Wipe the rubber door seal after each wash to remove lint, hair, and moisture, preventing mold and unpleasant odors.

5.4 Drain Filter

Periodically check and clean the drain filter, usually located at the bottom front of the machine. This prevents blockages and ensures proper drainage.

5.5 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, program not selected, child lock active.	Check power connection, ensure door is latched, select a program, deactivate child lock.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, ensure transport bolts are removed, redistribute laundry evenly.
Water not draining	Drain hose kinked or blocked, drain filter clogged.	Check drain hose for kinks, clean the drain filter.
Water leaking	Hose connections loose, detergent dispenser overflowing, door seal damaged.	Tighten hose connections, do not overfill detergent dispenser, inspect door seal for damage.
Clothes not clean	Overloading, insufficient detergent, incorrect program selection.	Reduce load size, use correct detergent amount, select appropriate program for fabric type and soil level.

If the problem persists after trying these solutions, please contact Cecotec customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Cecotec Bolero DressCode 9970 Direct Drive Washing Machine.

Feature	Detail
Brand	Cecotec
Model Name	Bolero DressCode 9970 Direct Drive Steel
Model Number	A01_EU01_104030
Product Type	Front-load Washing Machine
Capacity	9 kg

Feature	Detail
Dimensions (D x W x H)	61 cm x 59.5 cm x 84.5 cm
Item Weight	71 kg
Color	Steel
Material (Drum)	Steel
Finish	Stainless steel
Motor Type	Direct Drive
Max Spin Speed	1400 RPM
Number of Programs	11
Control Type	Touchscreen
Special Features	Child Lock, Temperature Control, SteamMax, Spa Care, Soil Level, Delayed End, My Fav, Internal Light, Drum Clean Plus, Stop&Go
Installation Type	Freestanding
Voltage	240 Volts
Country of Origin	Spain
Included Components	1 x Washing Machine; 1 x Instruction Manual

Energy Efficiency Information:

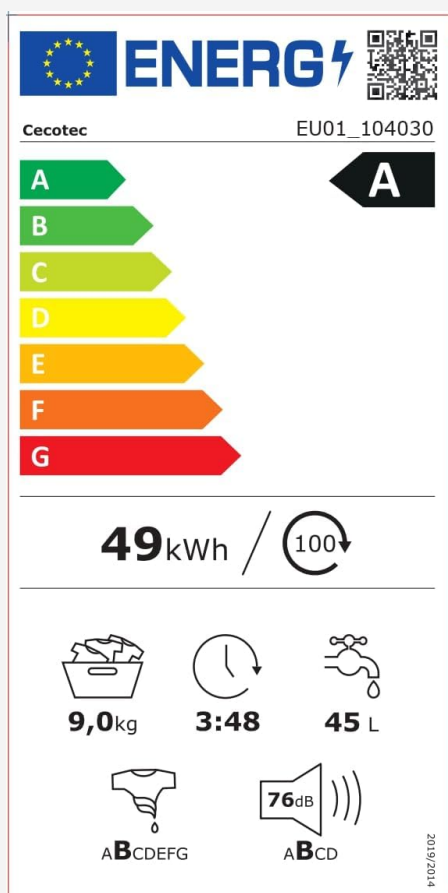


Figure 7.1: EU Energy Label for the appliance.

For more details, visit the [EPREL database](#).

8. WARRANTY & SUPPORT

Your Cecotec Bolero DressCode 9970 Direct Drive Washing Machine comes with comprehensive warranty and support.

8.1 Product Warranty

The product is covered by a **3-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

8.2 Spare Parts Availability

Spare parts for this appliance are available for a duration of **10 years** within the EU, ensuring long-term serviceability.

8.3 Customer Support

For any technical assistance, warranty claims, or inquiries, please contact Cecotec customer support. Refer to the contact information provided in your purchase documentation or visit the official Cecotec website.

The Cecotec team is dedicated to providing support and assistance whenever needed.

