

Cecotec Bolero DressCode 9970 Direct Drive

Cecotec Bolero DressCode 9970 Direct Drive Washing Machine User Manual

Model: Bolero DressCode 9970 Direct Drive

1. IMPORTANT SAFETY INFORMATION

Read all instructions before using the appliance. Keep this manual for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury when using your washing machine.

- Ensure the appliance is properly grounded.
- Do not wash items that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.

2. PRODUCT OVERVIEW

The Cecotec Bolero DressCode 9970 Direct Drive is a 9 kg front-load washing machine designed for efficient and thorough laundry care. It features a Direct Drive motor for quiet operation and durability, 11 washing programs, and a Full Color touchscreen for easy control.



Front view of the Cecotec Bolero DressCode 9970 Direct Drive washing machine, showcasing its modern design and large front door.

Key Features:

- **9 kg Capacity:** Ideal for large loads, saving time and energy.
- **Direct Drive Motor:** Ensures high efficiency, quiet operation, and extended durability with minimal maintenance.
- **1400 RPM Spin Speed:** Adjustable spin speed for efficient drying across various fabric types.
- **11 Washing Programs:** Diverse programs tailored for optimal care of different fabrics and laundry needs.

- **Full Color Touchscreen:** Intuitive and modern interface for easy program selection and monitoring.
- **XXL Porthole:** Facilitates convenient loading and unloading, even for bulky items.
- **SteamMax Function:** Utilizes steam for deeper cleaning and enhanced hygiene.
- **Spa Care Program:** Sterilizes clothes with steam before washing, eliminating germs and bacteria for softer results.
- **Soil Level Function:** Automatically adjusts wash time based on selected dirt level.
- **Delayed End:** Allows scheduling the wash cycle to finish at a convenient time.
- **My Fav Function:** Saves your preferred wash program for quick access.
- **Internal Light:** Improves visibility inside the drum during loading and unloading.
- **Drum Clean Plus:** Dedicated function for cleaning the drum, extending its lifespan.
- **Stop&Go Function:** Enables pausing the cycle to add or remove garments.
- **Energy Class A:** Ensures efficient energy consumption.



Illustration of the Direct Drive motor, highlighting its direct connection for maximum efficiency and fewer breakdowns.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Ensure no parts are left inside the drum. Remove any transport bolts from the rear of the machine before installation. Keep packaging materials out of reach of children.

3.2 Placement

Place the washing machine on a firm, level surface. Adjust the leveling feet to ensure the machine is stable and does not wobble. Allow sufficient space around the machine for ventilation and connections.



Ficha de información del producto					
REGLAMENTO DELEGADO (UE) 2019/2014 DE LA COMISIÓN en relación con el etiquetado energético de lavadoras y lavadoras-secadoras domésticas.					
Nombre del proveedor o marca comercial: Cecotec Innovaciones, S.L.					
Dirección del proveedor: Av. Reyes Católicos, 60, 46910, Alfafar (Valencia) SPAIN					
Identificador del modelo: EU01_104029 - Bolero DressCode 9970 Direct Drive					
Parámetros generales del producto: Lavadora					
Parámetro	Valor		Parámetro	Valor	
Capacidad (c) (Kg)	9,0		Dimensiones en cm (a) (c)	Altura	84,5
				Ancho	59,5
				Profundidad	61
Índice de Eficiencia Energética (EEI _w) (b)	51,9		Clase de eficiencia energética (b)	A (c)	
Índice de eficiencia de lavado (a)	1,031		Efectividad del aclarado (g/kg) (a)	5,0	
Consumo de energía en kWh por ciclo, basado en el programa eco 40-60. El consumo real de energía depende de las condiciones de utilización del aparato	0,494		Consumo de agua en litros por ciclo, basado en el programa eco 40-60. El consumo real de agua depende de las condiciones de utilización del aparato y de la dureza del agua	45	
Temperatura máxima de los textiles tratados (°C) (c)	Capacidad	30	Humedad residual (%) (b)	Capacidad	53,9
	Media	29		Media	53,9
	Un cuarto	21		Un cuarto	53,9
Velocidad de centrifugado (rpm) (b)	Capacidad	1400	Clase de eficiencia de centrifugado y secado (b)	B (d)	
	Media	1400			
	Un cuarto	1400			
Duración del programa (h:min) (b)	Capacidad	3:48	Tipo	Libre instalación	
	Media	2:54			
	Un cuarto	2:54			
Ruido aéreo emitido expresado durante la fase de centrifugado (dB(A) re 1 pW) (b)	76		Ruido aéreo emitido expresado (fase de centrifugado) (b)	B (d)	
Apagado (W)	0,50		Modo preparado (W)	N/A	
Inicio diferido (W) (si			Modo preparado en		

procede)	4,00	red (W) (si procede)	N/A
Duración mínima de la garantía ofrecida por el proveedor (a) (c): 3 años			
Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado: NO			
Información adicional:			
Enlace al sitio web del proveedor, en el que se encuentra la información contemplada en el punto 9 del anexo II del Reglamento (UE) 2019/2023 de la Comisión: www.cecotec.es			
<p>(a) Este elemento no se considerará pertinente a efectos del artículo 2, apartado 6, del Reglamento (UE) 2017/1369.</p> <p>(b) Para el programa ECO 40-60.</p> <p>(c) Los cambios en este punto no se considerarán relevantes a efectos del apartado 4 del artículo 4 del Reglamento (UE) 2017/1369.</p> <p>(d) Si la base de datos de productos genera automáticamente el contenido definitivo de esta celda, el proveedor no deberá adjuntar estos datos.</p>			

Diagram illustrating the dimensions of the washing machine: 84.5 cm height, 59.5 cm width, and 61 cm depth.

3.3 Water and Drain Connections

- Connect the water inlet hose to a cold water tap and to the corresponding inlet on the back of the machine. Ensure connections are tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during operation.

3.4 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance (240 Volt). Do not use extension cords or adapters.

3.5 First Use

Before washing clothes, run an empty cycle with a small amount of detergent to clean the drum and remove any manufacturing residues.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features a Full Color touchscreen control panel. Use the touch controls to select programs, adjust settings, and monitor the wash cycle.



A hand interacting with the Full Color touchscreen control panel, showing various wash program icons and digital display.

4.2 Loading Laundry

Open the XXL porthole. Load clothes loosely into the drum, ensuring not to overload the machine. The 9 kg capacity allows for large loads, but proper loading ensures optimal washing results.



A user loading clothes into the washing machine, demonstrating the convenience of the XXL porthole.

4.3 Adding Detergent and Softener

Open the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and softener to its designated compartment. Refer to detergent packaging for dosage recommendations.

4.4 Program Selection

Select one of the 11 available washing programs using the touchscreen. Programs are designed for different fabric types and soil levels. Examples include:

- **Cotton:** For durable cotton items.
- **Synthetics:** For synthetic fabrics.
- **Wool:** Gentle cycle for woolsens.
- **Quick 15':** For lightly soiled items needing a fast wash.
- **SteamMax:** Incorporates steam for enhanced cleaning.
- **Spa Care:** Uses steam to sterilize clothes before washing.
- **Drum Clean Plus:** A dedicated program for cleaning the washing machine drum.



Internal view of the washing machine drum with steam, illustrating the SteamMax or Spa Care function for deep cleaning and sterilization.

4.5 Customizing Cycles

- **Spin Speed:** Adjust the spin speed up to 1400 RPM to suit fabric types and desired drying efficiency.
- **Soil Level:** Use the Soil Level function to inform the machine about the dirtiness of your laundry, allowing it to optimize wash time.
- **Delayed End:** Set a specific time for the wash cycle to finish, providing flexibility for your schedule.
- **My Fav:** Save your frequently used program settings for quick recall.

4.6 Start, Pause, and Stop&Go

Press the Start/Pause button to begin or temporarily stop a cycle. The Stop&Go function allows you to pause the cycle, open the door, and add or remove items before resuming.



The washing machine actively cleaning clothes, with the drum in motion.

4.7 Internal Light

The internal light illuminates the drum, making it easier to load and unload laundry, especially in dimly lit environments.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

5.1 Drum Cleaning (Drum Clean Plus)

Use the dedicated "Drum Clean Plus" program periodically to clean the interior of the drum. This helps remove detergent residues, bacteria, and odors. Run this cycle without any laundry inside.

5.2 Detergent Dispenser Cleaning

Remove the detergent dispenser drawer and rinse it under running water to clear any accumulated detergent or

softener residues. Clean the housing of the dispenser as well.

5.3 Filter Cleaning

Locate and clean the drain pump filter regularly (usually at the bottom front of the machine). This prevents blockages and ensures efficient draining. Refer to the full manual for specific instructions on accessing and cleaning the filter.

5.4 Exterior Cleaning

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, program not selected.	Check power connection, ensure door is securely latched, select a program and press Start.
Water not filling	Water tap closed, inlet hose kinked, water supply interrupted.	Open water tap, straighten hose, check household water supply.
Machine not draining	Drain hose kinked or blocked, drain pump filter clogged.	Straighten drain hose, clean drain pump filter.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, ensure transport bolts are removed, redistribute laundry inside the drum.
Error code displayed	Specific malfunction.	Refer to the comprehensive manual for a list of error codes and their solutions. If the problem persists, contact customer support.

7. SPECIFICATIONS

Specification	Value
Model Name	Bolero DressCode 9970 Direct Drive
Brand	Cecotec
Capacity	9 kg
Maximum Spin Speed	1400 RPM
Number of Programs	11
Dimensions (D x W x H)	61 cm x 59.5 cm x 84.5 cm
Weight	68 kg

Specification	Value
Control Type	Touchscreen
Installation Type	Freestanding
Drum Material	Stainless Steel
Voltage	240 Volt
Energy Class	A

Energy Label Information



ENERG



Cecotec

EU01_104029



49 kWh / 



9,0 kg



3:48



45 L



ABCDEFG



ABCD

2019/2014

The EU Energy Label for the Cecotec Bolero DressCode 9970 Direct Drive washing machine, indicating its energy efficiency and consumption details. For more details, visit eprel.ec.europa.eu/qr/2213627.

8. WARRANTY AND SUPPORT

8.1 Product Warranty

This Cecotec washing machine comes with a **3-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. Please retain your proof of purchase for warranty claims.

8.2 Spare Parts Availability

EU spare parts for this model are guaranteed to be available for a duration of **10 years**.

8.3 Customer Support

For technical assistance, warranty claims, or any questions regarding your Cecotec washing machine, please contact Cecotec customer support. Refer to the official Cecotec website or the contact information provided in the original packaging for details.

Included components: 1 x Washing machine; 1 x Instruction manual.