

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec Bolero DressCode Dry 8400 Inverter 8kg Heat Pump Dryer User Manual](#)

Cecotec Bolero DressCode Dry 8400 Inverter

Cecotec Bolero DressCode Dry 8400 Inverter 8kg Heat Pump Dryer User Manual

Model: Bolero DressCode Dry 8400 Inverter (A01_EU01_111264)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Cecotec Bolero DressCode Dry 8400 Inverter 8kg Heat Pump Dryer. Please read these instructions carefully before installation, use, and maintenance. Keep this manual for future reference.

The Cecotec Bolero DressCode Dry 8400 Inverter is an 8 kg capacity heat pump dryer designed for efficient and gentle drying of various fabric types. It features an Inverter Plus motor for quiet and energy-efficient operation, a full touch control panel, and 15 programs for diverse drying needs.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the dryer is installed on a stable, level surface.
- Do not block ventilation openings.
- Do not dry unwashed items in the tumble dryer.
- Items soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Remove all objects from pockets, such as lighters and matches.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Supervise children to ensure they do not play with the appliance.

3. PRODUCT OVERVIEW

The Cecotec Bolero DressCode Dry 8400 Inverter dryer incorporates advanced features for optimal performance.

Key Features:

- **Heat Pump Technology:** Efficiently heats air with a liquid to dry clothes, then cools and recycles the air, ensuring continuous and efficient drying with significant energy savings.

- **Inverter Plus Motor:** Guarantees efficient operation, significant energy savings, and reduced noise during the drying cycle.
- **Full Touch Control:** Provides intuitive and comfortable programming with a single click.
- **Automatic Drying System:** Sensors measure humidity levels and adjust drying time automatically for optimal results.
- **Bidirectional Drum Rotation:** Moves garments in both directions to improve heat distribution, ensure uniform drying, and minimize wrinkles.
- **Easy Ironing Function:** Reduces wrinkles by eliminating moisture and softening garments, simplifying subsequent ironing.
- **Stop&Go Function:** Allows adding or removing garments during the drying cycle without interruption.
- **Stainless Steel Drum:** Resistant to stains and wear, providing a smooth surface suitable for all types of clothing.
- **Silence Function:** Minimizes operational noise for a quieter environment.
- **Delay Start:** Program the start of a cycle to have clothes ready when needed.
- **KidLock:** Locks the control panel to prevent unintended use and protect programmed settings.

Components:

Familiarize yourself with the main parts of your dryer.



Image 3.1: Front view of the Cecotec Bolero DressCode Dry 8400 Inverter dryer. This image shows the main body, control panel, and loading door.



Image 3.2: Interior view of the stainless steel drum. The drum features a smooth, perforated surface designed for gentle and effective drying.



Image 3.3: Diagram illustrating the internal mechanism, highlighting the bidirectional rotation of the drum and the Inverter motor for even drying.

4. SETUP

Unpacking:

Carefully remove the dryer from its packaging. Inspect for any damage during transit. Retain packaging materials for potential future transport or service.

Placement:

Position the dryer on a firm, level floor. Ensure adequate space around the appliance for ventilation. Do not install in areas prone to freezing temperatures.



Image 4.1: Proper placement of the dryer, typically next to a washing machine, ensuring sufficient space for operation and ventilation.

Electrical Connection:

Connect the dryer to a grounded electrical outlet. Ensure the voltage and frequency match the specifications listed on the appliance's rating plate.

Drainage:

The dryer collects condensed water in a reservoir. This reservoir must be emptied after each cycle. Alternatively, the dryer can be connected to a permanent drain using the provided drain hose.

5. OPERATING INSTRUCTIONS

Loading Laundry:

Open the dryer door and load garments. Do not overload the dryer; ensure clothes have enough space to tumble freely. Close the door firmly.



Image 5.1: A user loading laundry into the dryer. Ensure items are untangled and not overfilling the drum.

Control Panel and Program Selection:

The dryer features a full touch control panel for easy program selection and setting adjustments.

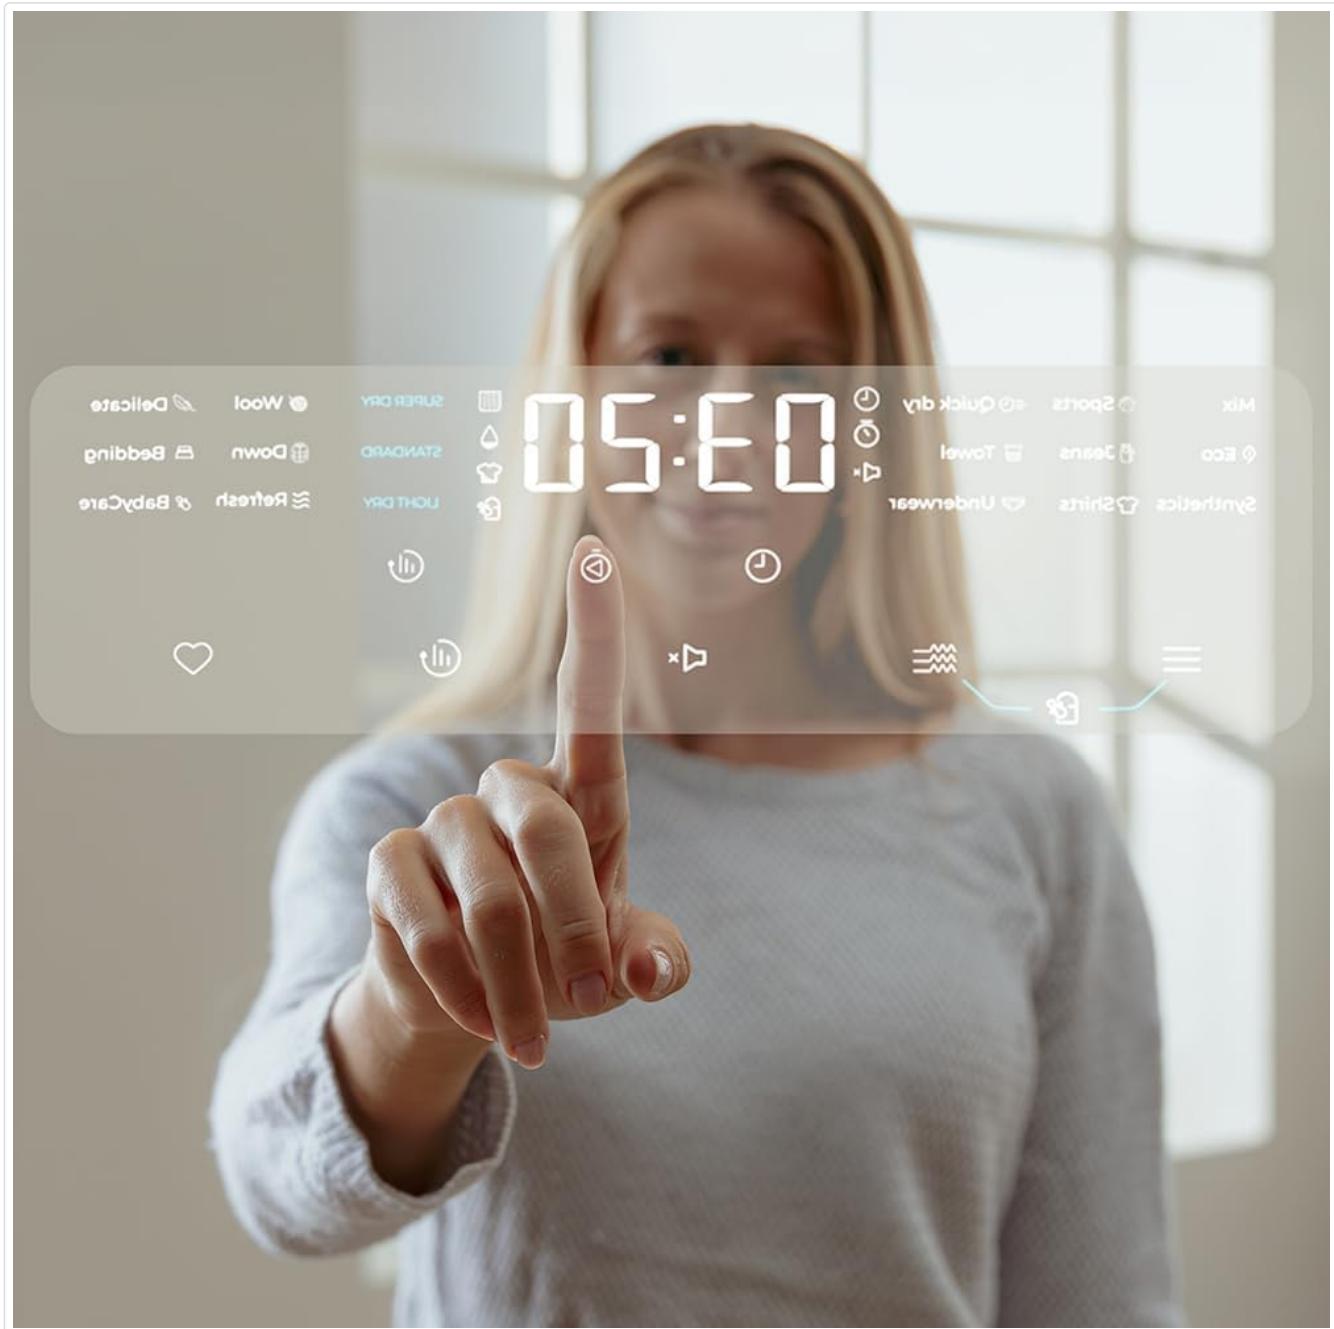


Image 5.2: Close-up of the touch control panel, showing the digital display and various program options.



Image 5.3: A user interacting with the control panel to select a drying program.

Available Programs (15 total):

- **Automatic Drying:** Utilizes humidity sensors to automatically adjust drying time.
- **Easy Ironing:** Reduces wrinkles for easier post-drying ironing.
- Specific programs for various fabric types (e.g., Cotton, Synthetics, Delicates, Wool).
- Special functions like **Silence Function** for quiet operation, **Delay Start** for timed cycles, and **KidLock** for child safety.

Starting a Cycle:

1. Load laundry and close the door.
2. Select the desired drying program using the touch control panel.
3. Adjust any additional settings (e.g., Delay Start, Silence Function).
4. Press the Start button to begin the cycle.

Stop&Go Function:

To add or remove items during a cycle, press the Pause button. The dryer will temporarily stop. Open the door, add/remove items, close the door, and press Start to resume.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your dryer.

Cleaning the Lint Filter:

The lint filter must be cleaned after every drying cycle. A clogged filter reduces drying efficiency and increases energy consumption.

1. Open the dryer door.
2. Remove the lint filter, usually located inside the door opening.
3. Remove accumulated lint by hand or with a soft brush.
4. Reinsert the filter securely.

Emptying the Water Reservoir:

The condensed water reservoir needs to be emptied after each cycle. If not emptied, the dryer will stop operating once the reservoir is full.

1. Pull out the water reservoir, typically located at the top left of the dryer.
2. Pour out the collected water.
3. Push the reservoir back into its position until it clicks.

Cleaning the Condenser:

The condenser should be cleaned periodically (e.g., every few months) to maintain drying efficiency. Refer to the full instruction manual for detailed steps on accessing and cleaning the condenser.

Exterior Cleaning:

Wipe the exterior surfaces of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting customer service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Dryer does not start	Power cord unplugged; Door not closed properly; Program not selected; KidLock activated.	Check power connection; Ensure door is latched; Select a program and press Start; Deactivate KidLock.
Clothes are not drying properly	Lint filter clogged; Water reservoir full; Overloaded dryer; Incorrect program selected.	Clean lint filter; Empty water reservoir; Reduce load size; Select appropriate program.
Excessive noise	Dryer not level; Foreign objects in drum.	Adjust leveling feet; Check drum for loose items.
Water leaking	Water reservoir not properly inserted; Drain hose improperly connected (if applicable).	Ensure reservoir is fully pushed in; Check drain hose connection.

8. SPECIFICATIONS

Specification	Value
Brand	Cecotec
Model Name	Bolero DressCode Dry 8400 Inverter
Model Number	A01_EU01_111264
Capacity	8 Kilograms
Dimensions (D x W x H)	64 x 59.5 x 84.5 cm
Product Weight	47 Kilograms
Color	White
Material	Stainless Steel (Drum)
Form Factor	Front Load
Energy Efficiency Class	C (equivalent to old A+++)
Noise Level	68 dB
Drying Efficiency	83%
Standard Program Duration	3:05 hours




Cecotec

EU01_111264



C

99 kWh / 100

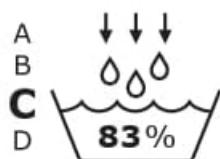

2023/2534

Image 8.1: Product dimensions for installation planning.



Image 8.2: EU Energy Label providing detailed energy consumption and performance data. For more information, visit the official EPREL database: <https://eprel.ec.europa.eu/qr/2266836>

9. WARRANTY AND SUPPORT

Your Cecotec Bolero DressCode Dry 8400 Inverter dryer is designed for durability and performance. Cecotec provides a commitment to product quality and customer satisfaction.

Spare Parts Availability:

Spare parts for this appliance are guaranteed to be available in the EU for a period of **10 years** from the date of purchase.

Customer Support:

For any questions, technical assistance, or service requests, please contact Cecotec customer support. Refer to the contact information provided in the separate warranty card or on the official Cecotec website.

The package includes: 1 x Dryer, 1 x Instruction Manual.