

[Manuals.plus](#) /

› [SoBuy](#) /

› SoBuy FSR137-W Slim Shoe Storage Cabinet Instruction Manual

SoBuy FSR137

SoBuy FSR137-W Slim Shoe Storage Cabinet Instruction Manual

Model: FSR137

INTRODUCTION

Thank you for choosing the SoBuy FSR137-W Slim Shoe Storage Cabinet. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your new shoe cabinet. Please read these instructions thoroughly before beginning assembly and retain this manual for future reference.

Neat Storage



Image: The SoBuy FSR137-W Slim Shoe Storage Cabinet, a white unit with two flip-down drawers, positioned in an entryway next to a window and radiator, with a decorative vase and book on top.

SAFETY INFORMATION

To ensure safe use of this product, please observe the following precautions:

- **Anti-Tipping Device:** It is highly recommended to secure the cabinet to a wall using the provided anti-tipping hardware. This prevents accidental tipping, especially in households with children or pets.
- **Weight Distribution:** Do not overload the cabinet or place excessively heavy items on the top surface or inside the drawers. Distribute weight evenly.
- **Assembly:** Assemble the unit on a soft, clean surface to prevent scratches. Ensure all screws and fasteners are tightened securely before use.
- **Placement:** Place the cabinet on a level, stable surface. Avoid placing it in areas with high humidity or direct sunlight, which can damage the material.
- **Children Safety:** Keep small parts and packaging materials away from children during assembly. Do not allow children to climb on or play with the cabinet.



Image: A diagram illustrating the importance of securing the cabinet to the wall with an anti-tipping device to prevent it from falling, especially when children are present.

PACKAGE CONTENTS

Before beginning assembly, please verify that all parts and hardware are present. Refer to the detailed parts list included in your product packaging. If any components are missing or damaged, please contact customer support.

Typical components include:

- Cabinet panels (top, bottom, sides, back)
- Flip-drawer mechanisms and fronts
- Internal shoe dividers/shelves
- Assembly hardware (screws, dowels, cam locks, etc.)
- Anti-tipping hardware
- Assembly tools (e.g., Allen wrench, if required)

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the step-by-step instructions provided in the separate assembly manual included with your purchase. The general steps are outlined below:

1. **Preparation:** Clear a spacious, clean, and soft area for assembly to prevent damage to the cabinet parts.
2. **Identify Parts:** Lay out all components and hardware. Match them against the parts list in your assembly manual. Each part is typically labeled.
3. **Assemble Frame:** Begin by assembling the main cabinet frame (sides, top, bottom, and back panel) according to the diagrams.
4. **Install Flip-Drawer Mechanisms:** Attach the flip-drawer mechanisms to the cabinet frame.
5. **Assemble Drawers:** Construct the flip-drawers and install the internal shoe dividers. The dividers can often be adjusted for single or double-layer shoe storage.
6. **Attach Drawer Fronts:** Secure the drawer fronts to the flip-drawer mechanisms.
7. **Final Tightening:** Ensure all connections are secure but do not overtighten screws.
8. **Install Anti-Tipping Device:** Secure the cabinet to a wall using the provided anti-tipping hardware as per the instructions.



Image: A diagram illustrating how the internal divider within a flip-down drawer can be adjusted to create either two layers for smaller shoes or one layer for taller footwear like boots.

OPERATING INSTRUCTIONS

The SoBuy FSR137-W cabinet is designed for convenient shoe storage with its flip-down drawers and versatile top surface.

- **Opening Drawers:** Gently pull the top edge of each drawer front outwards to flip it down. The drawers are designed with handle-free fronts for a clean aesthetic.
- **Storing Shoes:** Place shoes neatly within the compartments. The internal dividers can be adjusted to accommodate different shoe sizes and types (refer to assembly instructions for adjustment).
- **Closing Drawers:** Push the drawer front upwards until it clicks securely into its closed position. Ensure no shoes are obstructing the closing mechanism.
- **Top Surface Use:** The sturdy top surface can be used for decorative items, keys, mail, or other small entryway essentials. Avoid placing hot or wet items directly on the surface without protection.



Image: The SoBuy FSR137-W shoe cabinet with its top flip-down drawer open, showcasing two pairs of shoes stored neatly on the internal shelves. The cabinet is positioned in an entryway with decor on top.

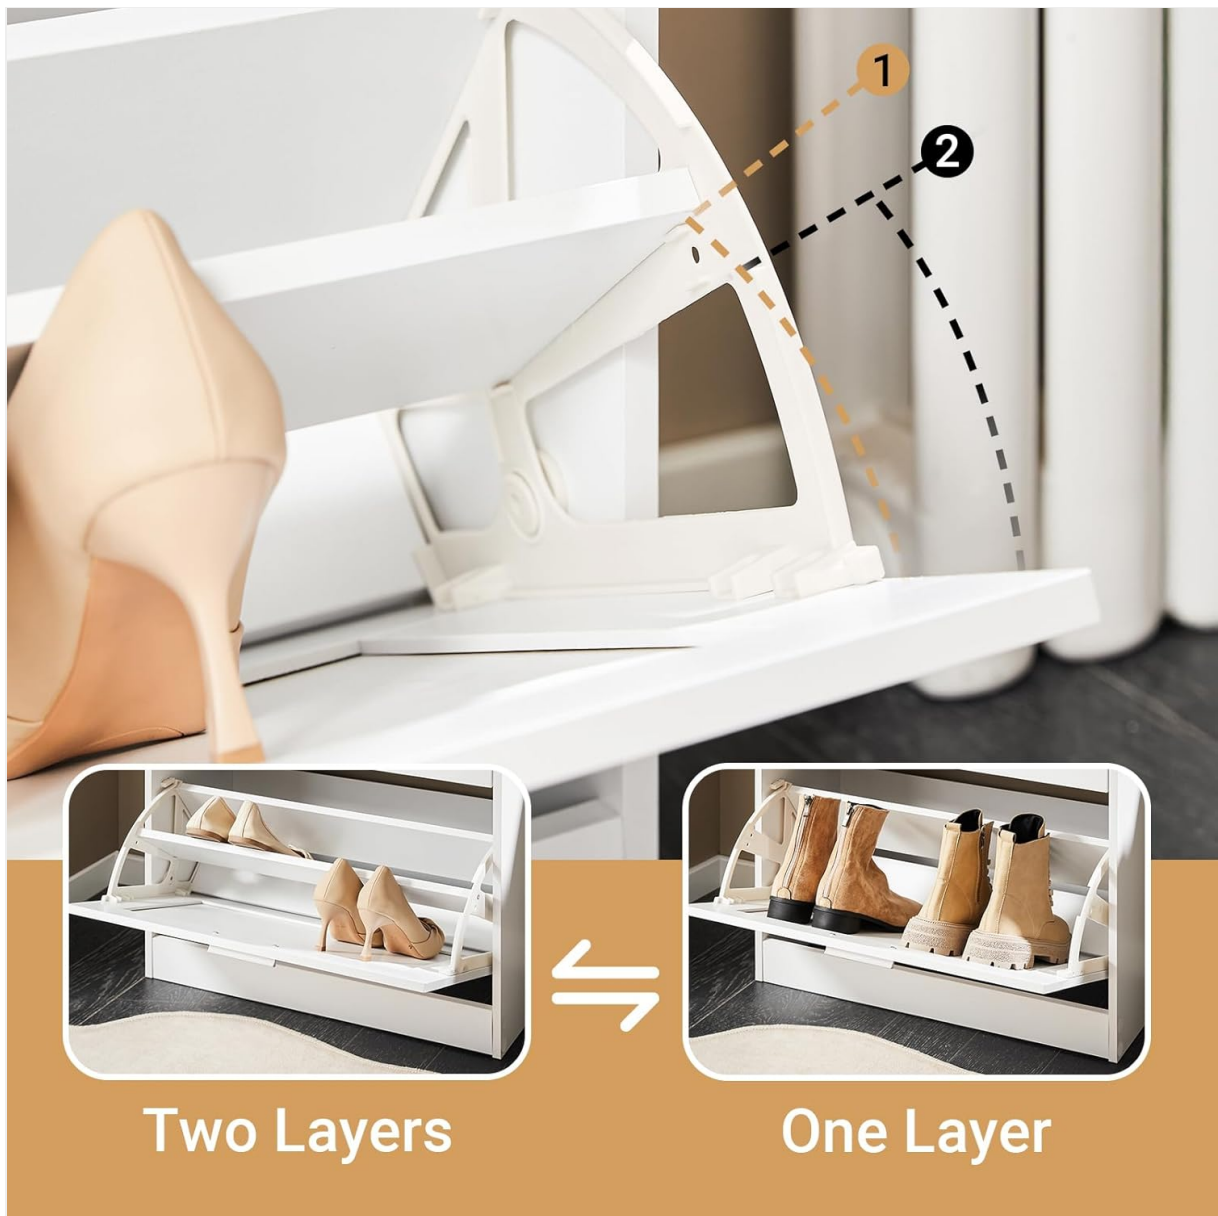


Image: A close-up view of the top surface of the SoBuy FSR137-W shoe cabinet, displaying decorative items such as a vase and a book, highlighting its multipurpose functionality.

MAINTENANCE

Proper care will extend the life and appearance of your shoe cabinet.

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or water damage.
- **Dusting:** Regularly dust the cabinet with a dry, soft cloth.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Ventilation:** Ensure adequate ventilation around the cabinet, especially if storing damp shoes, to prevent odor buildup.

TROUBLESHOOTING

If you encounter issues with your shoe cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Drawer does not close properly.	Shoes are obstructing the mechanism; hardware is loose; drawer is misaligned.	Rearrange shoes; check and tighten all assembly hardware; ensure the cabinet is on a level surface.
Cabinet feels unstable or wobbly.	Not on a level surface; anti-tipping device not installed; loose hardware.	Move to a level surface or use shims; install the anti-tipping device securely; tighten all assembly hardware.
Scratches or minor damage during assembly.	Assembly on a hard or rough surface.	Use a furniture repair pen or touch-up paint for minor blemishes. Always assemble on a soft, protective surface.

If the problem persists, please contact SoBuy customer support for further assistance.

SPECIFICATIONS

The following are the general specifications for the SoBuy FSR137-W Slim Shoe Storage Cabinet:

- **Model:** FSR137
- **Brand:** SoBuy
- **Color:** Pure White
- **Product Dimensions (Approximate):** 9.8"D x 23.6"W x 31.5"H (24.9 cm D x 59.9 cm W x 80 cm H)
- **Item Weight (Approximate):** 30 pounds (13.6 kg)
- **Mounting Type:** Floor Mount (with recommended wall attachment)
- **Door Style:** Flip Drawers
- **Assembly Required:** Yes



Image: A detailed diagram illustrating the dimensions of the SoBuy FSR137-W shoe cabinet, including its height (31.5"), width (23.6"), and depth (9.8"), along with individual drawer heights.

WARRANTY INFORMATION

For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official SoBuy website. Warranty coverage typically includes defects in materials and workmanship under normal use.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact SoBuy customer support. Contact information can typically be found on the product packaging or the official SoBuy website.

Please have your model number (FSR137) and purchase details ready when contacting support.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found that meet the criteria for inclusion in this manual.