



Manuals.plus /

› YITAHOME /

› YITAHOME Inflatable Queen Air Mattress with Steel Frame - Instruction Manual

YITAHOME MAYIHpDCX7

YITAHOME Inflatable Queen Air Mattress with Steel Frame - Instruction Manual

Model: MAYIHpDCX7

IMPORTANT SAFETY INFORMATION

- Do not leave the mattress inflated when not in use.
- Do not exceed the weight capacity of 500 lbs.
- Always follow proper inflation and deflation techniques to avoid damage or injury.
- Keep away from sharp objects and open flames.
- Ensure the power cord is properly stored when not in use to prevent damage.

PRODUCT OVERVIEW

The YITAHOME Inflatable Queen Air Mattress with Steel Frame is designed for temporary sleeping arrangements, offering comfort and portability. It features a built-in pump for quick inflation and deflation, and a sturdy steel frame for support.

Included Components:

- Inflatable Queen Air Mattress
- Integrated Steel Frame
- Built-in Electric Pump
- Rolling Carry Case



Image: The YITAHOME Inflatable Queen Air Mattress with its integrated steel frame, shown with two individuals resting on it. This illustrates the product's full setup and intended use.

SETUP INSTRUCTIONS

Follow these steps to set up your YITAHOME Inflatable Queen Air Mattress:

1. **Unzip Case and Lie Panel Flat:** Place the rolling carry case on a flat, clear surface. Unzip the case completely and lay the base panel flat.
2. **Remove Power Cord:** Locate the built-in pump on the side of the mattress. Open the compartment and remove the power cord.
3. **Automatic Frame Expansion:** As you begin to unfold the mattress, the steel bed frame will automatically expand from within the storage case. Ensure all legs are fully extended and locked into place.
4. **Inflate Mattress:** Plug the power cord into a standard electrical outlet. Turn the pump dial to the "INFLATE" position. The mattress will begin to inflate. The pump will not turn off automatically. Allow approximately 2-3 minutes for full inflation.
5. **Adjust Firmness and Turn Off Pump:** Once the desired firmness is reached, turn the pump dial to the "OFF" position. Ensure the inflation valve is securely closed.
6. **Bed is Ready:** Your inflatable air mattress is now ready for use.



Image: A visual guide demonstrating the 5-step process for setting up and inflating the YITAHOME air mattress, from unzipping the case to full inflation.



Image: Illustration showing the automatic inflation process, highlighting the 3-minute inflation time and the expansion of the mattress and frame.

OPERATING INSTRUCTIONS: INFLATION AND DEFLATION

The YITAHOME air mattress features a convenient built-in electric pump for easy inflation and deflation.

To Inflate:

1. Ensure the power cord is connected to a working electrical outlet.
2. Locate the pump dial on the side of the mattress.
3. Turn the dial clockwise to the "INFLATE" position.
4. Monitor the inflation process. The mattress will reach full firmness in approximately 2-3 minutes.
5. Once the desired firmness is achieved, turn the dial counter-clockwise to the "OFF" position.
6. Securely close the inflation valve cover.

To Deflate:

1. Ensure the power cord is connected to a working electrical outlet.
2. Locate the pump dial.
3. Turn the dial counter-clockwise to the "DEFLATE" position.
4. The pump will actively remove air from the mattress. This process also takes a few minutes.
5. Once deflated, turn the dial to the "OFF" position.
6. Unplug the power cord and store it in its compartment.

7. Fold the mattress and frame back into the rolling carry case for storage.



Image: A detailed view of the built-in pump's control dial, showing the "INFLATE" and "DEFLATE" settings, and the power cord storage compartment.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your air mattress.

- **Cleaning:** The manufacturer recommends hand washing only. Use a damp cloth with mild soap to clean the flocked top and PVC surfaces. Avoid harsh chemicals or abrasive cleaners. Ensure the mattress is completely dry before storing.
- **Storage:** After deflation, carefully fold the mattress and frame back into the rolling carry case. Store in a cool, dry place away from direct sunlight and extreme temperatures. Ensure no sharp objects are stored near the mattress.
- **Puncture Prevention:** Avoid placing the mattress on uneven surfaces or near sharp objects. While the top is puncture-resistant, extreme care should be taken.



Image: A diagram illustrating the multi-layer construction of the mattress top, including velvet flocking, puncture-resistant and waterproof layers, and flexible PVC.



Image: The rolling zipper storage box, designed for easy portability and compact storage of the deflated air bed and frame.

TROUBLESHOOTING

If you encounter issues with your YITAHOME air mattress, refer to the following common solutions:

- **Mattress Not Inflating:**

- Ensure the power cord is securely plugged into both the pump and a working electrical outlet.
- Check that the pump dial is set firmly to the "INFLATE" position.
- Verify that the inflation valve is open and not obstructed.

- **Mattress Losing Air / Sagging:**

- Confirm the pump dial is turned to "OFF" and the inflation valve cover is tightly sealed after inflation.
- Inspect the mattress surface for any punctures or small holes. Use a soapy water solution to identify leaks (bubbles will form). Patch any identified leaks with a repair kit (not included).
- Ensure the mattress is not overloaded beyond its 500 lbs weight capacity.
- Check the connection points between the mattress and the frame for any signs of damage or improper seating that might cause air loss.

- **Frame Not Expanding/Folding Properly:**

- Ensure the mattress is placed on a completely flat surface during setup and takedown.
- Gently assist the frame's expansion or folding if it catches, ensuring no fabric or components are snagged.
- Verify that all frame components are free from debris or damage that could impede movement.

SPECIFICATIONS

Brand	YITAHOME
Model Name	Air Mattress (MAYIHpDCX7)
Size	Queen
Product Dimensions (Inflated)	78.7"L x 59.1"W x 27.6"H (200cm L x 150cm W x 70cm H)
Deflated Size (in case)	32.3"L x 14.2"W x 21.9"H (82cm L x 36cm W x 55.5cm H)
Weight Capacity	500 lbs
Item Weight	47.1 pounds
Special Features	Adjustable, Built-In Pump, Easy to Clean, Flocked Top, Inflatable, Steel Frame
Material	PVC, Steel, Flocked Top
UPC	199449209287

SUPER ELASTIC DESIGN

- Comfortable rebound
- Reduce vibration
- High-density
- Robustness



Waterproof Top Flocked

Image: A diagram illustrating the inflated dimensions of the Queen size air mattress and the packed dimensions of the rolling carry case.



Image: An illustration highlighting the 500 lbs weight capacity and the durable steel tube design of the mattress frame, emphasizing its robust support.

WARRANTY AND SUPPORT

For warranty information or product support, please contact YITAHOME customer service. Details regarding specific warranty periods and claims procedures are typically provided with your purchase documentation or can be found on the official YITAHOME website.

When contacting support, please have your model number (MAYIHpDCX7) and purchase date available.