

## LOBKIN S18

# LOBKIN S18 Open Ear Clip Earbuds User Manual

Model: S18

## 1. INTRODUCTION

Thank you for choosing the LOBKIN S18 Open Ear Clip Earbuds. These earbuds are designed to provide a comfortable and safe listening experience, allowing you to stay aware of your surroundings while enjoying high-quality audio. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.

## 2. WHAT'S IN THE Box

- LOBKIN S18 Open Ear Clip Earbuds (2)
- Charging Case with Smart LED Screen (1)
- USB-C Charging Cable (1)
- User Manual (1)

### Vous recevrez

écouteurs sans fil \*2  
étui de chargement \*1  
câble USB-C à charge rapide \*1  
manuel d'utilisation \*1



Image: Contents of the LOBKIN S18 package, showing two earbuds, the charging case, a USB-C charging cable, and the user manual.

## 3. PRODUCT OVERVIEW

### 3.1 Key Features

- **Open Ear Clip Design:** Ensures awareness of surroundings and comfortable wear.
- **Smart LED Touch Screen:** High-sensitivity display on the charging case for intuitive control.
- **Bluetooth 5.4 Technology:** Provides stable, low-latency, and energy-efficient wireless connectivity.
- **4GB Integrated Memory:** Allows storage of over 1000 songs for standalone MP3 playback.
- **Long Battery Life:** Up to 8 hours of playtime per charge, with a total of 36 hours using the charging case.
- **ENC Noise Reduction:** Enhances call clarity by reducing background noise.
- **IPX4 Water Resistance:** Protects against splashes and sweat, suitable for fitness activities.

### 3.2 Components

The LOBKIN S18 earbuds feature a lightweight, ergonomic design made from skin-friendly silicone. The charging case includes a smart LED touch screen for easy access to various functions.



Image: An overview of the LOBKIN S18 Open Ear Clip Earbuds and their charging case, highlighting key features such as touch controls, water resistance, noise reduction, Bluetooth 5.4, open design, and extended battery life.

## 4. SETUP

### 4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case.
2. Connect the USB-C charging cable to the charging port on the case and to a power source.
3. The LED screen on the case will indicate the charging status.

A full charge takes approximately 1.5 hours.

# Strong Battery Life



 **1.5H**  
Fast Charge

 **8H**  
Earbuds Playtime

 **36H**  
Charging Case

Image: The LOBKIN S18 earbuds in their charging case, illustrating the battery life and charging times.

## 4.2 Bluetooth Pairing

1. Ensure the earbuds are in the charging case and the case lid is open.
2. On your mobile device, enable Bluetooth.
3. Search for available devices and select "LO-S18" to pair.
4. Once paired, the earbuds are ready for use.

Your browser does not support the video tag.

Video: A demonstration of unboxing the LOBKIN S18 earbuds, wearing them, and pairing them via Bluetooth to a smartphone. The video also shows interaction with the smart LED touch screen on the charging case.

## 5. WEARING INSTRUCTIONS

The LOBKIN S18 earbuds feature an open clip design for a secure and comfortable fit without entering the ear canal.

1. Identify the left (L) and right (R) earbuds.
2. Place the front part of the earbud into your ear.
3. Adjust the clip so the rear part sits comfortably behind your ear, ensuring a snug fit.

# Open clip ear design

Lightweight and Comfortable,  
Perfect for long wear

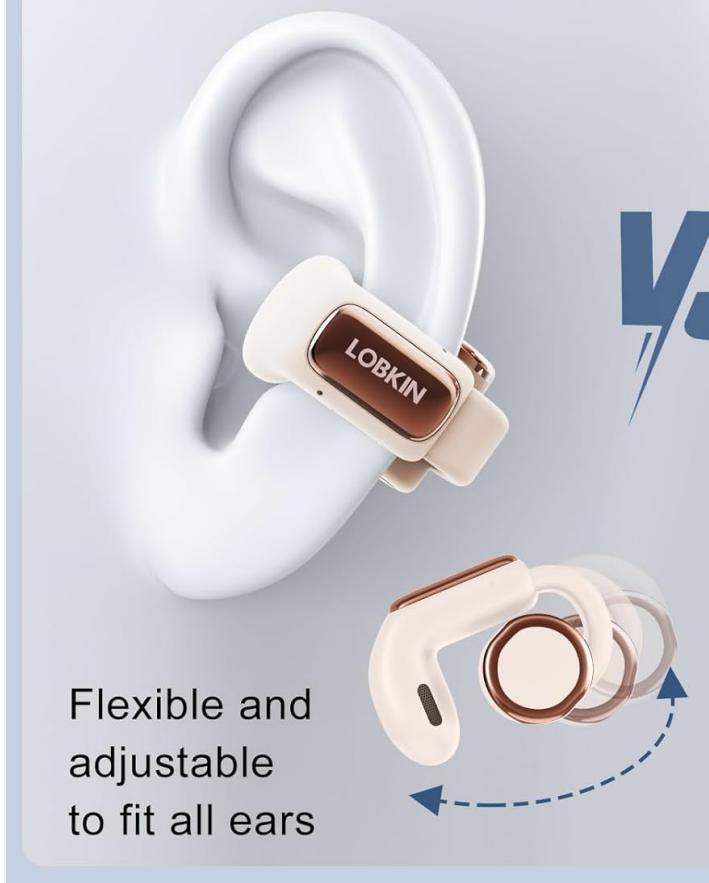


Image: A visual comparison of the LOBKIN S18's open clip ear design with traditional in-ear earbuds, highlighting the ergonomic and comfortable fit.

## Comment le porter



Image: Step-by-step guide on how to correctly position the LOBKIN S18 earbuds on the ear, demonstrating the flexible and adjustable clip.

## 6. OPERATING INSTRUCTIONS

### 6.1 Smart LED Touch Screen Functions

The charging case features a smart LED touch screen that provides access to various settings and controls.

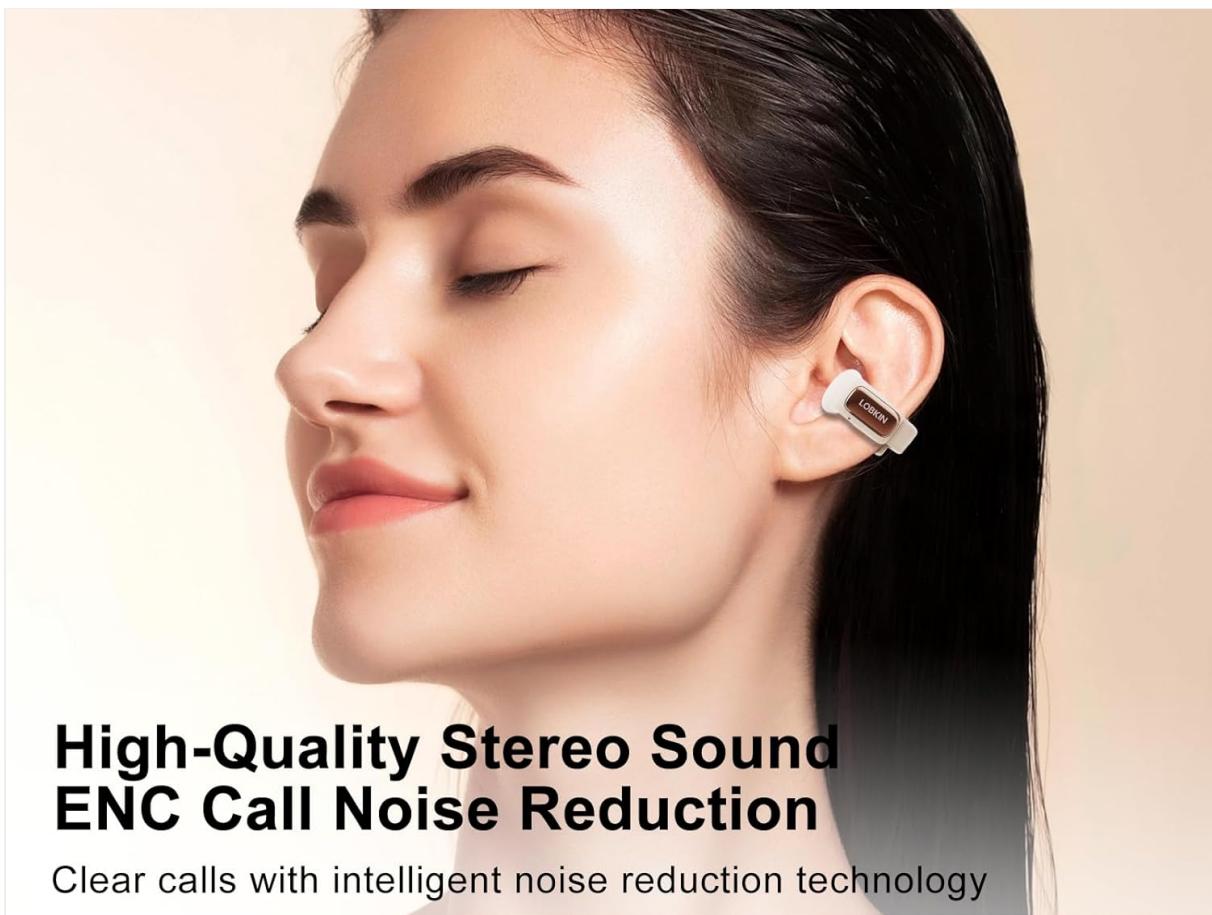


Image: The LOBKIN S18 charging case's smart LED touch screen, showing various available functions and settings.



Image: A user interacting with the smart color LCD touch screen on the LOBKIN S18 charging case, showcasing its multi-functional interface.

## 6.2 Earbud Touch Controls

The earbuds themselves have touch-sensitive areas for controlling playback and calls.

Action	Control
Answer/Hang up Call	Single tap L/R
Play/Pause	Single tap L/R
Reject Call	Tap and hold L/R for 2 seconds
Volume Down	Double tap L
Volume Up	Double tap R
Previous Song	Triple tap L
Next Song	Triple tap R
Activate Voice Assistant	Tap and hold L for 2 seconds
Activate/Deactivate Game Mode	Double tap R



Image: A visual guide to the touch controls on the LOBKIN S18 earbuds, detailing various gestures and their corresponding functions.

### 6.3 4GB Integrated Memory (MP3 Mode)

The charging case has 4GB of built-in memory, allowing you to store and play music directly from the earbuds without needing a connected phone.

1. To transfer music, connect the charging case to a computer using the USB-C cable. The case will appear as a removable drive.
2. Drag and drop your desired MP3 files into the designated folder on the device.
3. On the LED screen, navigate to the music playback interface. There will be an icon to switch to local playback mode.
4. In local playback mode, only songs stored in the earbud's memory can be played, and Bluetooth will automatically disconnect.

## Mémoire intégrée de 4 Go

Capacité de stockage de plus de 1 000 chansons : profitez de votre musique à tout moment et en tout lieu, sans appareil mobile.

Interface de lecture : Une icône de transfert de fichiers se trouve sous le bouton de lecture. Cliquez dessus pour passer en mode lecture locale (après le changement, seuls les morceaux enregistrés dans la mémoire du casque peuvent être lus, et le Bluetooth se déconnecte automatiquement).



Image: The LOBKIN S18 charging case, illustrating its 4GB integrated memory for storing music.

### 6.4 Find Missing Earbuds Function

If you misplace an earbud, use the 'Find Earbuds' function on the charging case's LED screen.

1. On the LED screen, find the 'Find Earbuds' interface.
2. Tap the icon for the missing earbud (L or R).
3. Tap 'Start', and the corresponding earbud will emit a 'beep' sound.
4. Tap 'Stop' to end the search.

*Note: The earbuds must be connected to the charging case and within connection range for this function to work.*

## Trouvez les écouteurs manquants

**Step 1** Trouvez l'interface L / R

**Step 2** Cliquez sur l'icône du casque L / R

**Step 3** Cliquez sur Démarrer et le casque L / R correspondant fera un son "bip, bip"

**Step 4** Cliquez sur Arrêtez pour terminer.

(Remarque: les écouteurs doivent être connectés au boîtier de charge et dans la plage de connexion)



Image: Instructions for using the 'Find Missing Earbuds' feature, showing the interface on the charging case and how to activate the sound.

### 6.5 Bluetooth Camera Function

The earbuds can be used to remotely trigger your phone's camera.

1. Ensure the earbuds are correctly connected to your phone via Bluetooth.
2. Open your phone's camera application.
3. Tap the camera icon on the earbud's touch control to synchronize with your phone's camera interface and take a photo.

*Note: The phone must be within Bluetooth connection range.*



### Fonction appareil photo Bluetooth

- Step 1** Le casque est correctement connecté au téléphone .
- Step 2** Ouvrez d'abord l'appareil photo du téléphone .
- Step 3** Cliquez sur l'icône de l'appareil photo sur l'étui de chargement pour synchroniser l'interface de l'appareil photo du téléphone.

(Remarque : la distance est comprise dans la portée de connexion)

Image: A user demonstrating the Bluetooth camera function, showing a smartphone with the camera app open, ready to be triggered by the earbuds.

## 7. MAINTENANCE

To ensure the longevity and optimal performance of your LOBKIN S18 earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage. Store in a cool, dry place.
- **Water Exposure:** While the earbuds are IPX4 water-resistant, avoid prolonged exposure to water or submersion. Dry them thoroughly if they get wet.
- **Charging:** Use only the provided USB-C cable for charging. Avoid overcharging or using damaged cables.

## 8. TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing	Ensure Bluetooth is enabled on your device. Place earbuds in case, open lid, and research for "LO-S18". Ensure earbuds are charged.
No sound	Check volume levels on both earbuds and connected device. Ensure earbuds are paired and connected. Try restarting the connected device.
Poor sound quality	Ensure earbuds are clean and properly seated on your ears. Move closer to the connected device to avoid interference.
Charging case not charging	Check the USB-C cable and power adapter. Ensure connections are secure. Try a different cable or power source.
Touch controls unresponsive	Ensure your fingers are clean and dry. Try restarting the earbuds by placing them in the case and closing the lid for a few seconds.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	S18
Connectivity Technology	Wireless (Bluetooth 5.4)
Integrated Memory	4GB
Earbud Playtime	Up to 8 hours
Total Playtime (with case)	Up to 36 hours
Charging Time	Approx. 1.5 hours
Water Resistance	IPX4
Microphone	Built-in with ENC Noise Reduction
Control Type	Touch
Material	Acrylonitrile Butadiene Styrene (ABS)
Compatible Devices	Phones, tablets, desktops, car audio systems
Battery Composition	Lithium-polymer

## 10. SAFETY INFORMATION

---

- Do not disassemble or modify the product.
- Keep away from extreme temperatures, direct sunlight, and open flames.
- Avoid dropping or subjecting the product to strong impacts.
- Keep out of reach of children and pets.
- Do not use the earbuds at excessively high volumes for extended periods to prevent hearing damage.
- Be aware of your surroundings when using open-ear earbuds, especially in traffic or hazardous environments.

## 11. WARRANTY AND SUPPORT

---

LOBKIN products come with a standard manufacturer's warranty. For detailed warranty information, product support, or to report any issues, please refer to the contact information provided on the product packaging or visit the official LOBKIN website.