

Matbip Matbip Multi-Platform Wireless Gaming Controller

Matbip Multi-Platform Wireless Gaming Controller

User Instruction Manual

INTRODUCTION

Thank you for purchasing the Matbip Multi-Platform Wireless Gaming Controller. This controller is designed to enhance your gaming experience across various platforms, including Nintendo Switch, Android, iOS, and PC. It features advanced functions such as TURBO burst, macro programming, customizable RGB lighting, and HD vibration, providing precise control and immersive feedback. Please read this manual carefully before use to ensure proper operation and to fully utilize all features.

PRODUCT OVERVIEW

Familiarize yourself with the various components and buttons of your Matbip controller.



Image: Front view of the Matbip Multi-Platform Wireless Gaming Controller. It features a white body with blue textured grips on the left and red textured grips on the right. The joysticks are illuminated with a rainbow RGB light. Standard buttons (A, B, X, Y), a D-pad, and central function buttons (Home, Plus, Minus, T) are visible.

Key Components:

- **Left/Right Joysticks:** For directional control, with customizable RGB lighting.
- **D-Pad:** For precise directional input.
- **Action Buttons (A/B/X/Y):** Standard gaming input buttons.
- **Shoulder Buttons (L/R/ZL/ZR):** Top-mounted trigger and bumper buttons.
- **Back Buttons:** Additional programmable buttons on the rear for strategic gameplay.
- **Home Button:** Returns to the system home screen.
- **Plus (+) / Minus (-) Buttons:** System-specific function buttons.
- **T Button (TURBO):** Activates and manages the TURBO burst function.
- **Charging Port:** USB-C port for charging.
- **Indicator Lights:** Display connection status and battery level.

SETUP

1. Charging the Controller

Before first use, fully charge the controller. Connect the provided USB-C cable to the controller's charging port and the other end to a USB power source (e.g., console, PC, or USB wall adapter). The indicator lights will show

charging status and turn off when fully charged.

2. Pairing with Devices

The controller supports Bluetooth wireless connection across multiple platforms.

For Nintendo Switch:

1. On the Switch HOME Menu, select **Controllers > Change Grip/Order**.
2. Press and hold the **Home button** on the Matbip controller for 3-5 seconds until the indicator lights flash rapidly.
3. Once paired, the indicator light(s) on the controller will remain solid.

For Android/iOS Devices:

1. Enable Bluetooth on your Android or iOS device.
2. Press and hold the **Home button** on the Matbip controller for 3-5 seconds until the indicator lights flash rapidly.
3. On your device's Bluetooth settings, select the controller (e.g., "Matbip Controller") from the list of available devices to pair.

For PC (Windows):

1. Ensure your PC has Bluetooth enabled. Go to **Settings > Devices > Bluetooth & other devices**.
2. Click **Add Bluetooth or other device > Bluetooth**.
3. Press and hold the **Home button** on the Matbip controller for 3-5 seconds until the indicator lights flash rapidly.
4. Select the controller from the list of devices to pair.

OPERATING INSTRUCTIONS

TURBO Burst Function:

The TURBO function allows for rapid, automatic button presses, ideal for combat games.

- **To activate TURBO:** Press and hold the **T button**, then press the desired action button (e.g., A, B, X, Y, L, R, ZL, ZR). The button will now continuously activate when held down.
- **To adjust TURBO speed:** While holding the **T button**, move the **right joystick up or down** to cycle through 3 different burst speeds.
- **To deactivate TURBO:** Press and hold the **T button**, then press the same action button again.

Macro Function:

Program a sequence of button presses to a single back button for complex actions.

- Specific instructions for macro programming will be detailed in the full manual. Generally, this involves entering a programming mode, pressing the sequence, and assigning it to a back button.

Customizable RGB Lighting:

The joysticks feature 9-color RGB lighting to enhance your gaming atmosphere.

- **To change RGB color/mode:** Press a specific button combination (e.g., T + Left Joystick click) to cycle through different colors and lighting effects.

HD Vibration Adjustment:

Adjust the intensity of the HD vibration feedback to your preference (4 levels).

- **To adjust vibration:** Press a specific button combination (e.g., T + D-Pad Up/Down) to cycle through the 4 vibration levels.

Gyro Sensor:

The high-precision gyro sensor enables intuitive motion control in supported games.

- The gyro sensor is automatically active when connected to a compatible device (e.g., Nintendo Switch) and used in games that support motion controls.

Sleep Wake-up Function:

The controller supports waking up your Nintendo Switch console from sleep mode.

- When the Switch is in sleep mode, simply press the **Home button** on the controller to wake it up and reconnect.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your controller.

- **Cleaning:** Use a soft, dry cloth to wipe the controller. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Battery Care:** Avoid fully discharging the battery frequently. If storing for a long period, charge the controller to about 50% every few months.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

TROUBLESHOOTING

If you encounter issues with your controller, please refer to the following common solutions:

Problem	Possible Solution
Controller does not turn on.	Ensure the controller is charged. Connect it to a power source using the USB-C cable.
Controller does not pair.	Ensure Bluetooth is enabled on your device. Make sure the controller is in pairing mode (flashing lights). Try restarting both the controller and the device.
Input lag or disconnection.	Ensure there are no strong wireless interferences nearby. Move closer to the device. Re-pair the controller.
Buttons or joysticks are unresponsive.	Try resetting the controller (refer to the full manual for reset instructions, usually a small pinhole button). Ensure no debris is obstructing the buttons.
Vibration not working.	Check if vibration is enabled in the game or system settings. Adjust the vibration intensity on the controller.

SPECIFICATIONS

Feature	Detail
Product Dimensions	10 x 15 x 6.5 cm
Weight	300 g
Connectivity	Bluetooth Wireless
Compatibility	Nintendo Switch, Android, iOS, PC (Windows)
Special Features	TURBO Burst, Macro Function, 9-Color RGB Lighting, 4-Level HD Vibration, Gyro Sensor, Back Buttons, Sleep Wake-up
ASIN	B0FHWRK7CQ
Release Date	July 16, 2025

WARRANTY AND SUPPORT

Matbip is committed to providing high-quality products and customer satisfaction. This product comes with a standard manufacturer’s warranty. For detailed warranty information, please refer to the documentation included with your purchase or contact Matbip customer support.

If you require further assistance, have questions, or encounter issues not covered in this manual, please contact our customer support team. A Japanese instruction manual is included with the product to ensure ease of use for first-time users.

Contact Information: Please refer to the packaging or the official Matbip website for the most up-to-date customer support contact details.