

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Norelco](#) /
- › [Norelco Philips All-in-One 3000 Series MG3919/50 Trimmer User Manual](#)

## Norelco MG3919/50

# Norelco Philips All-in-One 3000 Series MG3919/50 Trimmer User Manual

Model: MG3919/50

---

## INTRODUCTION

---

This manual provides comprehensive instructions for the safe and effective use of your Norelco Philips All-in-One 3000 Series MG3919/50 trimmer. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The Norelco Philips All-in-One 3000 Series MG3919/50 trimmer, showcasing the device and its various attachments within its packaging.

## IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the device:

- Use the trimmer with caution to avoid injury.
- Keep the trimmer away from water sources.
- Do not use the trimmer on infants or children.
- Always follow recommended cleaning and maintenance procedures.
- Unplug the trimmer before cleaning or storing it.
- Keep the trimmer out of reach of children and pets.

## PACKAGE CONTENTS

Verify that all items are present in the package:

## What's in the box



Comfort blades



Nose and ear trimmer



Stubble combs  
1-2 mm



Beard combs  
3-7 mm



Hair combs  
9-16 mm



Soft pouch



Cleaning brush



USB-A cable

Image: A visual representation of all components included with the trimmer, such as comfort blades, nose and ear trimmer, various combs, cleaning brush, soft pouch, and USB-A cable.

- Philips Norelco All-in-One Trimmer (MG3919/50)
- Comfort Blades attachment
- Nose and Ear Trimmer attachment
- 2x Stubble Combs (1-2 mm)
- 3x Beard Combs (3-7 mm)
- 3x Hair Combs (9-16 mm)
- Cleaning Brush
- Soft Pouch
- USB-A Charging Cable (Power adapter not included)

## SETUP

### Charging the Trimmer

Before first use, fully charge the trimmer. A full charge provides up to 60 minutes of runtime.

1. Connect the USB-A charging cable to the trimmer's charging port.

2. Plug the USB-A end of the cable into a compatible USB power adapter (not included) or a USB port.
3. The battery indicator light will illuminate during charging. A full charge typically takes 8 hours.
4. Disconnect the charger once fully charged or when ready for use.

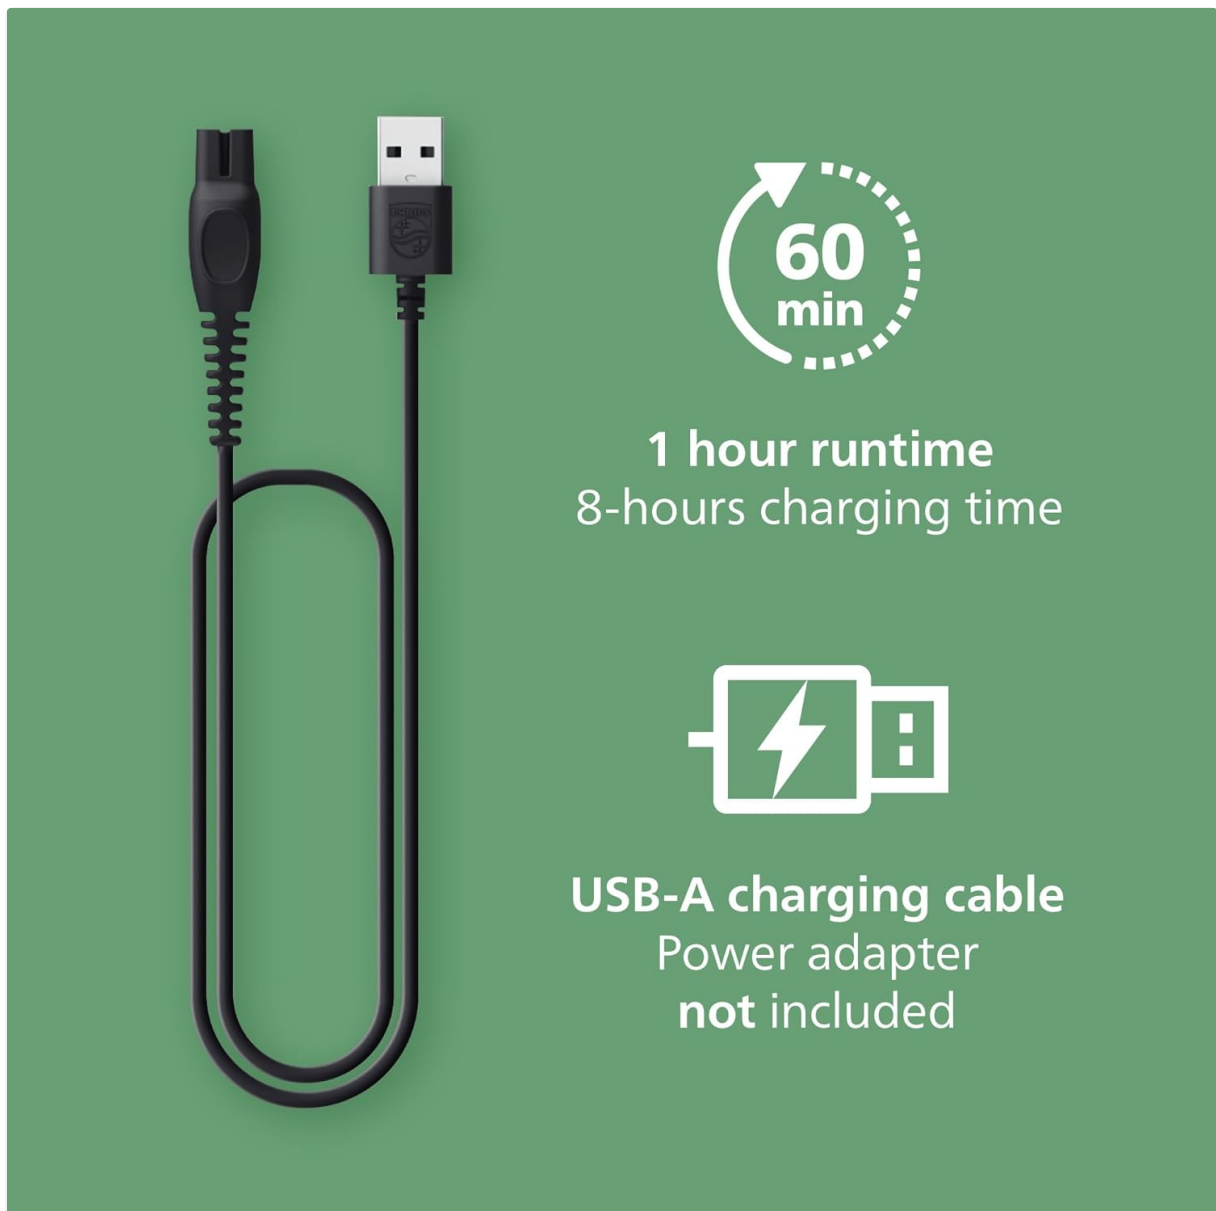


Image: The USB-A charging cable, illustrating its connection and highlighting the 60-minute runtime and 8-hour charging time.

## Attaching and Detaching Accessories

To attach an accessory (e.g., a comb or the nose trimmer):

1. Ensure the trimmer is turned off.
2. Align the desired attachment with the trimmer head.
3. Press firmly until it clicks into place.

To detach an accessory:

1. Ensure the trimmer is turned off.
2. Gently pull the attachment away from the trimmer head.

## OPERATING INSTRUCTIONS

The Norelco Philips All-in-One 3000 Series trimmer is designed for versatile grooming of your beard, hair, and nose/ear areas.



Image: A man demonstrating the use of the trimmer for various grooming tasks, including beard trimming, hair cutting, and detail work.

### General Trimming (Beard and Hair)

1. Ensure your hair is clean and dry.
2. Select the appropriate comb attachment for your desired hair length:
  - Stubble Combs: 1-2 mm
  - Beard Combs: 3-7 mm
  - Hair Combs: 9-16 mm
3. Attach the chosen comb securely to the trimmer.
4. Turn on the trimmer.
5. Place the flat top of the comb against your skin and move the trimmer slowly against the direction of hair growth.
6. For precise edging, remove the comb attachment and use the trimmer blade directly against the skin.

### Using the Nose and Ear Trimmer

The dedicated nose and ear trimmer attachment allows for safe removal of unwanted hair.



## Nose and ear trimmer

Remove unwanted hair without nicks or cuts

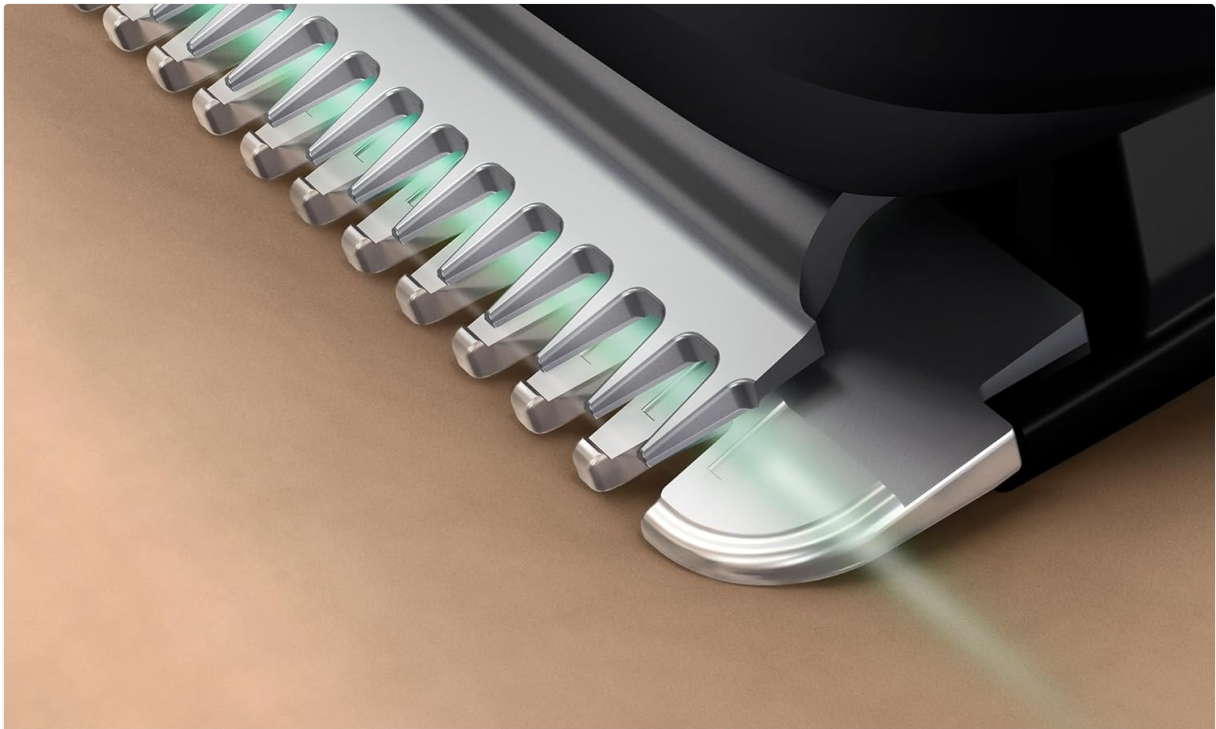


Image: A man demonstrating the use of the nose and ear trimmer attachment for safe and efficient hair removal.

1. Ensure the trimmer is turned off.
2. Attach the nose and ear trimmer head.
3. Turn on the trimmer.
4. Gently insert the trimmer tip into your nostril or ear canal.
5. Move the trimmer in a circular motion to cut hairs. Do not insert too deeply.

### Self-Sharpening Blades

The trimmer features self-sharpening, skin-friendly blades with rounded tips for a comfortable and precise trim. These blades maintain their sharpness over time and do not require oiling.



## Self-sharpening blades with rounded tips

Designed for more comfortable grooming



Image: A detailed view of the trimmer's self-sharpening blades, highlighting their rounded tips designed for skin comfort.

### MAINTENANCE

#### Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.



## Rinseable attachments

Easy to clean and maintain



Image: Trimmer blades and comb attachments being rinsed under running water for easy cleaning.

1. Turn off and unplug the trimmer from any power source.
2. Remove any attached combs or trimmer heads.
3. Rinse the trimmer blades and comb attachments under running water.
4. Use the provided cleaning brush to remove any stubborn hair particles from the blades and inside the attachments.
5. Allow all parts to air dry completely before reattaching or storing.
6. Do not immerse the main trimmer body in water.

## TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following common solutions:

- **Trimmer not turning on:** Ensure the trimmer is sufficiently charged. Connect it to the charger for at least 30 minutes before attempting to turn it on again.
- **Poor trimming performance:**
  - Check if the blades are clean and free of hair buildup. Clean them as described in the Maintenance section.

- Ensure the battery is fully charged. Low battery can affect motor speed and cutting efficiency.
- Verify that the correct attachment is securely fitted.
- **Excessive noise or vibration:** Turn off the trimmer and check for any foreign objects lodged in the blades or attachments. Clean thoroughly. If the issue persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	MG3919/50
Power Source	Battery Powered
Battery Type	1 AAA battery (included)
Runtime	Up to 60 minutes
Charging Time	Approximately 8 hours for a full charge
Blades	Self-sharpening, skin-friendly comfort blades
Attachments	13 pieces (trimmer, nose/ear trimmer, various combs)
Weight	0.7 Pounds (approximately 11.2 ounces)
Color	Black
UPC	075020109514

## WARRANTY AND SUPPORT

The Philips Norelco All-in-One 3000 Series comes with a standard 2-year warranty. An extended warranty of 3 years (totaling up to 5 years) is available upon product registration within 90 days of purchase on Philips.com.

For further assistance, troubleshooting, or warranty claims, please visit the official Philips Norelco website or contact their customer support.

*Note: Warranty terms and conditions may vary by region. Please refer to the official Philips Norelco website for the most current information.*