

manuals.plus /

> [Xbox](#) /

> [Xbox Wireless Controller Storm Breaker Special Edition - Instruction Manual](#)

Xbox EP2-29563

Xbox Wireless Controller Storm Breaker Special Edition

MODEL: EP2-29563

Brand: Xbox

INTRODUCTION

The Xbox Wireless Controller Storm Breaker Special Edition is designed to provide an enhanced gaming experience across multiple platforms. This controller features a unique aesthetic with classic grays and blacks, offset with whites, along with textured grips for improved handling. It offers seamless connectivity and customizable controls to optimize your gameplay.

KEY FEATURES

- **Storm Breaker Special Edition Design:** Features a distinctive gray, black, and white pattern.
- **Textured Triggers:** Provides enhanced grip and control during gameplay.
- **Rubberized Grips:** Located on the back cases for secure handling.
- **Wireless & Bluetooth Connectivity:** Easily pairs with Xbox consoles, PCs, and mobile devices.
- **Share Button:** Seamlessly capture and share screenshots and game recordings.
- **Customizable Button Mapping:** Personalize controls using the Xbox Accessories app.

SHOW OFF YOUR GAME

Storm Breaker lets nothing stop its style with classic grays and blacks, offset with whites.



Image: The Xbox Wireless Controller Storm Breaker Special Edition showcasing its distinctive color scheme.

SETUP

1. Battery Installation

The controller requires two AA batteries (included). To install:

1. Locate the battery compartment on the back of the controller.
2. Press the small tab and lift the battery cover.
3. Insert the two AA batteries, ensuring correct polarity (+ and -).
4. Replace the battery cover until it clicks into place.

2. Pairing with Devices

The controller supports both Xbox Wireless and Bluetooth for versatile connectivity.

- **For Xbox Console:**

- a. Turn on your Xbox console.
- b. Press the Xbox button on your controller to turn it on.
- c. Press and hold the Pair button () on the top of the controller until the Xbox button flashes rapidly.
- d. Press the Pair button on your Xbox console (usually near the USB port or on the front).
- e. The Xbox button on the controller will become solid when connected.

- **For PC (Windows 10/11) via Bluetooth:**

- a. Ensure your PC has Bluetooth enabled.
- b. Press the Xbox button on your controller to turn it on.
- c. Press and hold the Pair button () on the top of the controller until the Xbox button flashes rapidly.
- d. On your PC, go to Settings > Devices > Bluetooth & other devices.
- e. Select "Add Bluetooth or other device" and then "Bluetooth".
- f. Choose "Xbox Wireless Controller" from the list and follow on-screen prompts.

- **For Mobile Devices (Android/iOS):**

- a. Enable Bluetooth on your mobile device.
- b. Press the Xbox button on your controller to turn it on.
- c. Press and hold the Pair button () on the top of the controller until the Xbox button flashes rapidly.
- d. On your mobile device, search for Bluetooth devices and select "Xbox Wireless Controller" to pair.

Your browser does not support the video tag.

Video: An overview of the Xbox Wireless Controller, demonstrating its physical features and ports, useful for understanding setup.

OPERATING THE CONTROLLER

1. Basic Controls

- **Thumbsticks:** Use for movement and camera control.
- **D-Pad:** Ideal for precise directional input in games and menu navigation.
- **A, B, X, Y Buttons:** Primary action buttons for in-game commands.
- **Triggers (LT/RT) & Bumpers (LB/RB):** Used for various actions like shooting, accelerating, or menu selection.

2. Share Button

The dedicated Share button () allows you to quickly capture and share your gaming moments:

- Press once to take a screenshot.
- Press and hold to record the last 30 seconds of gameplay.

3. Headset Jack

A 3.5mm audio jack is located at the bottom of the controller, allowing you to connect compatible headsets for in-game audio and chat.

4. Customization with Xbox Accessories App

Download the Xbox Accessories app on your Xbox console or Windows PC to customize button mapping and create personalized controller profiles.



Image: The Share button and an illustration of button mapping customization via the Xbox Accessories app.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid abrasive cleaners or solvents.
- **Battery Care:** Remove batteries if the controller will not be used for an extended period to prevent leakage.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Controller Not Connecting:**
 - Ensure batteries are correctly installed and charged.
 - Re-attempt the pairing process as described in the Setup section.
 - Check for any interference from other wireless devices.
 - Update controller firmware via the Xbox Accessories app.
- **Buttons Unresponsive:**
 - Clean around the buttons to remove any debris.
 - Test the controller with another device or game to isolate the issue.
- **Short Battery Life:**
 - Use fresh, high-quality AA batteries.
 - Consider using a rechargeable battery pack (sold separately) for extended play.

SPECIFICATIONS

Feature	Detail
Model Number	EP2-29563
Connectivity	Xbox Wireless, Bluetooth
Compatibility	Xbox Series X S, Xbox One, Windows 10/11, Android, iOS
Power Source	2 AA batteries (included)
Audio Port	3.5mm headset jack
Dimensions	6.91 x 5.61 x 2.76 inches
Weight	14.1 ounces

Manufacturer	Microsoft
--------------	-----------

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official Xbox support website. Keep your proof of purchase for warranty claims.

Online Support: support.xbox.com