

SUPCASE Unicorn Beetle Pro (001)

SUPCASE Unicorn Beetle Pro Case for iPhone 17 Pro Max Instruction Manual

MODEL: UNICORN BEETLE PRO (001)

Brand: SUPCASE

PRODUCT OVERVIEW

The SUPCASE Unicorn Beetle Pro case provides robust, full-body protection for your iPhone 17 Pro Max. Engineered to withstand drops and daily wear, it integrates a built-in screen protector, a responsive camera control button, and a versatile kickstand. This manual provides detailed instructions for proper installation, usage, and maintenance to ensure optimal performance and longevity of your device's protection.

Key Features:

- **Ultimate Defense:** Military-grade impact resistance (MIL-STD-810H-516.6 certified) for drops up to 20 ft (6 m). Features a hybrid TPU + PC frame, reinforced corner airbags, and a PET built-in screen protector.
- **Precision Camera Control:** Integrated camera control button with 19 pure copper conductors for authentic press and smooth swipe action.
- **Detachable Belt Clip:** A 360° rotating holster with secure side clasps for hands-free convenience.
- **Built-in Kickstand:** Provides stable, multi-position support (50° landscape, 60° portrait) for hands-free viewing.
- **Secure Grip:** Textured side edges enhance control and reduce accidental drops.
- **Compatibility:** Specifically designed for iPhone 17 Pro Max 6.9 Inch (2025 Release) ONLY.

DROP PROTECTION

20 FT
DROP TESTED
810G-516.6

DROP TEST
WINNER



HIGHEST TOTAL FEET
DROPPED



Our top contender for the most
rugged iPhone case.

Image: The SUPCASE Unicorn Beetle Pro case highlighting its 20ft drop protection and military-grade certification.

SETUP INSTRUCTIONS

Follow these steps to properly install your SUPCASE Unicorn Beetle Pro case on your iPhone 17 Pro Max.

1. Disassemble the Case:

1. Locate the small gap along the edges of the case.
2. Gently separate the front frame from the back shell using your thumb and forefinger. Work your way around the edges until the two parts are fully separated.
3. Carefully remove any protective foam or film from the inside of the front frame.

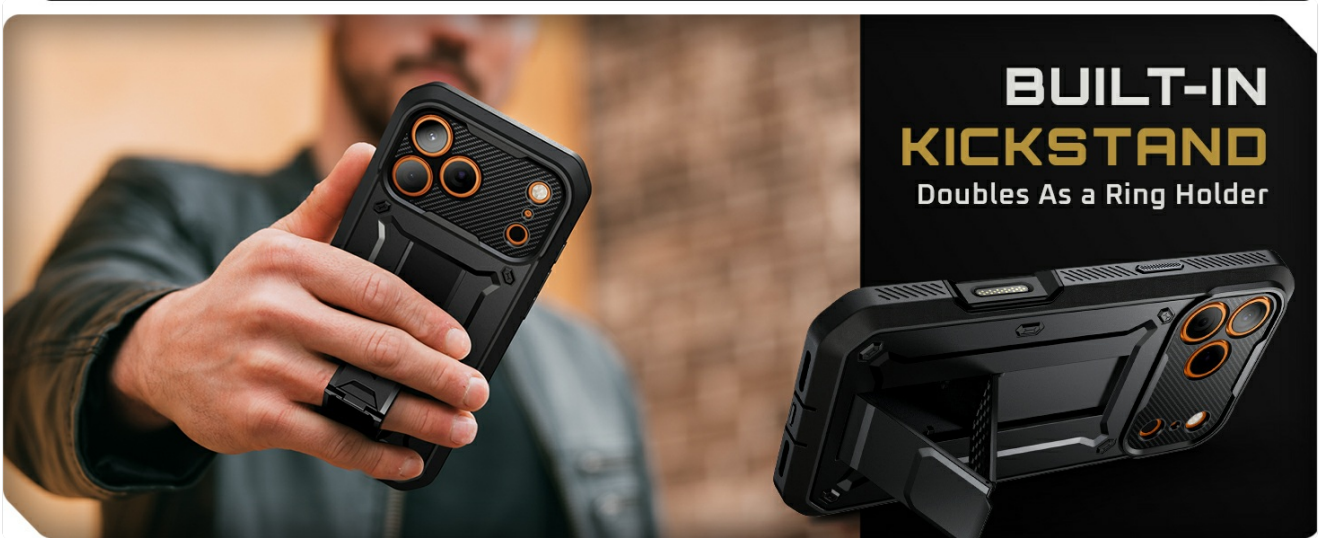


Image: Illustration showing how to separate the front frame from the back shell of the case.

2. Prepare Your Phone:

- Ensure your iPhone 17 Pro Max screen is clean and free of dust or smudges. Use a microfiber cloth if necessary.
- Remove any existing screen protectors or films from your phone, as the case has a built-in screen protector.

3. Install the Phone into the Front Frame:

- Carefully place your iPhone 17 Pro Max into the front frame of the case.
- Ensure all buttons and ports align perfectly with the corresponding cutouts on the front frame.

COMPATIBLE WITH

iPHONE 17 Pro Max



Check Your Device Model for Compatibility



Not Compatible with:

iPhone 17 Pro 6.3"
iPhone Air 6.5" / iPhone 17 6.3"



DESIGNED FOR

iPHONE 17 Pro Max

6.9"



Image: The SUPCASE Unicorn Beetle Pro case designed for iPhone 17 Pro Max, highlighting its compatibility and precise fit.

4. Reassemble the Case:

1. With the phone securely in the front frame, align the top edge of the front frame with the top edge of the back shell.

2. Press firmly around the edges of the case, working your way down, until the front frame and back shell snap together securely.
3. Ensure all edges are tightly sealed and there are no gaps.

Your browser does not support the video tag.

Video: Official installation guide for the iPhone 17 Pro Max UBPro case, demonstrating the step-by-step assembly process.

OPERATING INSTRUCTIONS

Using the Built-in Kickstand:

- To deploy the kickstand, locate the small tab on the back of the case and pull it outwards until it locks into place.
- Adjust the kickstand to your desired viewing angle: approximately 50° for landscape mode or 60° for portrait mode.
- To retract, push the kickstand back into its slot until it sits flush with the case.

BUILT-IN KICKSTAND

2 Viewing Angles

50° ↗
LANDSCAPE
MODE

60° ↘
PORTRAIT
MODE



Kickstand doubles as ring holder

Image: The built-in kickstand in both landscape (50°) and portrait (60°) modes, demonstrating its versatility.

Using the Camera Control Button:

- The built-in camera control button on the side of the case allows for precise camera operation.
- Press lightly to focus, press firmly to capture a photo, or swipe for continuous shooting, mimicking the original

iPhone camera button functionality.



PRECISION CAMERA CONTROL

Built with 19 pure copper
conductors for precise
camera control



Image: Close-up of the built-in camera control button on the case, illustrating its use for light press, click, and slide actions.

Using the Detachable Belt Clip Holster:

- To attach your phone to the belt clip, slide the phone case into the holster with the screen facing inwards, ensuring it clicks securely into place.
- The holster features a 360° rotating clip, allowing you to position your phone vertically or horizontally on your belt or waistband.
- To remove, press the release tab on the holster and slide the phone case upwards.



Image: A person attaching the phone case to the 360° rotating belt clip holster, showing its secure and versatile design.

MAINTENANCE

- **Cleaning:** Regularly clean your case and phone screen with a soft, damp cloth. Avoid harsh chemicals or abrasive materials that could damage the case or screen protector.
- **Inspection:** Periodically inspect the case for any signs of wear or damage, especially after significant drops. Replace the case if its protective integrity is compromised.
- **Port Covers:** Ensure the charging port cover is properly sealed when not in use to prevent dust and debris from entering.

TROUBLESHOOTING

- **Screen Protector Bubbling/Unresponsiveness:** If the built-in screen protector causes bubbling or reduces touch sensitivity, ensure your phone screen is perfectly clean and free of any other screen protectors before re-installing the case. If issues persist, some users opt to carefully remove the built-in screen protector and use a separate, high-quality screen protector directly on their phone.
- **Wireless Charging Issues:** While the case is designed to be compatible with most wireless chargers, ensure proper alignment of your phone on the charging pad. If charging is inconsistent, remove the phone from the case and test wireless charging directly.
- **Difficulty Removing Case:** The case is designed for a tight, secure fit. To remove, use your thumb and forefinger to gently pry open the disassembly gap at the bottom corner and gradually work your way around the edges.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7.17 x 3.94 x 1.54 inches
Item Weight	5.9 ounces
Item Model Number	001
Special Features	Built-in Screen Protector, Built-in Kickstand, Camera Control Button
Compatible Phone Models	iPhone 17 Pro Max 6.9 Inch (2025 Release)
Material	Polycarbonate (PC) and Thermoplastic Polyurethane (TPU)
Color	Black

Manufacturer	SUPCASE
--------------	---------

WARRANTY & SUPPORT

For warranty information, product support, or to contact customer service, please visit the official SUPCASE website or refer to the product packaging for contact details. Keep your purchase receipt for warranty claims.

Online Resources:

- Visit the [SUPCASE Store on Amazon](#) for more products and information.