

[Manuals.plus](#) /

› [YESHOMY](#) /

› YESHOMY Fireplace TV Stand with Open Display Shelf, Gray Wash (Model YH-TS25-0846-GY) - Instruction Manual

YESHOMY YH-TS25-0846-GY

YESHOMY Fireplace TV Stand with Open Display Shelf, Gray Wash

Model: YH-TS25-0846-GY

Brand: YESHOMY

INTRODUCTION

This instruction manual provides comprehensive guidance for the assembly, operation, and maintenance of your YESHOMY Fireplace TV Stand with Open Display Shelf. Please read this manual thoroughly before beginning assembly or operation to ensure safe and correct usage of the product. Keep this manual for future reference.



Image 1: Overview of the YESHOMY Fireplace TV Stand with Open Display Shelf in Gray Wash, featuring a central electric fireplace and side storage compartments.

Safety Information

It is crucial to adhere to all safety guidelines to prevent injury or damage to the product. Please review the following:

- Avoid placing the TV stand near flammable materials.
- Keep the fireplace on a low setting when unattended.
- Use caution when assembling the TV stand to avoid injury from sharp edges or falling components.
- Cover any exposed holes to prevent small objects or fingers from getting stuck.
- Always follow the manufacturer's instructions for safe use and maintenance.

Package Contents

Your YESHOMY Fireplace TV Stand will be delivered in two separate packages to ensure maximum safety during transit. Please expect these packages to arrive at different times.



Image 2: Illustration explaining that the product ships in two separate boxes for safe delivery, which may arrive on different days. Before beginning assembly, verify that all components and hardware listed in the included assembly instructions are present and undamaged. If any parts are missing or damaged, please contact customer support.

ASSEMBLY INSTRUCTIONS

The YESHOMY Fireplace TV Stand is designed for straightforward assembly. An instruction manual with all necessary materials is included to facilitate assembly, typically within 60 minutes.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify each part using the provided diagrams in the assembly guide.
3. Follow the step-by-step instructions carefully, ensuring all connections are secure.
4. Use the appropriate tools as indicated in the manual. Power tools can expedite the process but use with caution to avoid overtightening or damaging components.
5. Once assembled, ensure the stand is stable and all doors operate smoothly.



Image 3: A design sketch illustrating the structure and components of the YESHOMY Fireplace TV Stand, aiding in assembly identification.

OPERATING INSTRUCTIONS (ELECTRIC FIREPLACE)

The integrated electric fireplace provides both aesthetic ambiance and supplemental heat. It features 3 faux flame brightness settings and a low-heat mode.

3 FAUX FLAME BRIGHTNESS SETTINGS



Convenient
Control Panel

Built-In Timer

Full Function
Remote



Image 4: Close-up of the electric fireplace control panel, showing buttons for power, temperature, timer, and flame brightness settings, along with a full-function remote control.

- **Power On/Off:** Use the power button on the control panel or remote to turn the fireplace on or off.
- **Flame Brightness:** Cycle through the 3 faux flame brightness settings using the dedicated button to adjust the visual effect.
- **Heat Function:** Activate the low-heat mode for supplemental warmth. The fireplace is designed to be safe for proximity to furniture and does not produce fumes or carbon monoxide.
- **Timer:** Utilize the built-in timer function for automatic shut-off.
- **Remote Control:** The included remote control allows for convenient adjustment of all fireplace functions from a distance.

STORAGE FEATURES

The TV stand offers versatile storage solutions to keep your living space organized.

- **Open Display Shelves:** Two open shelves are ideal for displaying decorative items, books, or media devices.

- **Hidden Cabinet Storage:** Two cabinet hideaways provide concealed storage for items like routers, DVDs, or other accessories, maintaining a tidy appearance.
- **Cable Management:** Pre-drilled cord tunnels are integrated into the design to route cables neatly, preventing tangles and keeping wires out of sight.

HIDDEN + OPEN STORAGE SPACE



Conceal clutter behind doors



Image 5: Depiction of the TV stand's storage capabilities, highlighting both the open shelves and the hidden compartments behind the barn doors.



Ample 58" Surface

Holds your big-screen TV and accessories with ease.

Cable Management

Dedicated cable holes for a clean, clutter-free look.



Image 6: Close-up showing the cable management system, with a power cord neatly routed through a pre-drilled hole at the back of the TV stand, ensuring a clean setup.

SPECIFICATIONS

Feature	Detail
Model Number	YH-TS25-0846-GY
Dimensions (L x W x H)	58 x 15.9 x 23.8 inches
TV Size Compatibility	Up to 65 inches
Material	Wood
Color	Gray Wash
Item Weight	64.2 pounds
Max Load (Tabletop)	150 lbs
Max Load (Semi-Open Cubby)	50 lbs
Max Load (Adjustable Shelves)	30 lbs
Fireplace Features	3D vertical flames, low-heat mode, 3 faux flame brightness settings, built-in timer, remote control

SUITABLE FOR TV SIZE UP TO 65"

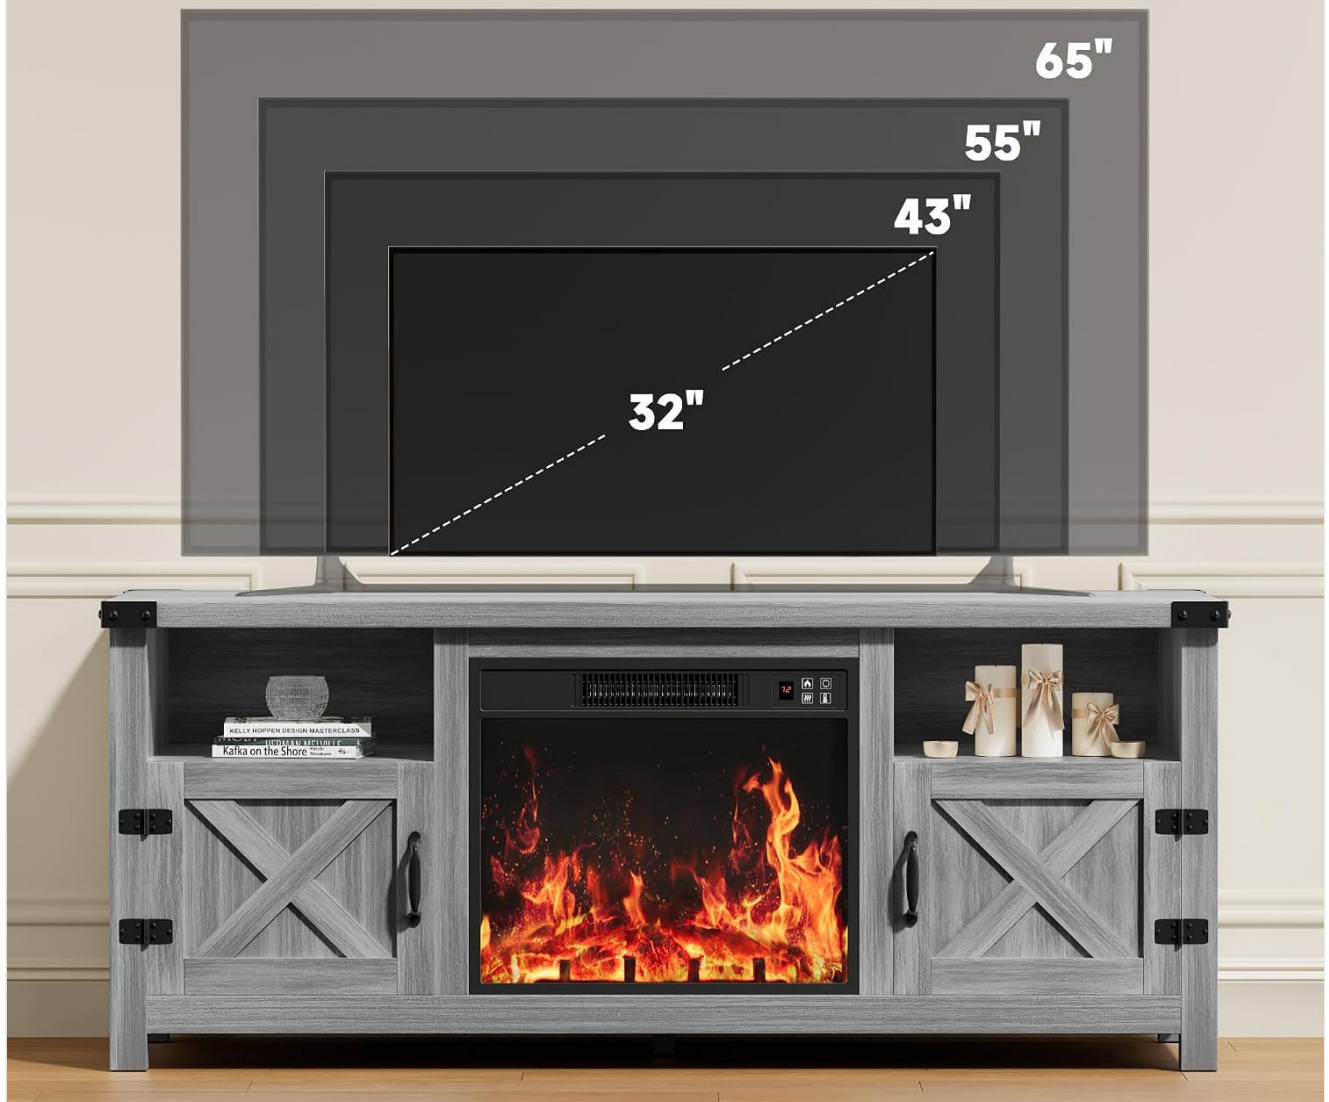


Image 7: Visual guide indicating the TV stand's compatibility with televisions up to 65 inches in size.

PRODUCT DIMENSIONS



MAX. LOAD

Tabletop

150lbs

Semi-Open Cubby

50lbs

Adjustable Shelves

30lbs



The item will delivered in **2** Packages and may **NOT** arrived on same day!

Image 8: Detailed diagram displaying the overall product dimensions (length, depth, height) and the maximum weight capacities for the tabletop, semi-open cubby, and adjustable shelves.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your TV stand:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Dusting:** Dust regularly to prevent buildup, especially around the fireplace vents.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Tighten if necessary.
- **Fireplace Care:** Ensure the fireplace vents are clear of obstructions to maintain proper airflow and prevent overheating.

TROUBLESHOOTING

If you encounter any issues with your TV stand or electric fireplace, refer to the following common solutions:

- **Fireplace Not Turning On:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the circuit breaker has tripped.
- Verify that the power button on the unit or remote is pressed correctly.

- **No Heat Output:**

- Confirm the heat function is activated.
- Check for any obstructions around the heater vents.

- **Unstable Stand:**

- Re-check all assembly hardware and tighten any loose screws.
- Ensure the stand is placed on a flat, level surface.

- **Damaged or Missing Parts:**

- If parts were damaged during shipping or are missing, contact YESHOMY customer support for assistance.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact YESHOMY customer service. Refer to the contact information provided with your purchase or visit the official YESHOMY website.

Customer Support: [Visit the YESHOMY Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FJ19PJCD>

More documents and user manuals: <https://manuals.plus/>