

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BESTTAB](#) /

› [BESTTAB W90 Android 15 Tablet - 11 Inch FHD Display User Manual](#)

BESTTAB W90

BESTTAB W90 Android 15 Tablet

USER MANUAL

Introduction

Welcome to the user manual for your new BESTTAB W90 Android 15 Tablet. This guide provides essential information to help you set up, operate, and maintain your device. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

What's in the Box

Upon opening your BESTTAB W90 Tablet package, please verify that all the following items are included:

- BESTTAB W90 Tablet
- 18W Power Adapter
- USB-C Cable
- User Manual (this document)
- After-sales Card



Image: Contents of the BESTTAB W90 Tablet box, showing the tablet, 18W power adapter, USB-C cable, user manual, and after-sales card.

Product Overview and Features

The BESTTAB W90 is an advanced Android 15 tablet designed for a versatile user experience, from entertainment to productivity. Key features include:

- **Operating System:** Android 15 with enhanced privacy and app control.
- **Processor:** MediaTek Unisoc T615 Octa-Core with integrated Gemini AI for intelligent resource allocation.
- **Display:** 11-inch FHD (1920x1200) display with 120Hz sampling rate, 380 nits brightness, Widevine L1 certification for HD streaming, and TÜV Rheinland Low Blue Light Certification.
- **Memory & Storage:** 24GB RAM (8GB physical + 16GB expansion) and 256GB internal storage, expandable up to 2TB via MicroSD/TF card.
- **Battery:** 8000mAh battery with 18W fast charging and AI battery management.
- **Cameras:** 16MP rear camera and 8MP front camera with AI optimization and Face Unlock.
- **Audio:** HD Dual Speakers for clear sound, 3.5mm headphone jack, and Bluetooth 5.0.
- **Connectivity:** Dual-band Wi-Fi (2.4G+5G ac), Bluetooth 5.0, and Four-Mode Satellite Positioning (GPS, Beidou, GLONASS, Galileo).
- **Design:** Ultra-slim 7.9mm profile.



Image: The BESTTAB W90 Tablet showcasing the Android 15 interface.

Gemini AI 2.0

Not only intelligence, but also knowledgeable about creation




Image: The tablet highlighting its Gemini AI 2.0 capabilities.

11-inch Immersive FHD Display

See The Difference



Widevine L1

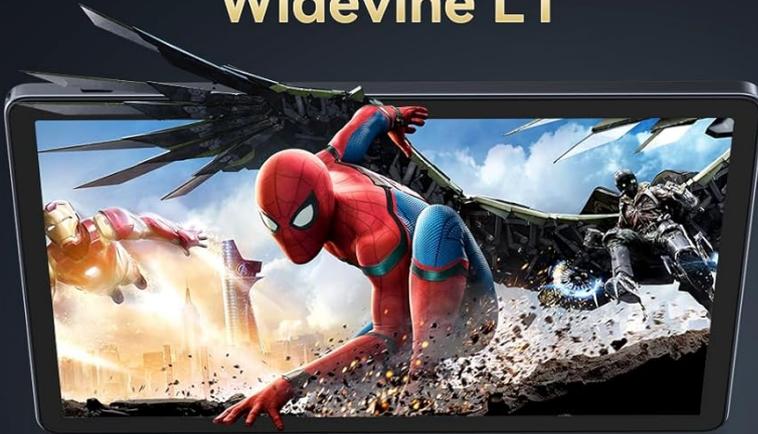

Screen Size
11-inch



Resolution
1200*2000



Screen-to-body Ratio
84.9%



Brightness
380 nits



TÜV Rheinland Low Blue Light Certification
More Eye-friendly ↗

1080P Streaming



Image: The 11-inch FHD display with Widevine L1 support.

Ultra T615 8-core Core Engine, Smart Future

Smooth Multitasking and Exceptional Performance, as Always

30% ↑
Faster Response Speed

 ANTUTU 10 Score
257708

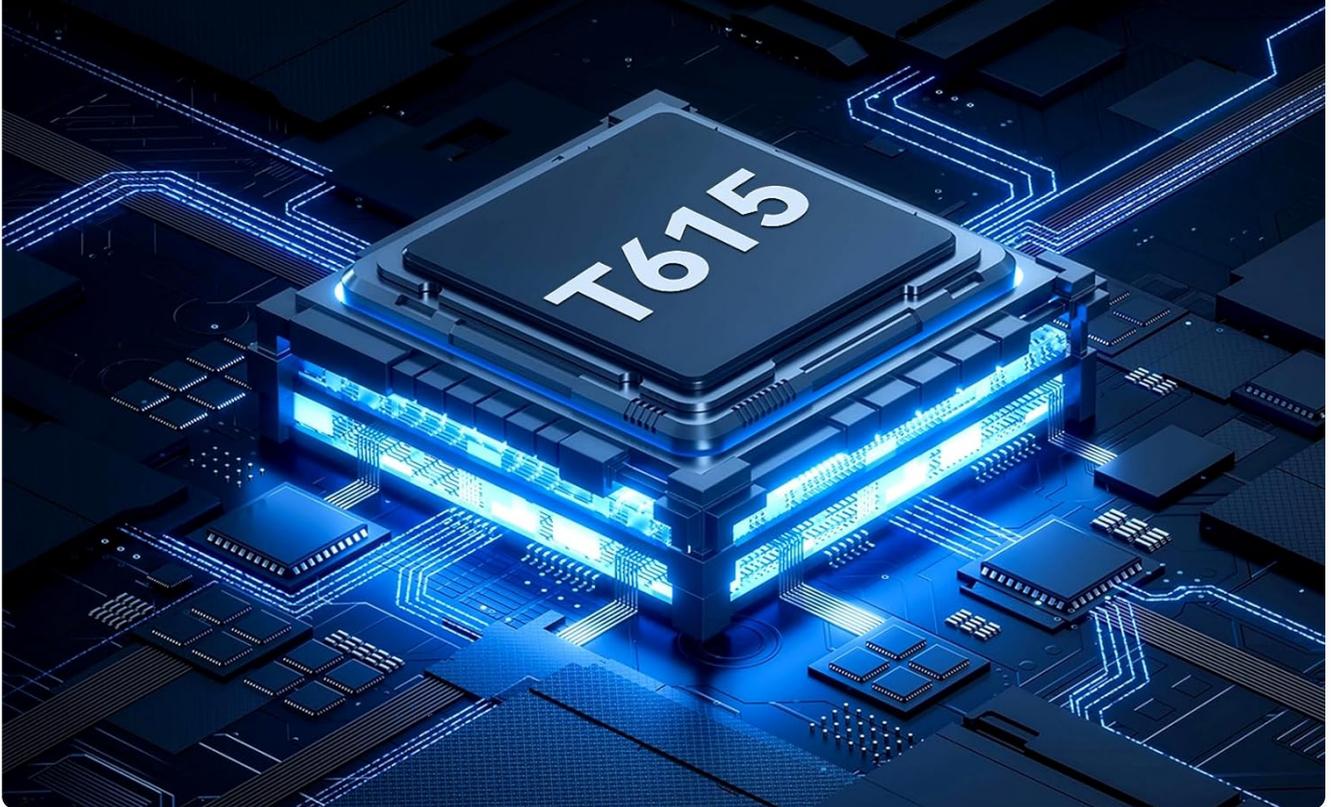


Image: The Unisoc T615 Octa-Core Processor.

Setup

1. **Initial Charging:** Before first use, connect the tablet to the 18W power adapter and USB-C cable. Charge the tablet fully until the battery indicator shows 100%.
2. **Power On/Off:** Press and hold the Power Button (located on the side) for a few seconds to turn the tablet on. To turn off, press and hold the Power Button, then select 'Power off' from the options.
3. **Initial Setup Wizard:** Follow the on-screen instructions to select your language, connect to a Wi-Fi network, sign in with your Google account, and set up basic preferences.
4. **Inserting SIM/SD Card:** Locate the card slot on the side of the tablet. Use the provided ejector tool to open the tray. Carefully place your Nano-SIM card (if applicable) and/or MicroSD/TF card into the designated slots, ensuring correct orientation. Close the tray securely.

Operating Instructions

Basic Navigation

- **Touch Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Swipe left or right to access different home screen panels.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles.

Connecting to Wi-Fi

1. Go to Settings > Network & internet > Wi-Fi.
2. Toggle Wi-Fi on.
3. Select your desired network from the list and enter the password if prompted.

Using Cameras

Open the Camera app from the home screen or app drawer. You can switch between the 16MP rear camera and 8MP front camera. Tap the shutter button to take photos or record videos.

Face Unlock Setup

1. Go to Settings > Security & privacy > Device unlock > Face Unlock.
2. Follow the on-screen instructions to register your face. Ensure good lighting conditions.

Split-Screen Mode

To use two apps simultaneously, open an app, then swipe up from the bottom of the screen and hold to access recent apps. Tap the app icon at the top of the app card and select 'Split screen'. Choose a second app to open in the other half of the screen.

Gemini AI Features

The integrated Gemini AI assists with various tasks, including photo editing, real-time translation, and intelligent resource management. Access Gemini AI features through compatible apps or by using voice commands (e.g., "Hey Google").



Image: The BESTTAB W90 Tablet in various use cases, including work, study, and leisure.

Maintenance

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for daily use.
- **Software Updates:** Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to Settings > System > System update.
- **Storage Management:** Utilize the built-in Memory Manager to clear junk files and optimize storage. Consider expanding storage with a MicroSD card if needed.

Troubleshooting

Issue	Possible Solution
-------	-------------------

Issue	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Connect to the charger for at least 30 minutes. If it still doesn't turn on, try holding the power button for 10-15 seconds.
Wi-Fi connection issues	Restart the tablet and your Wi-Fi router. Forget the network in Wi-Fi settings and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance	Close unused apps. Clear cache and junk files using the Memory Manager. Restart the tablet. Check for system updates.
Apps crashing or freezing	Force close the app (Settings > Apps > [App Name] > Force stop). Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Reinstall the app if the issue persists.
Face Unlock not working	Ensure you are in a well-lit environment. Clean the front camera lens. Re-register your face in settings.

Specifications

Feature	Detail
Brand	BESTTAB
Model Name	W90
Operating System	Android 15
Screen Size	11 Inches
Screen Resolution	1920 x 1200 pixels
Processor	Unisoc T615 Octa-Core (2.2 GHz)
RAM	24 GB (8GB physical + 16GB expansion)
Flash Memory Size	256 GB
Expandable Storage	Up to 2TB via MicroSD/TF card
Rear Webcam Resolution	16 MP
Front Webcam Resolution	8 MP
Battery Capacity	8000mAh
Wireless Type	802.11ax (Dual-band Wi-Fi), Bluetooth 5.0
GPS	GPS, Beidou, GLONASS, Galileo
Item Weight	2.05 pounds
Product Dimensions	30 x 25 x 6 inches
Color	Gray

Warranty and Support

BESTTAB is committed to providing high-quality products and excellent customer service. Your BESTTAB W90 Tablet comes with comprehensive support:

- **Warranty:** Enjoy a 24-month free repair warranty from the date of purchase.
- **Technical Support:** Lifetime technical support is available through the BESTTAB Official Flagship Store.
- **Contact:** For any inquiries or support needs, please refer to the contact information provided on your After-sales Card or visit the official BESTTAB website.

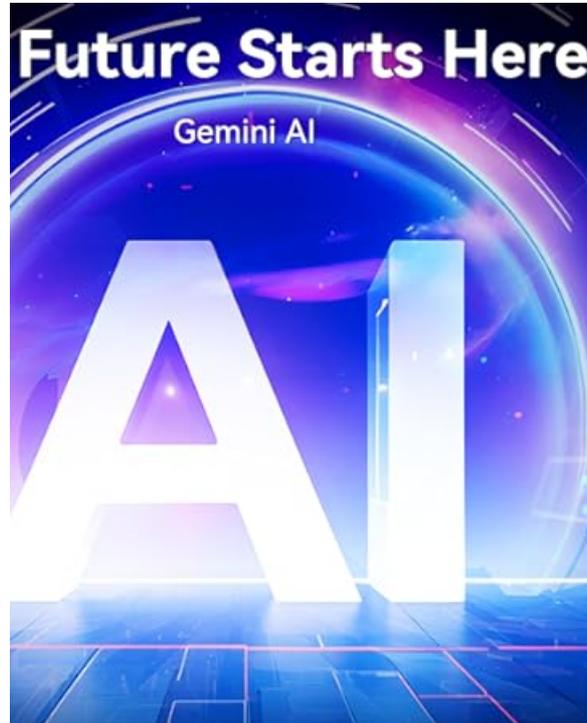


Image: BESTTAB Two Year Warranty Support details.