

oneisall FC08

oneisall FC08 4-in-1 Pet Grooming Kit Instruction Manual

Brand: oneisall | Model: FC08

1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the oneisall FC08 4-in-1 Pet Grooming Kit. This versatile kit is designed to assist pet owners with various grooming needs, offering multiple attachments for different tasks. The main unit is a cordless, USB rechargeable device, ensuring convenience and flexibility during grooming sessions.



Suitable for



FC08

Dog Grooming Kit

Figure 1: The oneisall FC08 4-in-1 Pet Grooming Kit, featuring the main trimmer and a curved blade attachment.

2. PRODUCT FEATURES

- **4-in-1 Versatility:** Includes multiple interchangeable heads for various grooming tasks.
- **Cordless and Rechargeable:** Offers freedom of movement and can be charged via USB.
- **Quiet Operation:** Designed to minimize noise, reducing stress for pets during grooming.
- **Safe Blade Design:** Features rounded blade teeth to prevent snagging and skin irritation.
- **Waterproof Design:** Allows for easy cleaning and use in wet conditions.

- **LED Display:** Provides information on battery level and speed settings.

3. COMPONENTS AND WHAT'S IN THE BOX

The oneisall FC08 4-in-1 Pet Grooming Kit typically includes the following items:

- Main Grooming Unit (rechargeable)
- Curved Blade Attachment (for body grooming)
- Detailing Blade Attachment (for sensitive areas like face, paws, ears)
- Nail Grinder Attachment
- Multiple Comb Guides (various sizes for different hair lengths)
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil



Figure 2: The curved replacement blade, suitable for general body grooming.

4. SETUP

4.1 Charging the Device

1. Connect the USB charging cable to the charging port at the bottom of the main grooming unit.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
3. The LED display will indicate the charging status. Ensure the device is fully charged before first use for optimal performance.

4.2 Attaching and Detaching Blades

To change the grooming head:

1. Ensure the device is turned off.
2. To remove a blade, gently push the blade head upwards or to the side (depending on the specific attachment design) until it detaches from the main unit.
3. To attach a new blade, align the new head with the main unit and push it down or into place until it clicks securely.



Figure 3: Visual guide for removing and installing the grooming blade attachments.

5. OPERATING INSTRUCTIONS

5.1 General Grooming Tips

- Before grooming, ensure your pet's fur is clean, dry, and free of tangles. Brush thoroughly to remove loose hair.
- Start with a low speed setting to acclimate your pet to the sound and sensation.
- Always groom in the direction of hair growth to prevent irritation.
- Take breaks as needed to keep your pet comfortable and calm.

5.2 Using the Trimmer Attachments

1. Select the appropriate blade (curved for body, detailing for face/paws) and comb guide for the desired hair length.
2. Press the power button to turn on the device. Use the up/down buttons to adjust the speed as needed.
3. Gently glide the trimmer over your pet's fur, maintaining even pressure.

5.3 Using the Nail Grinder Attachment

1. Attach the nail grinder head to the main unit.
2. Gently hold your pet's paw and isolate one nail.
3. Turn on the grinder and lightly touch the spinning head to the tip of the nail. Grind for a few seconds, then check progress.
4. Avoid grinding too much at once to prevent overheating the nail or reaching the quick.

Your browser does not support the video tag.

Video 1: Demonstration of the oneisall grooming clipper, showcasing its waterproof feature, blade changing, and use on a pet.

6. MAINTENANCE

6.1 Cleaning the Blades

1. After each use, turn off the device and detach the blade.
2. Use the provided cleaning brush to remove any trapped hair from the blade and the main unit.
3. Since the device is waterproof, you can rinse the blade under running water. Ensure it is completely dry before reattaching or storing.

6.2 Oiling the Blades

Regular oiling helps maintain blade sharpness and extends the life of your trimmer.

1. After cleaning and drying the blade, apply 1-2 drops of the provided lubricating oil to the teeth of the blade.
2. Turn on the trimmer for a few seconds to distribute the oil evenly.

7. SPECIFICATIONS

- **Brand:** oneisall
- **Model:** FC08
- **Power Source:** Battery Powered (USB Rechargeable)
- **Item Weight:** 1.28 ounces
- **Color:** Silver
- **Recommended Uses For Product:** Ear, Face, Body, Nails (with appropriate attachments)
- **Package Dimensions:** 3.15 x 2.36 x 1.57 inches

8. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. If the battery is low, connect it to the charger.
- **Blades pulling hair:** This often indicates dull blades or insufficient lubrication. Clean the blades

thoroughly and apply lubricating oil. If the issue persists, consider replacing the blade.

- **Reduced performance:** Check for tangled hair in the blade mechanism. Clean and oil the blades. Ensure the battery is adequately charged.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the official oneisall website or contact their customer service directly. Keep your proof of purchase for warranty claims.