

## Fieety Ultra 10

# Fieety Ultra 10 Cordless Vacuum Cleaner User Manual

Model: Ultra 10 | Brand: Fieety

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the vacuum cleaner indoors. Put away after use to prevent accidents.
- Use only the charger supplied by the manufacturer to recharge.

## 2. PACKAGE CONTENTS

Verify that all components are present and in good condition upon unpacking:

- 1 x Fieety Ultra 10 Cordless Vacuum Cleaner Main Unit
- 1 x Rechargeable Wall Mount (Includes installation accessories)
- 1 x Extendable Hose (30cm~100cm)
- 1 x Pet Brush
- 1 x Crevice Nozzle
- 1 x 2-in-1 Brush
- 1 x Aromatherapy Tablet
- 1 x Extra HEPA + Sponge Filter
- 1 x Adapter
- 1 x Mini Cleaning Brush
- 1 x Quick Start Guide
- 1 x User Manual

### 3. PRODUCT OVERVIEW

#### Main Unit and Accessories



An overview of the Fieety Ultra 10 Cordless Vacuum Cleaner and its various attachments, including the

main unit, telescopic pole, floor brush, pet brush, crevice nozzle, 2-in-1 brush, and flexible hose.

## Smart LED Display



The smart LED display provides real-time information on battery status, suction mode, and alerts for issues like a full dustbin or brush roller entanglement.

## 4. SETUP AND ASSEMBLY

### Assembling the Main Unit and Attachments

Your browser does not support the video tag.

This video demonstrates how to assemble the main unit with various attachments, including the long flat vacuum, 2-in-1 brush, pet brush, telescopic pole, and floor brush, as well as combinations with the flexible hose.

## Installing the Aromatherapy Tablet

Your browser does not support the video tag.

*Instructions for installing the aromatherapy tablet into the vacuum cleaner to release a fresh scent during operation.*

## Battery Installation and Removal

Your browser does not support the video tag.

*Guide on how to properly install and remove the detachable battery from the main unit.*

## Wall-Mounted Charging



*The vacuum cleaner comes with a wall-mounted charging station for convenient storage and charging.*

*Ensure the station is securely installed and the vacuum is properly docked for charging.*

## 5. OPERATING INSTRUCTIONS

### General Operation

Your browser does not support the video tag.

*This video demonstrates the general operation and various features of the Fieety Ultra 10 Cordless Vacuum Cleaner, including its powerful suction and versatility.*

### Powering On/Off and Suction Modes

- **Power On/Off:** Press the power button on the handle to start or stop the vacuum.
- **Suction Modes:** The vacuum features ECO, MID, MAX, and AUTO modes, selectable via the touchscreen display.
  - **ECO Mode:** For light cleaning tasks and extended battery life (up to 65 minutes).
  - **MID Mode:** Provides balanced power for everyday cleaning.
  - **MAX Mode:** Delivers maximum suction (50,000Pa) for deep cleaning stubborn dirt.
  - **AUTO Mode:** Intelligent sensors automatically adjust suction power based on the floor type (e.g., 50,000Pa for carpet, 28,000Pa for hard floors) for optimal cleaning efficiency.

### Using Attachments

- **Floor Brush:** Ideal for both hard floors and carpets. Features LED lights to illuminate dust in dark areas and a 270° swivel for enhanced maneuverability.
- **Pet Brush:** Specifically designed for grooming pets while simultaneously vacuuming loose fur, capturing it directly at the source.
- **Crevice Nozzle:** Perfect for cleaning narrow spaces, corners, edges, and hard-to-reach areas.
- **2-in-1 Brush:** A versatile tool for cleaning upholstery, keyboards, car interiors, and delicate surfaces.
- **Extendable Hose:** Provides flexibility to reach high areas, under furniture, or inside cars, offering an all-in-one cleaning solution.
- **Telescopic Pole:** Adjusts the height of the vacuum for comfortable use by users of varying heights and extends reach for high-up cleaning.

### Self-Standing Feature

The vacuum cleaner features a self-standing design. Simply press the pause button at any time to stop cleaning, and the unit will stand upright independently. Shortening the telescopic tube can enhance stability when utilizing the self-standing feature.

## 6. MAINTENANCE

### Dustbin Emptying

# Smart Display: See It All

Wrong Charger

Temperature Monitoring

Battery Indicator

Brush Roller Wrapped Warming

Dust Full Indicator

Touch Suction Control



The 1.6-liter dustbin can be emptied with a single touch, minimizing contact with dust and debris.

## Filter Cleaning

- The multi-filter system, including the HEPA filter, is designed to trap 99.99% of dust particles.
- Filters are washable. Regularly clean the filters under running water.
- **Important:** Ensure all filters are completely dry before re-installation to prevent damage to the motor and maintain optimal suction power.

## Brush Roller Cleaning

- The anti-tangle brush is designed to minimize hair entanglement.
- Periodically check and clean the brush roller to remove any wrapped hair, threads, or debris that may affect performance.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Battery not charged or improperly installed.	Charge the battery fully. Ensure the battery is securely clicked into place.
Low Suction	Dustbin full, filter clogged, or blockage in the hose/brush.	Empty the dustbin. Clean or replace filters. Check for and remove any blockages.
Brush Roller Not Spinning	Hair/debris tangled in the brush, or brush roller warning on display.	Clean the brush roller. Remove any obstructions.
Vacuum Stops Suddenly	Overheating, battery low, or foreign object stuck.	Allow the vacuum to cool down. Charge the battery. Check for and remove foreign objects.
Smart Display Alerts	Various issues indicated by specific icons.	Refer to the display for specific warnings (e.g., "Wrong Charger", "Temperature Monitoring", "Dust Full Indicator") and take appropriate action.

For further assistance, please refer to the contact information in the Warranty and Support section.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Fieety
Model Name	Ultra 10
Suction Power	50,000Pa (MAX mode)
Motor Wattage	600W Brushless Motor
Runtime	Up to 65 minutes (ECO mode)
Charging Time	4 hours
Dustbin Capacity	1.6 Liters
Filter Type	HEPA Filter (Multi-filter system)
Noise Level	≤ 62dB
Product Dimensions	10"L x 7.7"W x 47.4"H

Feature	Detail
Item Weight	6 pounds
Special Features	Auto Mode, Touchscreen, Self-standing, Pet Brush, Extendable Hose, Wall-mounted Charging, Removable Battery, Aromatherapy Diffuser, Adjustable Height, 270° Swivel with Green Light, One-click Emptying, Anti-tangle Brush

## 9. WARRANTY AND SUPPORT

Fieety is committed to providing excellent customer service and product support.

- **Warranty:** The Fieety Ultra 10 Cordless Vacuum Cleaner comes with a 3-year warranty.
- **Customer Service:** 24/7 customer service is available to assist you with any inquiries or issues.
- **Contact:** For technical support or warranty claims, please email [support.us@fieety.com](mailto:support.us@fieety.com).
- **Online Resources:** Detailed video tutorials and additional information can be found on the official Fieety website.