

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VOLTIO](#) /

› [VOLTIO 24 Liter Electric Toaster Oven Instruction Manual](#)

## VOLTIO 24L

# VOLTIO 24 Liter Electric Toaster Oven Instruction Manual

Model: 24L

[Important Safeguards](#)

[Product Overview](#)

[Components](#)

[Setup](#)

[Operating Instructions](#)

[Cleaning & Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or any part of the oven in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.

- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar products.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Extreme caution must be exercised when removing tray or disposing of hot grease.
- This appliance is for household use only.

## 2. PRODUCT OVERVIEW

---

The VOLTIO 24 Liter Electric Toaster Oven offers a powerful 1500W operation, combining versatility and modern design for various cooking needs. Its stainless steel exterior ensures durability and easy cleaning. This appliance is designed to handle a range of tasks from quick breakfasts to more elaborate meals, making it a practical addition to any modern kitchen.

Key features include:

- **Capacity:** 24 liters, suitable for medium to large dishes, accommodating up to 4 slices of bread.
- **Power:** 1500 Watts for efficient heating.
- **Functions:** Bake, Toast, Roast, and Gratin.
- **Temperature Control:** Adjustable from 100°C to 250°C.
- **Timer:** 60-minute timer for precise cooking.
- **Material:** Durable stainless steel construction.

## Horno Tostador Eléctrico

 
### Capacidad de 24 Litros



Potencia  
1500 W



Temporizador  
de 60 min.



Acero  
inoxidable



Image: The VOLTIO 24 Liter Electric Toaster Oven highlighting its 1500W power, 60-minute timer, and stainless steel construction.

### 3. COMPONENTS

Your VOLTIO Toaster Oven comes with the following components:

- 1 x Electric Toaster Oven
- 1 x Baking Tray (Charola)
- 1 x Wire Rack (Parrilla)
- 1 x Rack Puller (Jala-parrilla)
- 1 x Crumb Tray (Bandeja para migas)

**EOVOLT24I | Peso: 4.7 kg**



**Contiene:**

- Charola de 31 x 27.5 cm
- Rejilla de 31 x 26 cm
- Gancho extractor
- Bandeja de migas



Image: The toaster oven with its dimensions and a clear display of the included baking tray, wire rack, rack puller, and crumb tray.

## 4. SETUP

1. **Unpack:** Carefully remove the toaster oven and all accessories from the packaging. Remove any packing materials, stickers, or labels.
2. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 10-15 cm or 4-6 inches) on all sides and above the oven for proper ventilation. Do not place it near flammable materials.
3. **Clean:** Wipe the exterior with a damp cloth. Wash the baking tray, wire rack, and rack puller in warm, soapy water. Dry thoroughly. Reinsert the crumb tray at the bottom of the oven.
4. **First Use (Burn-off):** Before first use, operate the oven empty for approximately 15 minutes at the highest temperature setting (250°C) on the "Bake" function. This will burn off any manufacturing residues and odors. Ensure the area is well-ventilated during this process.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## 5. OPERATING INSTRUCTIONS

The VOLTIO Toaster Oven features three control knobs for temperature, function, and timer.



# EOVOLT24I

Capacidad	24 Litros
Potencia	1500 W
Temporizador	Hasta 60 min.
Rango de temperatura	100° - 250°
Funciones	Tostar, asar, cocer, hornear
Perillas de control	3
Medidas generales	28 x 44 x 29 cm
Medidas interiores	17 x 30 x 27.5 cm

**Diseño compacto, eficiencia total.**

Image: Detailed view of the control panel with temperature, function, and timer dials.

## Temperature Control Knob (Top)

This knob allows you to select the desired cooking temperature from 100°C to 250°C. Rotate the knob clockwise to increase the temperature and counter-clockwise to decrease it.

## Function Selector Knob (Middle)

Use this knob to choose your cooking mode:

- **Toast:** Activates both upper and lower heating elements for even toasting.
- **Bake:** Primarily uses the lower heating element for baking.
- **Roast/Gratinat:** Uses the upper heating element for roasting or browning the top of dishes.

## Timer Knob (Bottom)

Set the cooking time up to 60 minutes. Turn the knob clockwise to set the desired time. The oven will automatically turn off when the timer reaches zero, indicated by an audible bell. For continuous operation, select the "Stay On" function.

## General Cooking Steps:

1. Place the wire rack or baking tray with food into the desired rack position. The oven has 3 levels of adjustment for the racks.
2. Close the oven door.
3. Select the desired cooking temperature using the top knob.
4. Select the appropriate cooking function (Toast, Bake, Roast/Gratinate) using the middle knob.
5. Set the cooking time using the bottom timer knob. The oven will begin heating.
6. When cooking is complete, the timer will ring, and the oven will turn off. Carefully remove food using oven mitts and the rack puller.



Image: A hand carefully placing a dish into the toaster oven using the rack puller.

VOLTIO

**Calentamiento rápido**  
ajustable de 100° a 250° C.



3 niveles de ajuste interior  
para las parrillas

Image: The interior of the toaster oven, illustrating the three adjustable rack levels for versatile cooking.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning will help maintain the performance and appearance of your toaster oven.

1. **Before Cleaning:** Always unplug the oven from the electrical outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Pull out the crumb tray from the bottom of the oven. Discard crumbs and wash the tray in warm, soapy water. Rinse and dry thoroughly before reinserting.
3. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner. Do not use abrasive cleaners or metal scouring pads, as they can damage the interior surface.
4. **Exterior:** Wipe the exterior stainless steel surfaces with a soft, damp cloth. For a streak-free shine, use a stainless steel cleaner.
5. **Accessories:** Wash the baking tray, wire rack, and rack puller in warm, soapy water. Rinse and dry thoroughly.
6. **Door:** Clean the glass door with a damp cloth and a non-abrasive cleaner.
7. **Do NOT Immerse:** Never immerse the main body of the toaster oven in water or any other liquid.



Puerta de vidrio templado



Manija resistente al calor



Función Stay-On



Bandeja de migas removible

Image: A close-up view of the removable crumb tray, indicating ease of cleaning.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the oven is securely plugged into a working outlet. Check your home's circuit breaker. Make sure the timer knob is set to a cooking time or "Stay On".
Food is not cooking evenly.	Incorrect rack position; uneven food placement; door not fully closed.	Adjust rack position for optimal cooking. Arrange food evenly on the tray. Ensure the oven door is completely closed.
Smoke or burning smell during first use.	Manufacturing residues burning off.	This is normal during the first use. Ensure good ventilation. If it persists after the initial burn-off, contact customer support.

Problem	Possible Cause	Solution
Food is burning on top/bottom.	Incorrect function selected; temperature too high; rack position.	Verify the correct function (Bake, Roast, Toast) is selected. Adjust temperature as needed. Try a different rack position.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	VOLTIO
Model	24L
Color	Gray
Product Dimensions (D x W x H)	40.4 x 57.4 x 40.7 cm (15.9 x 22.6 x 16.0 inches)
Capacity	24 Liters
Power	1500 Watts
Material	Stainless Steel
Special Feature	60 Min Timer
Temperature Range	100°C to 250°C
Weight	5.92 kg (13.05 lbs)



Image: Comparison of two VOLTIO toaster oven models, including the 24L model.

## 9. WARRANTY AND SUPPORT

---

VOLTIO offers a 3-month warranty for manufacturing defects starting from the date of delivery. For detailed terms and conditions, please refer to the warranty information provided with your purchase or contact VOLTIO customer support.

For any questions, technical assistance, or warranty claims, please visit the official VOLTIO store or contact their customer service department.

**Official VOLTIO Store:** [Visit VOLTIO Store on Amazon.com.mx](https://www.amazon.com.mx/VOLTIO)

## 10. PRODUCT VIDEOS

---

### Unboxing Video

Your browser does not support the video tag.

Video: An unboxing video demonstrating the contents and initial setup of a similar toaster oven. This video is provided by the seller.

