

T203

JMMO T203 HiFi Audio Wireless Touch Control Earbuds

User Manual

INTRODUCTION

This manual provides detailed instructions for the operation, maintenance, and troubleshooting of your JMMO T203 HiFi Audio Wireless Touch Control Earbuds. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PRODUCT OVERVIEW

Package Contents

- JMMO T203 Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual

Earbud Components

The JMMO T203 earbuds feature intuitive touch-sensitive panels for control. The charging case includes a charging port and an LED indicator.



Image: The JMMO T203 wireless earbuds in their open charging case, showing the blue color and compact design. The charging case has the "JMMO" logo and a green LED indicator.

SETUP

Initial Charging

Before first use, fully charge the earbuds and the charging case.

1. Place both earbuds into the charging case.
2. Connect the USB charging cable to the charging port on the case and to a power source (e.g., computer USB port, wall adapter).
3. The LED indicator on the charging case will show charging status. A full charge takes approximately 45 minutes for the case and earbuds.

Pairing with Your Device

The JMMO T203 earbuds support one-step auto-pairing.

1. Ensure the earbuds are charged.
2. Open the lid of the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings and enable Bluetooth.
4. Search for available devices and select "JMMO T203" from the list.
5. Once connected, you will hear a confirmation tone, and the device will show "Connected".

ONE STEP & AUTO PAIRING

Simply open the case to connect



Image: An illustration demonstrating the "One Step & Auto Pairing" feature. The earbuds are shown in their open case next to a smartphone displaying Bluetooth settings, with "JMMO T203" listed as connected.

OPERATING INSTRUCTIONS

Wearing the Earbuds

Gently insert the earbuds into your ears, ensuring a comfortable and secure fit for optimal sound quality and passive noise isolation.

Touch Controls

The JMMO T203 earbuds feature intuitive touch controls on each earbud.

Action	Left Earbud	Right Earbud
--------	-------------	--------------

Action	Left Earbud	Right Earbud
Play/Pause	Single Tap	Single Tap
Next Track	Double Tap	Double Tap
Previous Track	Triple Tap	Triple Tap
Volume Up	Press and Hold (Right)	Press and Hold (Right)
Volume Down	Press and Hold (Left)	Press and Hold (Left)
Answer/End Call	Single Tap	Single Tap
Reject Call	Press and Hold	Press and Hold
Activate Voice Assistant	Quadruple Tap	Quadruple Tap

Power On/Off

- **Power On:** Open the charging case lid, or take the earbuds out of the case. They will power on automatically.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will power off automatically and begin charging.

MAINTENANCE AND CARE

Proper care will extend the lifespan of your JMMO T203 earbuds.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Water Resistance:** These earbuds are *Not Water Resistant*. Avoid exposure to water, rain, sweat, or high humidity.
- **Temperature:** Avoid exposing the earbuds to extreme temperatures (hot or cold).

TROUBLESHOOTING

If you encounter issues with your JMMO T203 earbuds, please refer to the following common solutions:

Problem	Possible Cause / Solution
Earbuds not pairing	<ul style="list-style-type: none"> • Ensure earbuds are charged. • Make sure Bluetooth is enabled on your device. • Forget "JMMO T203" from your device's Bluetooth list and try pairing again. • Restart your device.

Problem	Possible Cause / Solution
Only one earbud working	<ul style="list-style-type: none"> Place both earbuds back into the charging case, close the lid, wait a few seconds, then open it again. Ensure both earbuds are charged. Try resetting the earbuds (refer to manufacturer's website if specific reset instructions are not in this manual).
No sound or low volume	<ul style="list-style-type: none"> Check the volume level on both your device and the earbuds. Ensure the earbuds are properly connected to your device. Clean any debris from the earbud speaker mesh.
Charging issues	<ul style="list-style-type: none"> Ensure the charging cable is securely connected. Try a different USB port or power adapter. Clean the charging contacts on the earbuds and inside the case.

SPECIFICATIONS

Feature	Detail
Model Name	T203
Connectivity Technology	Wireless Bluetooth
Control Type	Touch Control
Charging Time	Approximately 45 minutes
Material	Plastic
Item Weight	45 Grams
Water Resistance Level	Not Water Resistant
Included Components	Cable
Ear Placement	In Ear
Form Factor	In Ear
Noise Control	None (Passive Noise Isolation)

WARRANTY AND SUPPORT

The JMMO T203 earbuds come with a manufacturer's warranty.

- **Manufacturer's Warranty:** 6 months
- For technical support or warranty claims, please contact the seller or refer to the official brand website.

SAFETY INFORMATION

- Do not disassemble, repair, or modify the product.
- Keep out of reach of children.
- Avoid prolonged listening at high volumes to prevent hearing damage.
- Dispose of the product responsibly according to local regulations.