

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Pursonic](#) /

› [Pursonic Electric Spin Scrubber Model SB8 User Manual](#)

Pursonic SB8

Pursonic Electric Spin Scrubber Model SB8 User Manual

Model: SB8

INTRODUCTION

This manual provides instructions for the safe and effective use of your Pursonic Electric Spin Scrubber Model SB8. This cordless cleaning tool is designed to simplify various household cleaning tasks with its powerful motor and interchangeable brush heads.

Key features include:

- **Powerful Cleaning:** Equipped with a 5000mAh battery and dual-speed motor, providing up to 90 minutes of cordless operation.
- **Adjustable Handle:** Three adjustable lengths (12in, 43in, 54in) for reaching various areas without strain.
- **Dual Speeds:** Offers 300 RPM and 400 RPM modes for different cleaning needs.
- **Versatile Brush Heads:** Includes 8 replaceable brush heads for diverse surfaces and tasks.
- **Waterproof Design:** Safe for use in wet environments like bathrooms and kitchens.

WHAT'S INCLUDED

Carefully unpack the box and ensure all items are present and in good condition. The package should contain:

- 1 x Pursonic Electric Spin Scrubber Unit
- 1 x Extension Handle
- 8 x Interchangeable Brush Heads (e.g., Large Flat Brush, Small Flat Brush, Pointed Brush, Scouring Pads)
- 1 x USB-C Charging Cable

Reach Every Spot Without the Ache

Ideal for anyone looking to save time and reduce strain while cleaning. The adjustable handle means no bending or kneeling, making it perfect for users of all heights and mobility levels.



Figure 1: All components included in the Pursonic Electric Spin Scrubber kit.



Big Flat Brush
For Flat Floors



Small Flat Brush
For Small Flat



Pointed Brush
For Corners & Narrow Space



Figure 2: Examples of included brush heads: Big Flat Brush, Small Flat Brush, and Pointed Brush.

SETUP INSTRUCTIONS

1. **Charge the Scrubber:** Before first use, fully charge the scrubber. Connect the USB-C charging cable to the charging port on the scrubber and plug the other end into a compatible USB power adapter (not included). The charging indicator light will show charging status. A full charge takes approximately 5 hours and provides up to 90-120 minutes of continuous cleaning.
2. **Attach the Handle (Optional):** For extended reach, attach the extension handle. Align the handle sections and twist to secure. The handle can be adjusted to lengths of 12 inches, 43 inches, or 54 inches.
3. **Select and Attach a Brush Head:** Choose the appropriate brush head for your cleaning task. Align the brush head with the rotating shaft on the scrubber unit and push firmly until it clicks into place.



Figure 3: Charging and battery specifications of the scrubber.

Adjustable Up to 4.5 Feet



Figure 4: The scrubber's adjustable handle for extended reach.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button to turn the scrubber on. Press it again to turn it off.
2. **Adjust Speed:** The scrubber features dual speeds: 300 RPM and 400 RPM. Press the speed selection button to toggle between the two modes, choosing the appropriate speed for the cleaning task.
3. **Apply Cleaning Solution:** For best results, apply your preferred cleaning solution directly to the surface to be cleaned or to the brush head.
4. **Begin Cleaning:** Gently guide the rotating brush over the surface. Allow the scrubber to do the work; avoid applying excessive pressure, as this can slow the motor and reduce effectiveness.
5. **Adjust Brush Head Angle:** The brush head can be adjusted between 120° and 180° to reach awkward angles and tight spaces.

Proper Handling

To ensure optimal performance and longevity of your scrubber, follow these handling guidelines:



Figure 5: Proper handling technique for the electric spin scrubber.

- **Correct Grip:** Hold the handle lightly, allowing the brush to rotate freely and perform the cleaning action.
- **Avoid Pressing Down:** Do not apply excessive downward pressure. This can strain the motor, reduce battery life, and cause premature wear on the brush heads.

MAINTENANCE

Regular maintenance will help prolong the life of your Pursonic Electric Spin Scrubber.

1. **Clean Brush Heads:** After each use, remove the brush head and rinse it thoroughly under running water to remove any dirt or cleaning solution residue. Allow to air dry completely before storing.
2. **Clean the Scrubber Unit:** Wipe the main scrubber unit with a damp cloth. Do not submerge the entire unit in water, although it is designed to be waterproof for wet cleaning environments, direct submersion for cleaning is not recommended.
3. **Storage:** Store the scrubber and its accessories in a clean, dry place away from direct sunlight and extreme temperatures.
4. **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Recharge the unit when the power is low. If storing for an extended period, charge the battery every 3-6 months.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is discharged.	Charge the scrubber fully using the provided USB-C cable.
Brush head stops spinning or spins slowly.	Excessive pressure applied during cleaning. Battery is low. Brush head is clogged with debris.	Reduce pressure on the brush head. Recharge the battery. Remove and clean the brush head.
Scrubber not cleaning effectively.	Incorrect brush head for the task. Insufficient cleaning solution. Battery is low.	Ensure the correct brush head is used for the surface and type of dirt. Apply more cleaning solution. Recharge the battery.
Water leakage from the unit.	Unit not properly sealed or damaged.	Ensure all parts are securely attached. If leakage persists, discontinue use and contact customer support.

SPECIFICATIONS

Model: SB8

Brand: Pursonic

Battery Capacity: 5000mAh

Charging Time: Approximately 5 hours

Operating Time: Up to 90-120 minutes (depending on speed and pressure)

Speed Modes: 300 RPM, 400 RPM

Handle Lengths: 12 inches, 43 inches, 54 inches

Waterproof Rating: IPX7 (for wet areas)

Material: Plastic

Product Dimensions: 45"L x 4"W x 2"H (fully extended)

Item Weight: 3.5 Pounds

UPC: 810144931289

WARRANTY INFORMATION

Pursonic products are designed for quality and durability. For specific warranty details regarding your Electric Spin Scrubber Model SB8, please refer to the warranty card included in your product packaging or visit the official Pursonic website. Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance, or encounter issues not covered in this manual, please contact Pursonic customer support. Visit the official Pursonic website for contact information, FAQs, and additional resources.

Pursonic Official Website: [Pursonic Store on Amazon](#)