

[Manuals.plus](#) /

› [AHENOD](#) /

› AHENOD G15 Portable MP3/MP4 Player User Manual

AHENOD G15

AHENOD G15 Portable MP3/MP4 Player User Manual

Model: G15

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your AHENOD G15 Portable MP3/MP4 Player. Please read this manual thoroughly before operating the device and keep it for future reference.

Son HIFI

Prise en charge des formats MP3, WAV, APE, FLAC, AAC, OGG, WMA

- ⇒ lecture séquentielle
- ① cycle unique (musique)
- Ⓐ Boucle de liste
- ∞ lecture aléatoire



Front view of the AHENOD G15 Portable MP3/MP4 Player, showcasing its sleek design and display.

PACKAGE CONTENTS

Ensure all items are present in the package:

- 1x AHENOD G15 160GB MP3 Player
- 1x User Manual (this document)
- 1x USB Type-C Cable
- 1x Earphones
- 1x Silicone Case
- 1x Screen Protector

SETUP

1. Charging the Device

Before first use, fully charge the player. Connect the provided USB Type-C cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

2. Installing the Screen Protector and Silicone Case

For optimal protection, apply the screen protector and fit the silicone case onto the device. Follow the instructions provided with the screen protector for proper application.

3. Powering On/Off

- To power on: Press and hold the power button until the screen lights up.
- To power off: Press and hold the power button, then select "Power off" from the options.

4. Expanding Storage (Micro SD Card)

The player comes with a 128GB Micro SD card pre-installed, supporting up to 512GB. To replace or insert a new Micro SD card:

1. Locate the Micro SD card slot on the side of the device.
2. Gently push the existing card to eject it, or insert a new card until it clicks into place.
3. Ensure the card is properly seated for the device to recognize it.



The AHENOD G15 player displaying battery life and storage capacity, highlighting the 2500mAh battery and expandable storage.

OPERATING INSTRUCTIONS

1. Navigating the Interface

The AHENOD G15 features a 5-inch IPS touchscreen with Android 9 OS. Navigate by tapping icons, swiping, and using the back/home buttons as you would on a standard Android device.

Puissant processeur MTK à 8 coeurs

Android 9.0 améliore considérablement la vitesse de réponse du lecteur, il fonctionne plus rapidement et de manière plus fluide.

RAM

3GB

ROM

32GB

+

Micro SD

128GB

35% ↑

vitesse de course

The AHENOD G15 player's screen displaying the pre-installed Google Play Store and various applications.

2. Connecting to Wi-Fi

To access online streaming services and the app store, connect your device to a Wi-Fi network:

1. Go to **Settings**.
2. Select **Network & Internet**.
3. Tap **Wi-Fi** and turn it on.
4. Select your desired network and enter the password if prompted.

3. Using Bluetooth Connectivity

The player supports Bluetooth 4.1 for connecting to wireless headphones, speakers, or car stereos.

1. Go to **Settings**.
2. Select **Connected devices**.
3. Tap **Bluetooth** and turn it on.
4. Pair with your desired Bluetooth device.

Google Play Store intégré

Vous pouvez télécharger et installer l'application dont vous avez besoin à tout moment.



The AHENOD G15 player demonstrating stable Bluetooth duplex connectivity with various audio devices.

4. Playing Music and Videos

The player supports a wide range of audio and video formats.

- **Supported Audio Formats:** MP3, WAV, APE, FLAC, AAC, OGG, WMA.
- **Supported Video Formats:** AVI, MKV, RMVB, MP4, MPG, MOV, FLV, RM.

Use the pre-installed music and video player apps to browse and play your media files. You can also download streaming apps like Spotify, Amazon Music, and YouTube from the Google Play Store.



The AHENOD G15 player's music interface, showing support for various audio formats and playback modes.



The AHENOD G15 player showcasing 1080P HD video playback on its 5-inch screen.

5. Managing Applications

You can install or uninstall applications through the integrated Google Play Store.

- To install: Open the **Play Store** app, search for your desired application, and tap **Install**.

- To uninstall: Go to **Settings > Apps & notifications**, select the app, and tap **Uninstall**.



Visual guide for uninstalling an application on the AHENOD G15 player.

MAINTENANCE

1. Cleaning the Device

Use a soft, dry, lint-free cloth to clean the screen and body of the player. Avoid using abrasive cleaners, solvents, or aerosol sprays.

2. Battery Care

- Avoid exposing the device to extreme temperatures.
- Do not fully discharge the battery frequently.
- If storing the device for an extended period, charge it to about 50% before storage.

3. Software Updates

Periodically check for system updates in **Settings > System > System update** to ensure optimal performance and security.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device for at least 30 minutes.
Cannot connect to Wi-Fi.	Incorrect password, out of range, or router issue.	Verify password, move closer to router, restart router.
Bluetooth device not pairing.	Device not in pairing mode, out of range, or interference.	Ensure both devices are in pairing mode, move closer, restart Bluetooth on both devices.
Player is slow or unresponsive.	Too many apps running, low storage, or software glitch.	Close background apps, free up storage, restart the device.
SD card not recognized.	Card not inserted correctly or corrupted.	Re-insert the SD card. If issue persists, try formatting the card (this will erase data).

SPECIFICATIONS

Model Name	G15
Brand	AHENOD
Operating System	Android 9
Processor	MTK 8-core 1.92GHz
RAM	3GB
Internal Storage (ROM)	32GB
Expandable Storage	128GB Micro SD card included (supports up to 512GB)
Screen Size	5 Inches IPS Touchscreen
Display Resolution	1080P HD
Connectivity	Bluetooth 4.1, Wi-Fi (2.4G&5G)
Battery	2500mAh Lithium-ion (included)
Battery Life (Music Playback)	Up to 50 hours (wired headphones)
Battery Life (Video Playback)	Up to 8 hours
Supported Audio Formats	MP3, WAV, APE, FLAC, AAC, OGG, WMA
Supported Video Formats	AVI, MKV, RMVB, MP4, MPG, MOV, FLV, RM
Dimensions (D x W x H)	10 x 5 x 1 cm
Weight	180 Grams



Overview of the AHENOD G15 player highlighting its main technical specifications.

WARRANTY AND SUPPORT

The AHENOD G15 Portable MP3/MP4 Player comes with **aone-year warranty** from the date of purchase.

For any issues or inquiries, please contact AHENOD customer service. We aim to resolve all issues within 24 hours. Refer to your purchase documentation for specific contact details.

© 2026 AHENOD. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0FJ5JB7MB>

More documents and user manuals: <https://manuals.plus/>