

[Manuals.plus](#) /

› [Seesii](#) /

› SEESII Electric Pruning Shears (Model CS300) User Manual

Seesii CS300

SEESII Electric Pruning Shears User Manual

Model: CS300

1. INTRODUCTION

Thank you for choosing the SEESII Electric Pruning Shears. This cordless pruner is designed to simplify gardening tasks, offering efficient and precise cutting for various plant types. Please read this manual thoroughly before initial use to ensure safe operation, optimal performance, and proper maintenance of your tool.



Image: SEESII Electric Pruning Shears, Model CS300.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury when using this tool.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the tool.
- **Wear Eye Protection:** Always wear safety glasses or goggles to protect your eyes from flying debris.
- **Wear Gloves:** Use appropriate gardening gloves to protect your hands.
- **Keep Hands Clear:** Never place hands near the cutting blades during operation.
- **Secure Work Area:** Ensure the area is clear of bystanders, especially children and pets.
- **Avoid Accidental Starting:** Ensure the switch is in the off position before inserting the battery pack or picking up the tool.
- **Use the Right Tool:** Do not force the tool; use it only for its intended purpose of pruning branches within its specified cutting capacity.

- **Maintain Blades:** Keep cutting blades sharp and clean for best performance and to reduce the risk of binding.
- **Store Safely:** Store the tool and batteries in a dry, secure place out of reach of children.
- **Charge Properly:** Use only the charger specified by the manufacturer.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x SEESII Electric Pruning Shear
- 2 x 2000mAh Batteries
- 1 x Fast Charger
- 1 x Extra SK5 Replacement Blade
- 1 x Tool Kit
- 1 x Glove
- 1 x Oil Pot (Note: Oil not included)
- 1 x User Manual

Everything You Need, Ready to Use



4. PRODUCT OVERVIEW

- **Lightweight Design:** Weighing approximately 2 lbs, designed for comfortable one-hand operation and reduced

hand strain during extended use.

- **1.4-inch Max Jaw Opening:** Capable of cutting branches up to 1.4 inches (35mm) in diameter.
- **Brushless Motor:** Provides consistent cutting performance, increased power, lower heat generation, and longer tool lifespan.
- **SK5 High-Carbon Steel Blade:** Ensures sharp, clean cuts that promote plant health and offers enhanced hardness and edge retention. An extra replacement blade is included.
- **Dual 2000mAh Batteries:** Two rechargeable batteries provide extended runtime, delivering over 2000 cuts per charge.
- **Two Cutting Modes:** Adjustable cutting range from 0.8 inches (20mm) to 1.4 inches (35mm) for versatile pruning.

2 lbs

Lightweight Control

Easy One-Hand Use



Only
2 lbs



Image: Demonstrating the lightweight nature and easy one-hand use of the pruner.

Brushless Motor Power

Strong, Stable Cutting Performance



Image: Illustration of the brushless motor's advantages: more power, lower heat, longer lifespan.

5. SETUP

5.1 Charging the Batteries

1. Connect the fast charger to a power outlet.
2. Insert a 2000mAh battery into the charger.

3. Allow the battery to charge fully. The indicator light on the charger will change to show a full charge.
4. Remove the battery from the charger once fully charged.



The image shows a woman in a garden, holding a bouquet of flowers and a blue pruning shear. In the foreground, two black 2000mAh batteries are shown on a wooden surface. The batteries have a green battery level indicator on the front. The background is a bright, sunny garden scene.

Up to **2000+**
Cuts

1-2 h
Fast Charging

2 x 2000
mAh Batteries
Longer Runtime, Less Downtime

Image: Two 2000mAh batteries and fast charging information.

5.2 Installing the Battery

1. Ensure the pruning shears are turned off.

2. Align the charged battery with the battery slot at the bottom of the pruner handle.
3. Slide the battery into place until it clicks securely.

5.3 Initial Blade Check

Before first use, inspect the SK5 blade for any damage and ensure it is clean. Apply a small amount of lubricant (not included in oil pot) to the blade for smooth operation.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

- **To Power On:** Press and hold the power button until the indicator light illuminates. The blades will open.
- **To Power Off:** Press and hold the power button until the indicator light turns off and the blades close.

6.2 Adjusting Cutting Modes

The pruner offers two cutting modes for different branch sizes:

- **Mode 1 (0.8" / 20mm):** For smaller branches, flowers, and soft stems. To activate, double-tap the trigger quickly after powering on.
- **Mode 2 (1.4" / 35mm):** For larger branches, shrubs, and fruit tree branches. This is typically the default mode upon power-on, or can be selected by double-tapping the trigger again if in Mode 1.

2 Cutting Modes

From Flowers to Woody Branches



Image: Visual representation of minimum (0.8") and maximum (1.4") cutting modes.

6.3 Pruning Technique

1. Position the branch to be cut fully within the open blades.
2. Press the trigger firmly to close the blades and make the cut.
3. Release the trigger to allow the blades to open for the next cut.
4. Avoid twisting the pruner while cutting to prevent blade damage.
5. Do not attempt to cut branches exceeding the maximum capacity of 1.4 inches (35mm).

1.4"

Max Jaw Opening

Effortlessly Trims
Thick Branches

1.4"



Image: Demonstrating the 1.4-inch maximum jaw opening for effortlessly trimming thick branches.

Versatile Garden Use

Flowers, Vines, Shrubs & Fruit Tree Branches



Image: Examples of pruning flowers, vines, shrubs, and fruit tree branches.

6.4 Operational Videos

Your browser does not support the video tag.

Video: A review demonstrating the SEESII Electric Pruning Shears in use, highlighting its features and performance.

Your browser does not support the video tag.

Video: A test and review of the 1.4-inch cordless pruner, showing its effectiveness compared to manual clippers.

7. MAINTENANCE

7.1 Cleaning and Lubrication

1. After each use, ensure the tool is powered off and the battery is removed.
2. Clean the blades with a dry cloth to remove sap, dirt, and debris.
3. Apply a few drops of lubricating oil (not included) to the blade pivot point and cutting edges to prevent rust and ensure smooth operation.

SK5 Blade, Smooth Cuts

Clean Cuts with Less
Branch Damage



Image: Close-up of the SK5 blade, emphasizing clean cuts and durability.

7.2 Blade Replacement

The kit includes an extra SK5 replacement blade. Refer to the detailed instructions in the included user manual for the specific steps to safely replace the blade. Always ensure the tool is powered off and the battery is removed before attempting blade replacement.

7.3 Battery Care

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not store batteries in a discharged state for extended periods. Charge them periodically if not in use.
- Do not expose batteries to water or fire.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Pruner does not turn on.	Battery not inserted correctly or discharged.	Ensure battery is fully charged and properly seated.
Blades do not close or cut effectively.	Blades are dull, dirty, or obstructed. Branch too thick.	Clean and lubricate blades. Replace dull blades. Do not attempt to cut branches exceeding 1.4 inches.
Battery runtime is shorter than expected.	Battery not fully charged or nearing end of life.	Ensure full charge. Consider replacing battery if performance consistently degrades.
Tool overheats.	Continuous heavy use.	Allow the tool to cool down. Avoid prolonged heavy-duty cutting without breaks.

9. SPECIFICATIONS

- **Brand:** Seesii
- **Model Number:** CS300
- **Color:** Sky Blue
- **Item Weight:** 1 kg (approx. 2.2 lbs)
- **Product Dimensions:** 12.6"L x 3.15"W
- **Blade Length:** 1.4 inches
- **Max Cutting Width:** 1.4 inches (35mm)
- **Blade Material:** High Carbon Steel (SK5)
- **Handle Material:** Rubber (Non-slip)
- **Battery Type:** 2000mAh Lithium-ion (2 included)
- **Motor Type:** Brushless

10. WARRANTY AND SUPPORT

Your SEESII Electric Pruning Shears come with a **1-Year Warranty** from the date of purchase, covering manufacturing defects. Additionally, SEESII offers **36 months of technical support** and aims for a **fast response within 24 hours** for customer inquiries.

For warranty claims, technical assistance, or any questions regarding your product, please contact SEESII customer support through the retailer where you purchased the product or visit the official SEESII website for contact information.

Keep your purchase receipt as proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FJ5VPHFW>

More documents and user manuals: <https://manuals.plus/>