



[Manuals.plus](#) /

› [Mould King](#) /

› Mould King 11024 Flying Saucer Building Block Model Instruction Manual

Mould King 11024

Mould King 11024 Flying Saucer Building Block Model

Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Mould King 11024 Flying Saucer Building Block Model. Please read all instructions carefully before beginning assembly or operation to ensure proper use and enjoyment of the product.

The Mould King 11024 model kit is designed to be an engaging and dynamic display piece. Its unique design, interactive movement, and intelligent control features offer an exceptional building and play experience for enthusiasts.

PACKAGE CONTENTS

Before starting, verify that all components are present. The package includes:

- 2053+ Building Blocks
- 3xL Motors
- MK4 Battery Box
- 1x Remote Control
- Instruction Manual
- Components for App User Interface (via smartphone app)

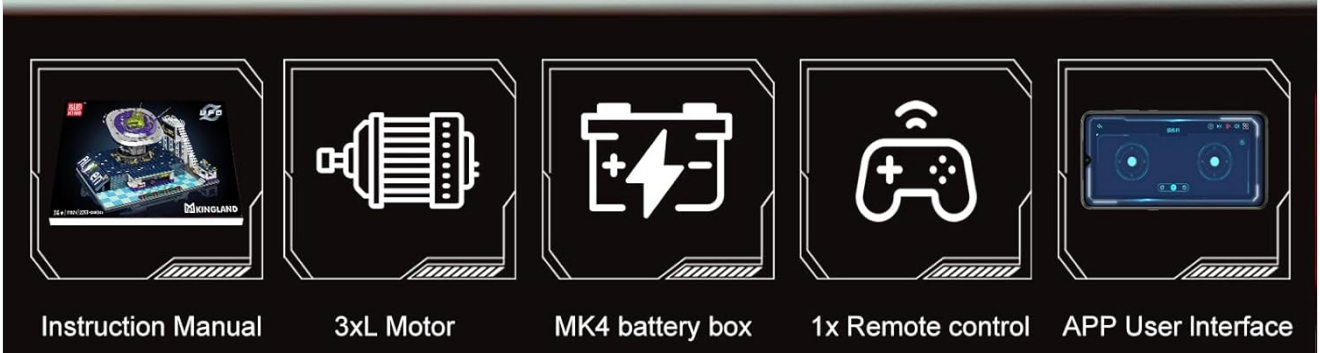 
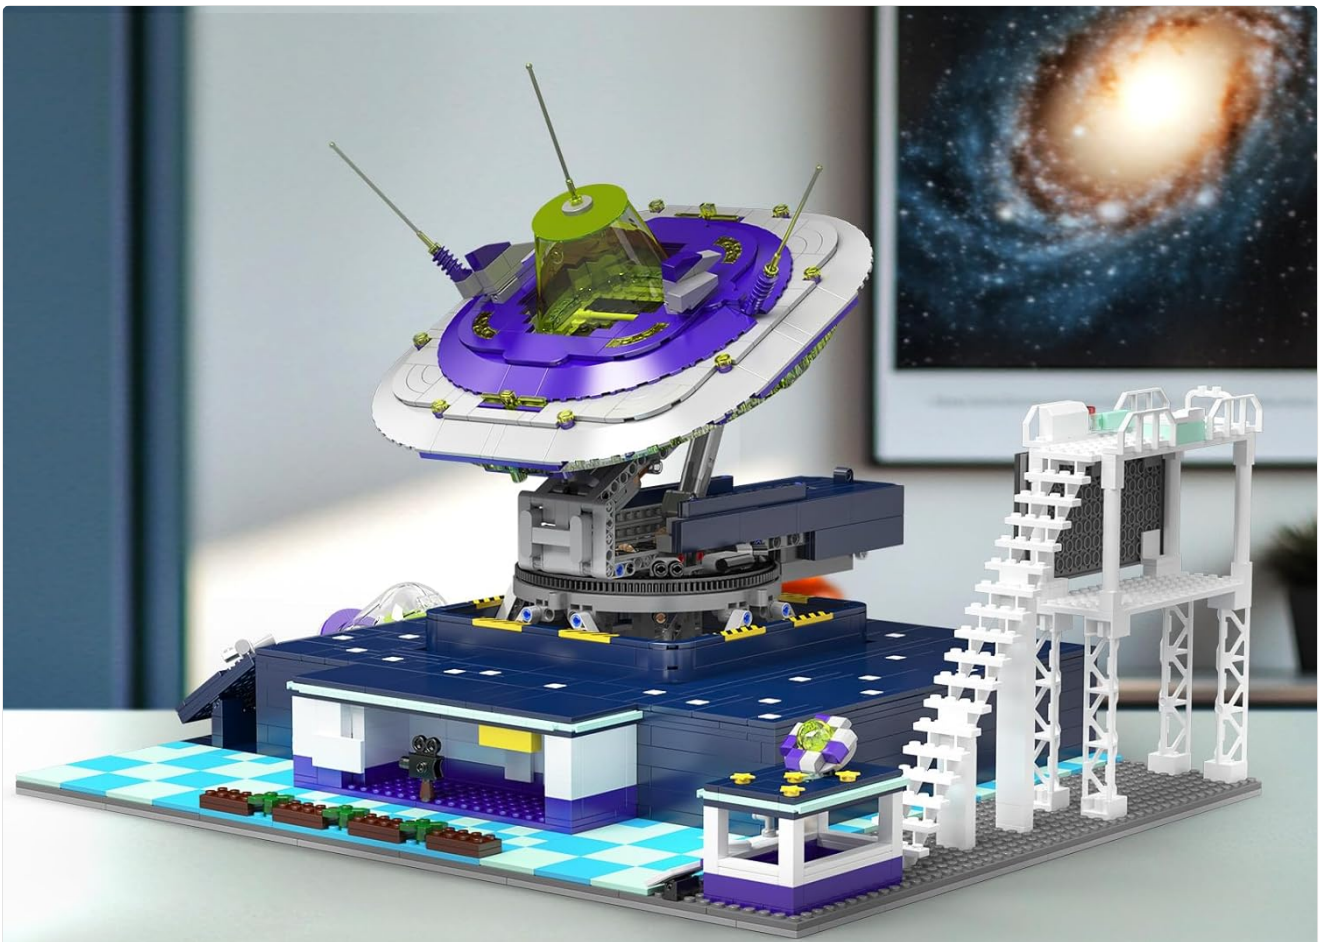 


Image: Overview of the Mould King 11024 model and its key components, including the instruction manual, motors, battery box, remote control, and app interface.

SETUP AND ASSEMBLY

The assembly process involves connecting numerous building blocks to construct the flying saucer model and its base. Follow the included step-by-step instruction manual carefully.

- 1. Unpack Components:** Carefully unbox all parts. Components are sorted and packaged to prevent loss.
- 2. Follow Manual:** Refer to the detailed assembly instructions provided in the physical manual. Each step is illustrated to guide you through the construction.
- 3. Motor and Battery Box Installation:** Integrate the 3xL motors and the MK4 battery box into the model as indicated in the assembly guide. Ensure all connections are secure.
- 4. Battery Installation:** Install 1 Lithium-polymer battery into the battery box. Ensure correct polarity.

5. **Remote Control Setup:** If using the remote control, ensure it has the necessary batteries installed (not specified in JSON, assume standard AAA/AA).

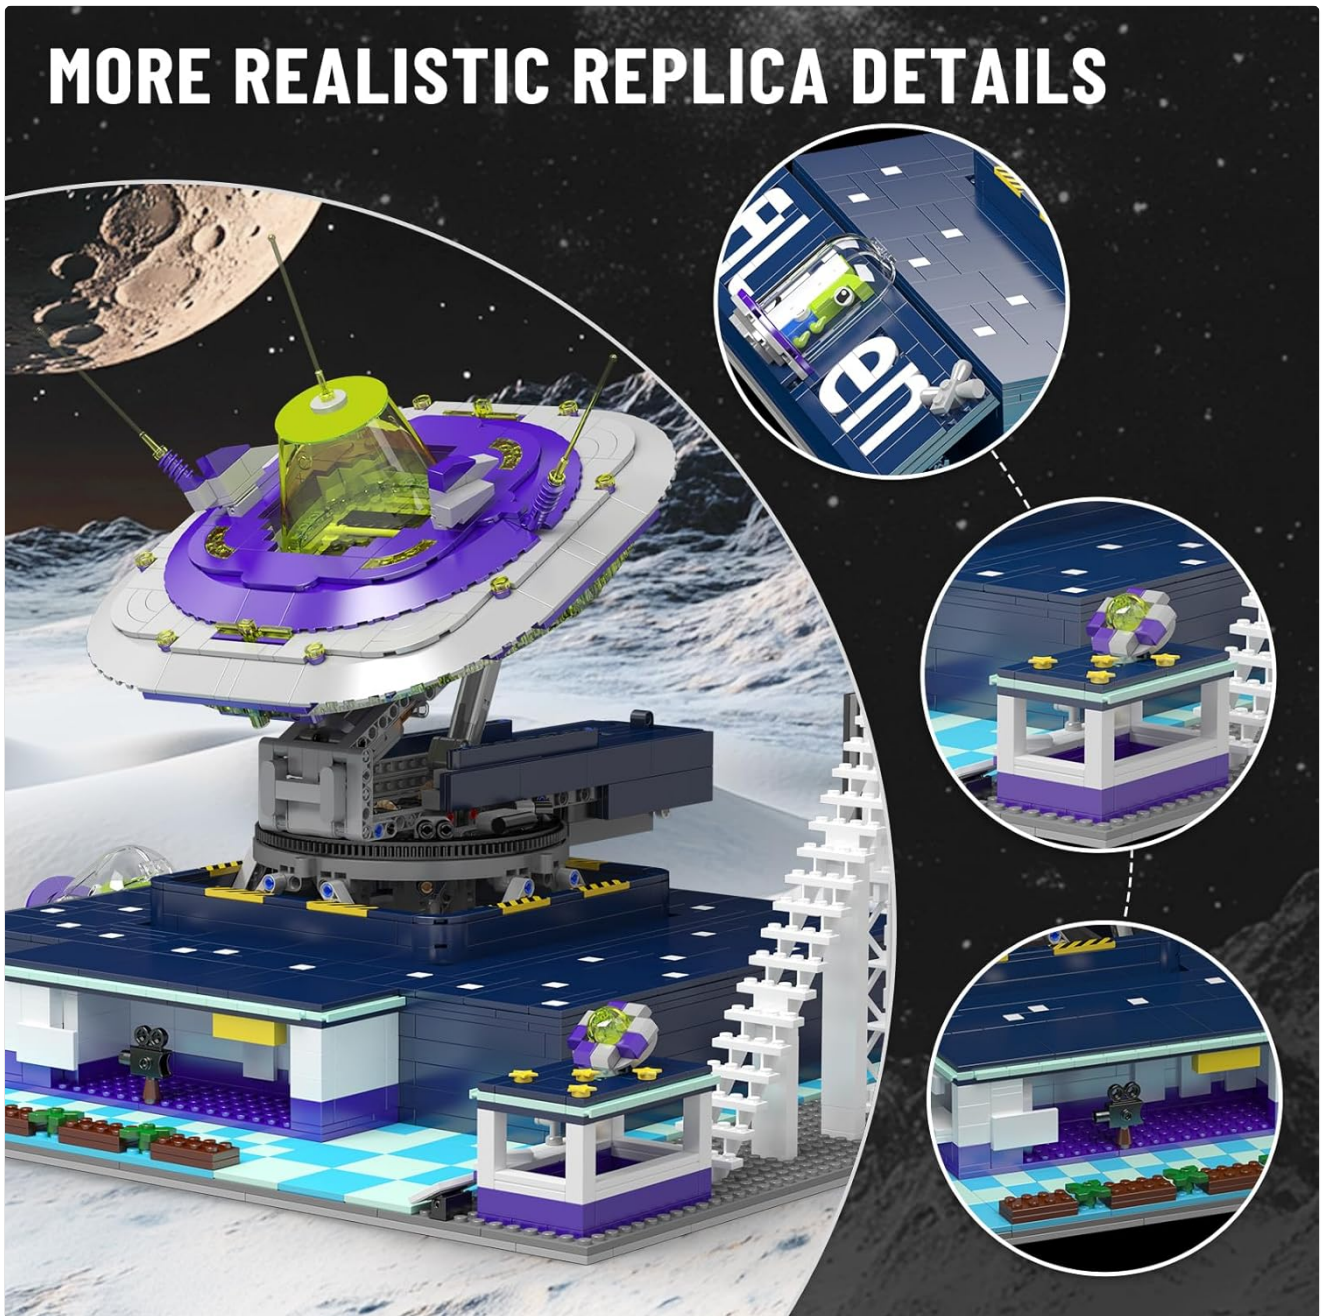 


Image: Detailed view of the assembled model, showcasing the intricate design and replica elements.

OPERATING INSTRUCTIONS

The Mould King 11024 model offers dynamic movement controlled via a dedicated remote control or a smartphone application.

Remote Control Operation:

- **Power On:** Ensure the battery box in the model is switched on. Power on the remote control.
- **Pairing:** The remote control should automatically pair with the model. If not, refer to the specific pairing instructions in the physical manual.

- **Movement:** Use the joysticks or buttons on the remote control to activate the motors. The flying saucer component is rotatable, and its angles are adjustable, simulating dynamic flight.

Smartphone App Operation:

- **Download App:** Download the official Mould King control app from your smartphone's app store.
- **Connect:** Open the app and follow the on-screen instructions to connect to your model via Bluetooth.
- **Control Interface:** The app provides an intuitive interface with touch buttons and step-by-step tutorials for controlling the model's movements and adjustable features.

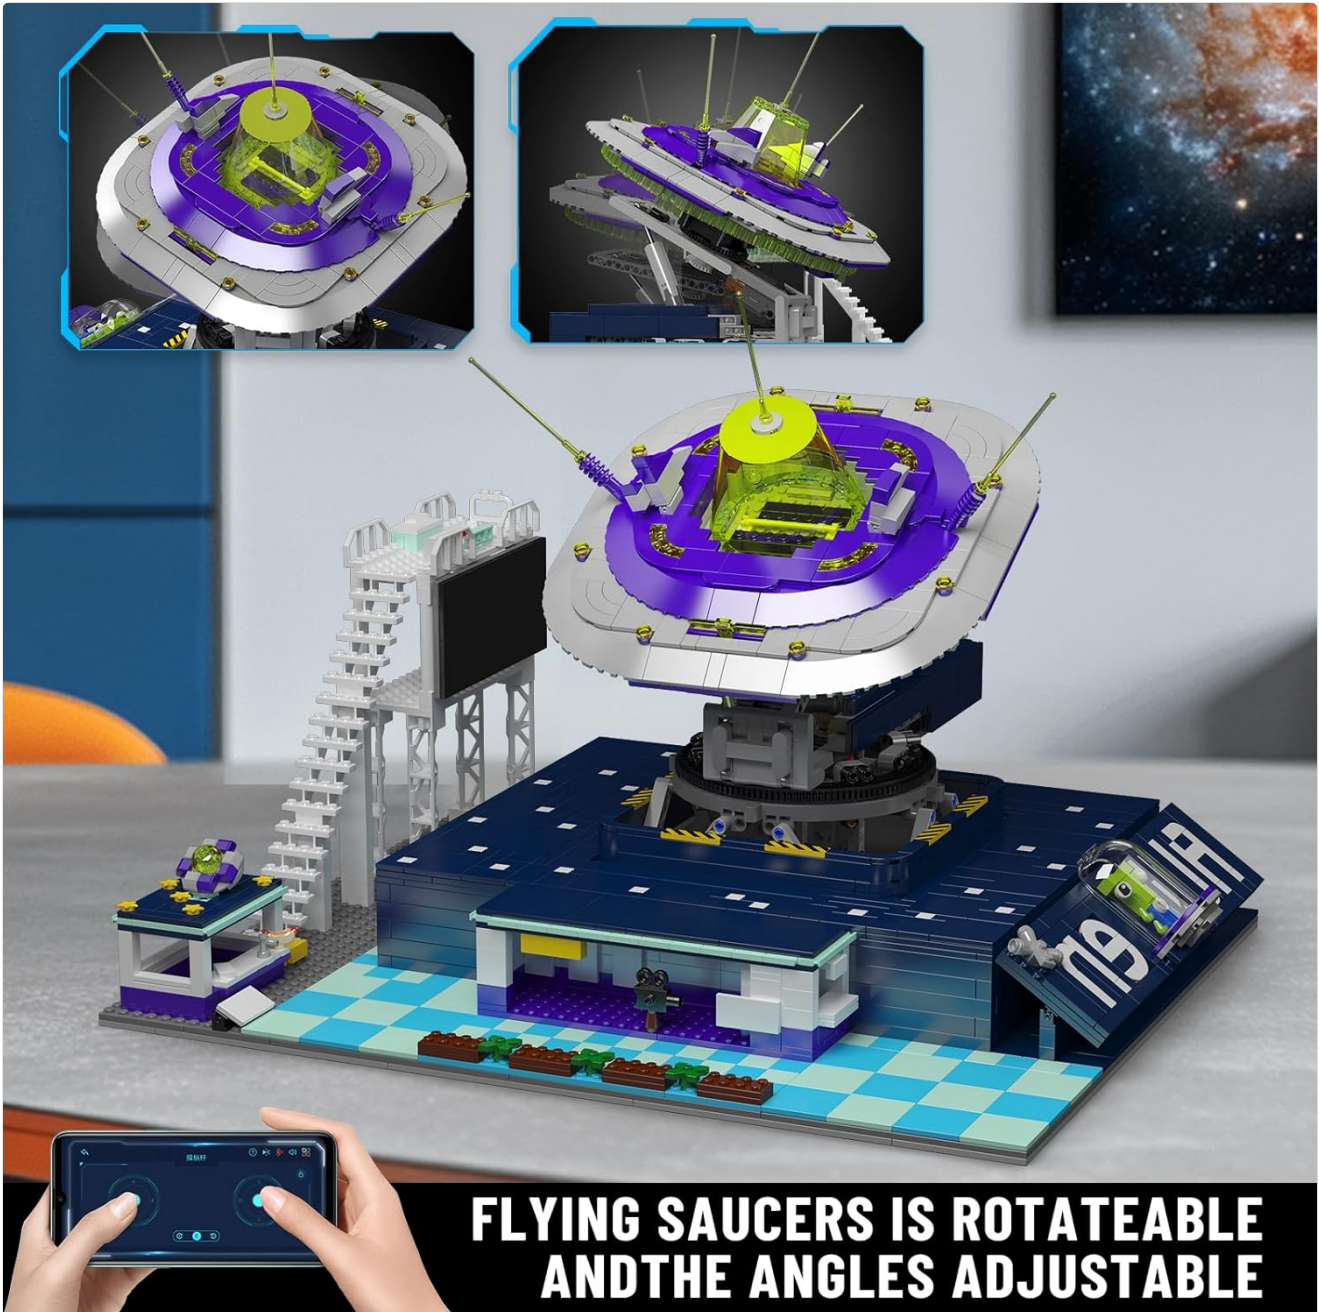 


Image: The model being controlled via a smartphone app, highlighting the rotatable saucer and adjustable angles.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe dust from the model. Avoid using water or cleaning solutions, as

they may damage the electronic components or plastic blocks.

- **Storage:** Store the model in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Battery Care:** Remove batteries from the battery box and remote control if the model will not be used for an extended period to prevent leakage.
- **Component Check:** Periodically check for any loose connections or blocks and re-secure them as needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Model does not power on.	Batteries are dead or incorrectly installed. Battery box switch is off.	Check battery polarity and replace with fresh batteries. Ensure the battery box switch is in the "ON" position.
Remote control does not respond.	Remote control batteries are dead. Not paired correctly.	Replace remote control batteries. Refer to the manual for pairing instructions.
App cannot connect to the model.	Bluetooth is off on the phone. Model is out of range. App needs restart.	Ensure Bluetooth is enabled on your smartphone. Bring the phone closer to the model. Close and reopen the app.
Parts are missing during assembly.	Packaging error or accidental loss.	Contact customer support for assistance with missing parts.

SPECIFICATIONS

Brand:	Mould King
Model Name:	Mould King 11024
Model Number:	WX11024-JWBDDE
Number of Pieces:	2053+
Product Dimensions (L x W x H):	49.1 x 42.4 x 35.2 cm
Product Weight:	4.34 kilograms
Material Type:	Plastic
Power Source:	Batteries
Battery Type:	1 Lithium-polymer (included)

Operation Mode:	Automatic (via remote control or app)
Educational Objective:	Hand-eye coordination
Recommended Age:	Suitable for teenagers and adults (manufacturer recommended age 0-96 years, but product complexity suggests older users)
UPC / GTIN:	705736380258

WARRANTY AND SUPPORT

Warranty: If you are not satisfied with your purchase, a 1-month refund is offered. Please retain your proof of purchase for warranty claims.

Missing Parts: Each product undergoes multiple checks before packaging. In the event of missing parts, please contact Mould King customer support. We will assist you in obtaining the necessary replacement parts.

Customer Support: For further assistance, technical support, or inquiries regarding your Mould King 11024 model, please contact Mould King Creations, the seller, or refer to the contact information provided in your product packaging.

Seller: [Mould King Creations](#)