

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AX WABER](#) /

› [AX WABER Floor TV Monitor Stand AX01WG02 Instruction Manual](#)

AX WABER AX01WG02

AX WABER Floor TV Monitor Stand AX01WG02 Instruction Manual

Model: AX01WG02

1. INTRODUCTION

This manual provides detailed instructions for the safe and proper assembly, operation, and maintenance of your AX WABER Floor TV Monitor Stand, Model AX01WG02. Please read this manual thoroughly before installation and retain it for future reference.

1.1 Safety Information

- **Weight Capacity:** Do not exceed the maximum weight capacity of 20 kg (44 lbs). Overloading can result in serious injury or property damage.
- **TV Size:** This stand is designed for LCD/LED/OLED TVs ranging from 13 to 50 inches.
- **VESA Compatibility:** Ensure your TV's VESA mounting pattern is compatible (75x75mm to 200x200mm).
- **Stable Surface:** Always place the stand on a flat, stable, and level surface to prevent tipping.
- **Assembly:** Follow all assembly instructions carefully. Incorrect assembly can lead to product failure.
- **Children:** Keep children away from the stand during assembly. Small parts may be a choking hazard.
- **Adjustments:** Ensure all screws and connections are securely tightened before and after making any adjustments to the TV position.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Base Frame (1x)
- Vertical Support Pole (1x)
- TV Mounting Plate (1x)
- Adjustable Feet (4x)

- Cable Management Ties (3x)
- Hardware Kit (various screws, washers, spacers for TV mounting)
- Assembly Tools (e.g., Allen wrench, spanner)
- Instruction Manual (this document)





Figure 1: Overview of the AX WABER Floor TV Monitor Stand AX01WG02.

3. SPECIFICATIONS

Model Number	AX01WG02
Compatible TV Sizes	13 - 50 inches (LCD, LED, OLED)
Maximum Weight Capacity	20 kg (44 lbs)
VESA Compatibility	75x75mm, 100x100mm, 100x200mm, 200x100mm, 200x200mm
Height Adjustment Range	35 - 45 inches (8 levels)
Tilt Angle	-10° to +10°
Horizontal Rotation	0-90° (Landscape to Portrait)
Material	High-quality Steel
Base Dimensions	Approximately 17.4" (width) x 15.9" (depth)

Upgrade Your Presentations



Figure 2: Detailed dimensions and VESA compatibility of the stand.

4. SETUP INSTRUCTIONS

Follow these steps carefully to assemble your AX WABER Floor TV Monitor Stand.

4.1 Assemble the Base

1. Unpack all components and verify against the package contents list.
2. Attach the adjustable feet to the base frame. Ensure they are securely tightened but allow for minor adjustments later.
3. Connect the vertical support pole to the assembled base frame using the provided screws and tools. Ensure the connection is firm and stable.

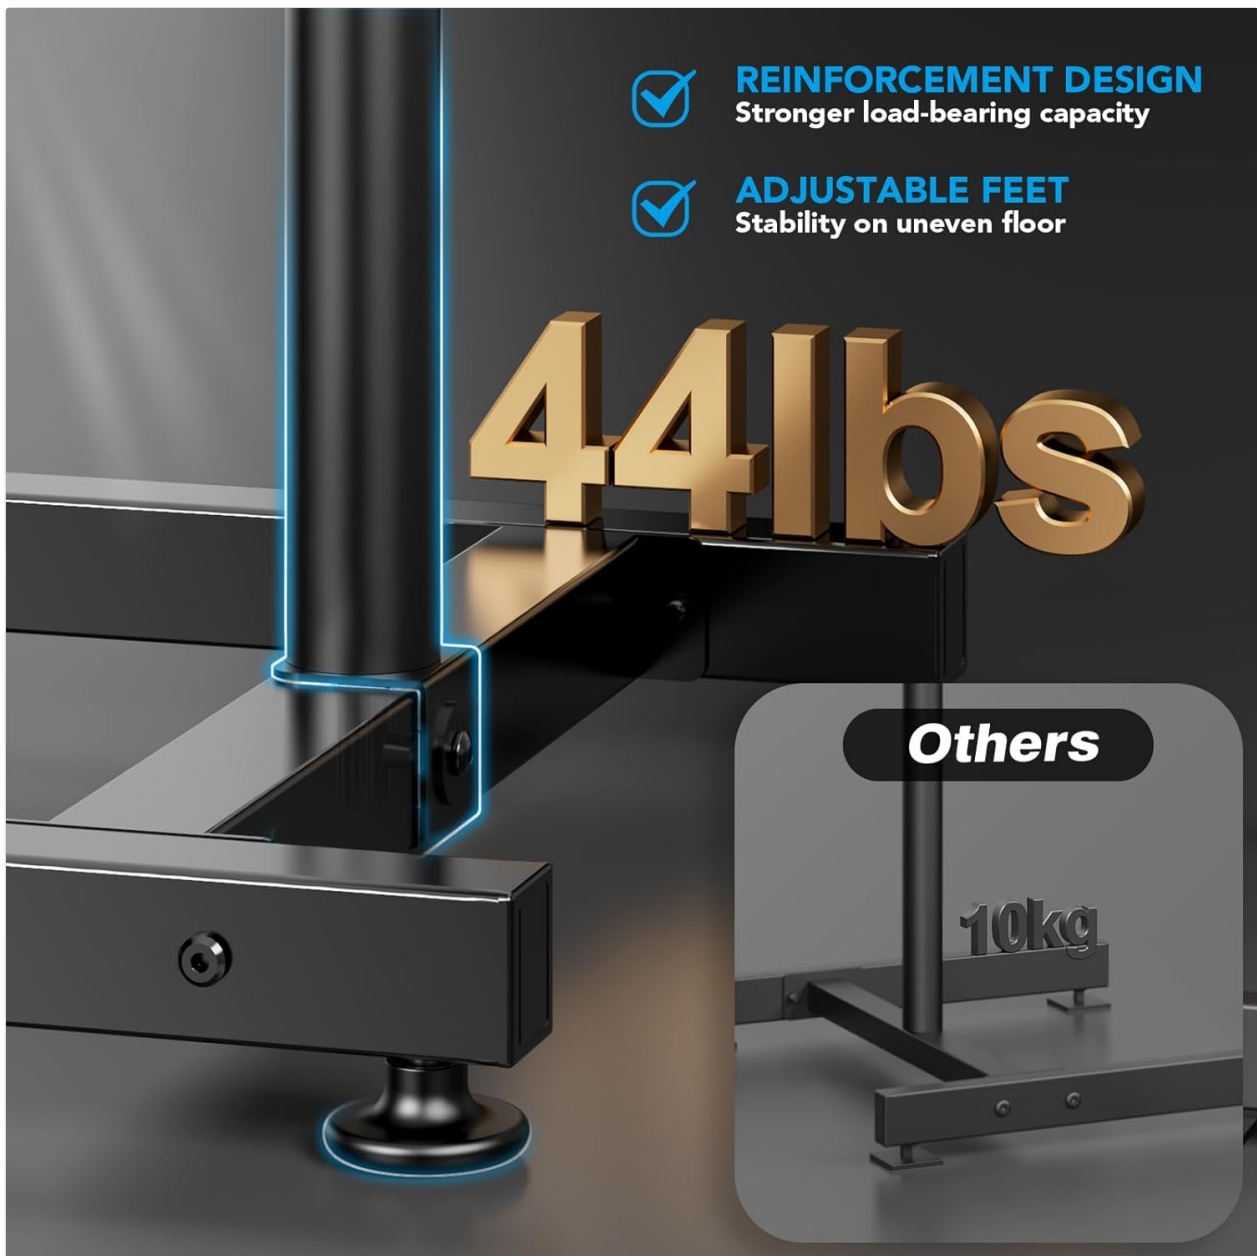


Figure 3: Reinforced base design with adjustable feet for stability.

4.2 Attach TV Mounting Plate to TV

4. Identify your TV's VESA mounting holes on the back.
5. Select the appropriate screws, washers, and spacers from the hardware kit that match your TV's VESA pattern and depth.
6. Carefully attach the TV mounting plate to the back of your TV. Ensure the plate is centered and all screws are tightened securely. **Do not overtighten.**

4.3 Mount TV to Stand

7. With assistance, carefully lift the TV with the attached mounting plate and hook it onto the vertical support pole's bracket.
8. Secure the TV to the stand using the safety screws or locking mechanisms provided. Ensure the TV is firmly seated and cannot be accidentally dislodged.



Figure 4: Rear view illustrating the mounted TV and cable management options.

4.4 Cable Management

Use the provided cable management ties to neatly route and secure TV cables along the vertical support pole. This helps maintain a tidy appearance and prevents accidental disconnections or tripping hazards.



Figure 5: Close-up of cable management ties and adjustable feet.

5. OPERATING INSTRUCTIONS

5.1 Height Adjustment

The stand offers 8 levels of height adjustment, ranging from 35 to 45 inches. To adjust the height, loosen the locking mechanism on the vertical support pole, carefully raise or lower the TV to the desired height, and then securely tighten the locking mechanism. Always ensure the TV is stable after adjustment.

8 LEVELS HEIGHT ADJUSTMENT



Figure 6: Illustration of the stand's height adjustment capability.

5.2 Tilt Adjustment

The TV mounting plate allows for a tilt angle adjustment from -10° (downward) to $+10^{\circ}$ (upward). Loosen the tilt adjustment knobs or screws on the mounting plate, adjust the TV to your preferred viewing angle, and then securely tighten the knobs/screws to lock the position.



Figure 7: Visual guide for adjusting the TV's tilt angle.

5.3 Horizontal Rotation (Landscape/Portrait)

The TV can be rotated horizontally from 0° to 90°, allowing for both landscape and portrait viewing orientations. To rotate, ensure the TV is securely mounted and carefully rotate the screen to the desired orientation. Some models may require loosening a locking screw before rotation and tightening it afterward.

Switch between landscape & portrait screens



Figure 8: Demonstrating the landscape to portrait rotation feature.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the stand. Avoid abrasive cleaners or solvents that may damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Damage:** If any part of the stand becomes damaged, discontinue use immediately and contact customer support for replacement parts or advice.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Stand is unstable or wobbles.	Uneven floor surface; loose connections; overloaded.	Adjust the leveling feet; check and tighten all screws; ensure TV weight is within limits.
TV does not fit the mounting plate.	Incorrect VESA pattern; TV too large/heavy.	Verify your TV's VESA pattern against specifications; ensure TV size and weight are compatible.
Cannot adjust height/tilt/rotation.	Locking mechanisms are too tight or not loosened.	Ensure all relevant locking screws or knobs are sufficiently loosened before attempting adjustment.

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your AX WABER Floor TV Monitor Stand AX01WG02, please refer to the purchase documentation or contact AX WABER customer service directly. Contact details can typically be found on the product packaging or the official AX WABER website.

Please have your model number (AX01WG02) and purchase date ready when contacting support.