

[Manuals.plus](#) /

› [Arafuna](#) /

› Arafuna Portable CD Player with Bluetooth 5.2 and FM Transmitter (Model CD525B)

Arafuna CD525B

Arafuna Portable CD Player Instruction Manual

Model: CD525B

INTRODUCTION

Thank you for purchasing the Arafuna Portable CD Player, Model CD525B. This device offers versatile audio playback options, including CD, MP3, and MicroSD, along with modern connectivity features like Bluetooth 5.2 and an FM transmitter. It is designed for ease of use and portability, featuring a built-in rechargeable battery and anti-skip protection. Please read this manual carefully to ensure proper operation and to fully utilize all functions.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Arafuna Portable CD Player (Model CD525B)
- 1 x USB Type-C Charging Cable
- 1 x Wired Earphones
- 1 x User Manual

PRODUCT OVERVIEW

The Arafuna Portable CD Player is a compact and feature-rich audio device. Key features include:

- **Bluetooth 5.2 Transmission:** Connect wirelessly to Bluetooth headphones or speakers.
- **FM Transmitter:** Broadcast audio to your car radio or other FM receivers. Supports frequencies: 79.3 MHz, 88.5 MHz, 93.6 MHz, 101.9 MHz, 107.1 MHz.
- **Built-in Dual Speakers:** Enjoy audio directly from the device without external speakers or headphones.
- **2000mAh Rechargeable Battery:** Provides approximately 10 hours of playback on a full charge.
- **AUX Output:** Connect to external audio systems via a 3.5mm audio cable.
- **Dual Headphone Output:** Share your audio experience with another person.
- **MicroSD Card Support:** Play MP3/WMA files from a MicroSD card (up to 32GB, FAT32 format).
- **Recording Function:** Record CD audio directly to a MicroSD card.
- **7 EQ Sound Effects:** Choose from NOR, BBS, POP, ROC, JAZZ, CLAS, COV.

- **Multiple Playback Modes:** Single track repeat, all track repeat, random, intro play, resume, program play.
- **Anti-Skip Protection (ASP):** 60 seconds for CD, 120 seconds for MP3.
- **HOLD Function:** Prevents accidental button presses.



Image: Top view of the Arafuna Portable CD Player, showing the display and control buttons.

SETUP

1. Charging the Battery

The device has a built-in 2000mAh rechargeable battery. Before first use, fully charge the player.

1. Connect the supplied USB Type-C cable to the DCIN 5V port on the CD player.
2. Connect the other end of the USB cable to a compatible power source (e.g., AC adapter DC5V/1A, PC, power bank).
3. The charging indicator light will be red during charging.
4. Once fully charged (approximately 3-4 hours), the indicator light will turn green.

大容量の2000mAhバッテリー内蔵

ご自宅内に限らず、屋外などの電源が確保できない場所でも自由に利用できる！

2000mAh

充電時間：約 3-4 時間



モバイルバッテリー



車載充電



ACアダプター (DC5V/1A)



PC/パソコン

Image: Illustration showing the CD player being charged via USB-C, with indicators for charging status and compatible power sources like power banks, car chargers, AC adapters, and PCs.

2. Inserting a CD

1. Gently slide open the CD compartment cover.
2. Place the CD onto the center spindle with the label side facing up.
3. Press the center of the CD until it clicks into place.
4. Close the CD compartment cover firmly.

Note: This player supports CD, CDR, MP3, HDCD, and WMA formats. DVD, VCD, Blu-ray CDs, and data CDs are not supported.

3. Inserting a MicroSD Card

1. Locate the MicroSD card slot on the side of the player.
2. Insert the MicroSD card (up to 32GB, FAT32 format) into the slot until it clicks.
3. To remove, gently push the card in again until it springs out.

1. Basic Playback

1. Turn on the player by sliding the **POWER** switch to the **ON** position.
2. Insert a CD or MicroSD card. The player will automatically detect the media.
3. Press the **PLAY/PAUSE** button to start playback.
4. Press **PLAY/PAUSE** again to pause.
5. Use the **PREVIOUS** and **NEXT** buttons to skip tracks.
6. Press and hold **PREVIOUS** or **NEXT** to fast forward or rewind.
7. Adjust volume using the **VOL+** and **VOL-** buttons.

2. Bluetooth Connection

Connect the CD player to Bluetooth headphones or speakers.

1. Ensure your Bluetooth headphones or speaker are in pairing mode.
2. On the CD player, press the **BT** button, then press **PLAY/PAUSE** to activate Bluetooth mode. The display will show "BT Search".
3. Press **PLAY/PAUSE** again to confirm the device you wish to connect to. The BT icon will flash during search.
4. Use the **PREVIOUS** and **NEXT** buttons to select the desired device from the list.
5. Once paired, the BT icon will stop flashing. Press **PLAY/PAUSE** to start playback.
6. To exit Bluetooth mode, long press the **BT** button.

Bluetooth5.2 送信機能搭載

Bluetoothスピーカーやイヤホンと 接続してワイヤレスでCD再生できます。



Image: Diagram illustrating how to connect the CD player to Bluetooth headphones or speakers.

3. FM Transmitter Function

Transmit audio from the CD player to an FM radio, such as a car radio.

1. Press the **PROG/FM TX** button to enter FM transmission mode.
2. Short press the **PROG/FM TX** button to manually set the channel.
3. Use the **PREVIOUS** and **NEXT** buttons to select one of the supported FM frequencies: 79.3 MHz, 88.5 MHz, 93.6 MHz, 101.9 MHz, 107.1 MHz.
4. Tune your car radio or other FM receiving device to the same frequency.

FMトランスミッター機能



AUX出力機能



Image: The CD player transmitting audio to a car radio via FM, and connected to an external speaker via AUX cable.

4. AUX Output Connection

Connect the CD player to external audio devices like home theater systems, sound centers, or car audio systems.

1. Connect one end of the supplied AUX cable to the AUX output port on the CD player.
2. Connect the other end to the 3.5mm audio input jack of your external audio device.
3. Ensure the external device is set to its AUX input mode.

5. Dual Headphone Output

The player features two 3.5mm headphone jacks, allowing two users to listen simultaneously.

1. Plug your wired headphones into either of the two headphone jacks.
2. The first headphone port supports wired control for play/pause, volume adjustment, and track skipping.



Image: Two individuals sharing audio from the CD player using dual wired headphones.

6. Recording to MicroSD Card

Record audio from a CD directly to a MicroSD card.

1. Ensure a FAT32 formatted MicroSD card (up to 32GB) is inserted into the player.
2. Start playing the CD you wish to record.
3. Long press the **EQ/REC** button to begin recording.
4. Long press **EQ/REC** again to stop recording. The recorded audio will be saved as a file on the MicroSD card.

Note: If no TF card is inserted, the display will show "No device".

7. Playback Modes and EQ Settings

The player offers various playback modes and equalizer settings to customize your listening experience.

- **Playback Modes:** Press the **MODE** button to cycle through:
 - Normal Play (NOR)
 - Single Track Repeat (REP1)
 - All Track Repeat (A)
 - Random Play (RND)
 - Intro Play (INT)
 - Resume Play
 - Program Play (PROG)
- **EQ Sound Effects:** Short press the **EQ/REC** button to select from: NOR, BBS, POP, ROC, JAZZ, CLAS, COV.

再生モード:

- ≡ 順番再生 (NOR)
- 🔁 一曲リピート(REP1)
- 🔁 全曲リピート(A)
- 🎲 ランダム再生 (RND)
- ⏮️ イントロ再生(INT)
- ⌚ レジューム再生
- 📺 プログラム再生 (PROG)

対応フォーマット:

- 📀 CD,
- 📀 CDR,
- 📀 MP3,
- 📀 HDCD,
- 📀 FAT32GBの MicroSDカード

7つEQ音響効果:

NOR、BBS、POP、
ROC、JAZZ、CLAS、COV



注: DVD、VCD、Blu-ray CDとデータCDが対応不可

Image: A child giving a thumbs up, with text describing various playback modes and 7 EQ sound effects available on the CD player.

8. HOLD Function

The HOLD switch prevents accidental button presses during transport or when the device is in a pocket or bag.

- Slide the **HOLD** switch to the ON position to disable all buttons.
- Slide the **HOLD** switch to the OFF position to enable button functionality.

MAINTENANCE

- Keep the CD player clean by wiping it with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents.
- Clean the optical lens periodically with a specialized CD lens cleaner to ensure optimal playback.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not expose the device to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted. HOLD switch is ON.	Charge the battery. Slide the HOLD switch to OFF.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly. Unsupported disc format.	Clean the CD. Reinsert the CD correctly. Ensure the disc is a supported format (CD, CDR, MP3, HDCD, WMA).
No sound from speakers/headphones.	Volume is too low. Headphones/speakers not connected properly. Bluetooth not paired.	Increase volume. Check connections. Re-pair Bluetooth device.
Cannot connect via Bluetooth.	Bluetooth device not in pairing mode. Player not in Bluetooth mode.	Ensure external device is discoverable. Activate Bluetooth mode on the player.
FM transmitter not working.	Incorrect frequency selected. FM radio not tuned to the same frequency.	Select a supported FM frequency. Tune your FM radio to match.
Cannot record to MicroSD.	MicroSD card not inserted or not FAT32 format. Card full.	Insert a FAT32 formatted MicroSD card. Check card capacity.

SPECIFICATIONS

Brand	Arafuna
Model Name	CD525B
Color	Black
Connectivity Technology	AUX, Bluetooth, Wired Headphones
Special Features	Bluetooth, CD-R/RW compatible, FM Transmitter, Equalizer, Rechargeable
Supported Audio Formats	MP3, WMA
Connector Type	3.5mm Jack
Media Format Type	Audio CD
Battery Average Life	10 Hours
Compatible Devices	Speakers, Headphones
Headphone Jack	3.5mm Jack
Item Dimensions (L x W x H)	14 x 14 x 2.6 cm
Item Weight	0.26 Kilograms
Included Components	1 * USB Type-C Charging Cable, 1 * CD Player Unit, 1 * Wired Earphones, 1 * Instruction Manual
Country of Origin	China

WARRANTY AND SUPPORT

Arafuna provides a 1-year warranty and after-sales service for this product. If you encounter any issues or have questions, please contact us through your Amazon account:

1. Go to "Your Account"
2. Select "Your Orders"
3. Find your order for this product.
4. Click on "Sold by Ara Inc"
5. Click "Ask a question".

We are committed to providing full support.