

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VIVOHOME](#) /

› [VIVOHOME Water Distiller and Stand Mixer Instruction Manual](#)

VIVOHOME B0FJ8FPQFT

VIVOHOME Water Distiller and Stand Mixer Instruction Manual

Model: B0FJ8FPQFT

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your VIVOHOME Water Distiller and VIVOHOME Stand Mixer. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

VIVOHOME WATER DISTILLER

Product Overview



Image: The VIVOHOME Water Distiller unit with its collection bottle, ready for use.

Components

- Distiller Main Unit (900W)
- Water Collection Bottle (1.6 Gallon / 6L, BPA-free plastic)
- Power Cord
- Charcoal Filter
- Cleaning Agent (Citric Acid Sachet)

Safe, Durable Materials



Image: Detailed view of the distiller's internal components, highlighting the food-grade 304 stainless steel and BPA-free plastic collection bottle.

Setup

1. Unpack all components and ensure they are intact.
2. Wash the collection bottle and the distiller's interior with mild soap and water before first use. Rinse thoroughly.
3. Place the distiller on a stable, flat, heat-resistant surface.
4. Fill the distiller's boiling chamber with tap water, ensuring it does not exceed the maximum fill line.
5. Attach the collection bottle to the distiller's spout.
6. Insert the charcoal filter into the designated slot in the collection bottle's lid (optional, depending on water quality).
7. Connect the power cord to the distiller and then to a grounded electrical outlet.

Operating Instructions

Efficient Distillation at 1.3L/H

Produces clean water anywhere, anytime



900W

High Power

6L

Capacity

1.3L/H



Image: Diagram showing the efficient distillation process, where water is heated, vaporized, and then condensed into clean water at a rate of 1.3 liters per hour.

1. Ensure the distiller is properly set up and filled with water.
2. Press the ON/OFF switch to start the distillation process. The indicator light will illuminate.
3. The distiller will heat the water to boiling, producing steam. The steam rises, leaving impurities behind.
4. The steam then condenses back into liquid water in the cooling coil and drips into the collection bottle.
5. The distillation process will automatically shut off when the water in the boiling chamber is depleted or if the unit overheats.
6. Once the process is complete, unplug the unit and allow it to cool completely before handling or refilling.
7. **Important:** The first two batches of distilled water are not safe to drink and should be discarded. A peculiar smell may be present during initial uses; this will dissipate with subsequent use.

Maintenance

- **Regular Cleaning:** Clean the distiller after every two uses to prevent scale buildup. Unplug the unit and allow it to cool. Discard any remaining water.

- **Descaling:** To remove mineral buildup, use the included citric acid sachet or white vinegar.
 - Pour the cleaning agent into the boiling chamber.
 - Fill with water to cover the scale.
 - Let it soak for several hours or overnight.
 - Scrub with a non-abrasive brush if necessary.
 - Rinse thoroughly multiple times to remove all cleaning agent residue.
- **Charcoal Filter Replacement:** If using, replace the charcoal filter once a week to maintain optimal water taste and purity.

Troubleshooting (Water Distiller)

Problem	Possible Cause	Solution
Distiller does not turn on.	No power, faulty switch.	Check power connection. Ensure switch is pressed firmly.
Water has a peculiar smell/taste.	First few batches, old charcoal filter, unit not cleaned.	Discard first two batches. Replace charcoal filter. Clean the unit thoroughly.
Slow distillation rate.	Scale buildup.	Descale the boiling chamber as per maintenance instructions.

Specifications (Water Distiller)

- Power: 900 W
- Capacity: 1.6 Gallon / 6 L
- Distillation Rate: 1.3 L/hour
- Material: Food-grade 304 Stainless Steel (interior), BPA-free plastic (collection bottle)

VIVOHOME STAND MIXER

Product Overview



Image: The VIVOHOME Stand Mixer shown with its stainless steel bowl and various attachments: whisk, flat beater, and dough hook.

Components

- Mixer Main Unit (380W motor)
- Stainless Steel Mixing Bowl (4.75 Quart)
- Dough Hook
- Flat Beater
- Wire Whisk
- Splash Guard

Setup

1. Place the mixer on a dry, stable, and flat surface.
2. Ensure the mixer is unplugged before attaching or removing parts.
3. **Attaching the Mixing Bowl:** Place the mixing bowl onto the base and turn clockwise until it locks into place.

4. Attaching an Accessory:

- a. Press the tilt-head release button and lift the motor head.
- b. Insert the desired attachment (dough hook, flat beater, or whisk) into the accessory shaft.
- c. Rotate the attachment counter-clockwise until it locks into place.
- d. Lower the motor head until it locks securely.

5. Attaching the Splash Guard: Slide the splash guard onto the motor head from the front, ensuring it covers the bowl opening.

Operating Instructions



Image: Close-up of the VIVOHOME Stand Mixer's 8-speed control dial, featuring an LED power indicator to assist in selecting the appropriate speed for various tasks.

1. Ensure the mixer is properly assembled with the desired attachment and bowl.
2. Add ingredients to the mixing bowl.
3. Plug the mixer into a grounded electrical outlet.

4. Turn the speed control dial to the desired setting (0-8). The LED indicator will light up.

- **Speeds 1-2:** For heavy mixtures (e.g., bread dough, heavy batters). Use dough hook.
- **Speeds 3-4:** For medium-heavy mixtures (e.g., cake batters, cookie dough). Use flat beater.
- **Speeds 5-6:** For light mixtures (e.g., creams, eggs, light batters). Use wire whisk.
- **Speeds 7-8:** For whipping and aerating (e.g., egg whites, meringues). Use wire whisk.
- **"P" (Pulse) Setting:** For short bursts of power.

5. When finished, turn the speed dial to "0" and unplug the mixer.

6. Press the tilt-head release button to lift the motor head and remove the attachment and bowl.

Maintenance

- **Cleaning the Main Unit:** Wipe the exterior of the mixer with a damp cloth. Do not immerse the motor unit in water.
- **Cleaning Attachments and Bowl:** The stainless steel mixing bowl, dough hook, flat beater, and wire whisk are dishwasher safe or can be washed by hand with warm, soapy water. Rinse and dry thoroughly.
- **Storage:** Store the mixer and its accessories in a clean, dry place.

Troubleshooting (Stand Mixer)

Problem	Possible Cause	Solution
Mixer does not turn on.	No power, not properly plugged in, motor head not locked.	Check power connection. Ensure motor head is fully lowered and locked.
Attachments not fitting correctly.	Incorrect attachment, not rotated fully.	Ensure you are using the correct attachment for the task. Rotate attachment counter-clockwise until it clicks into place.
Mixer stops during operation.	Overload protection activated.	Turn off and unplug the mixer. Reduce the load in the bowl. Allow the motor to cool for 10-15 minutes before restarting.

Specifications (Stand Mixer)

- Motor Power: 380 W
- Speed Settings: 8 speeds + Pulse function
- Bowl Capacity: 4.75 Quart
- Material: Food-grade Stainless Steel (bowl), ABS housing
- Noise Level: ≤ 76dB

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact VIVOHOME customer service directly. Please have your model number (B0FJ8FPQFT) and purchase date available when contacting support.

